 
 



B96-700-00 ENGINE

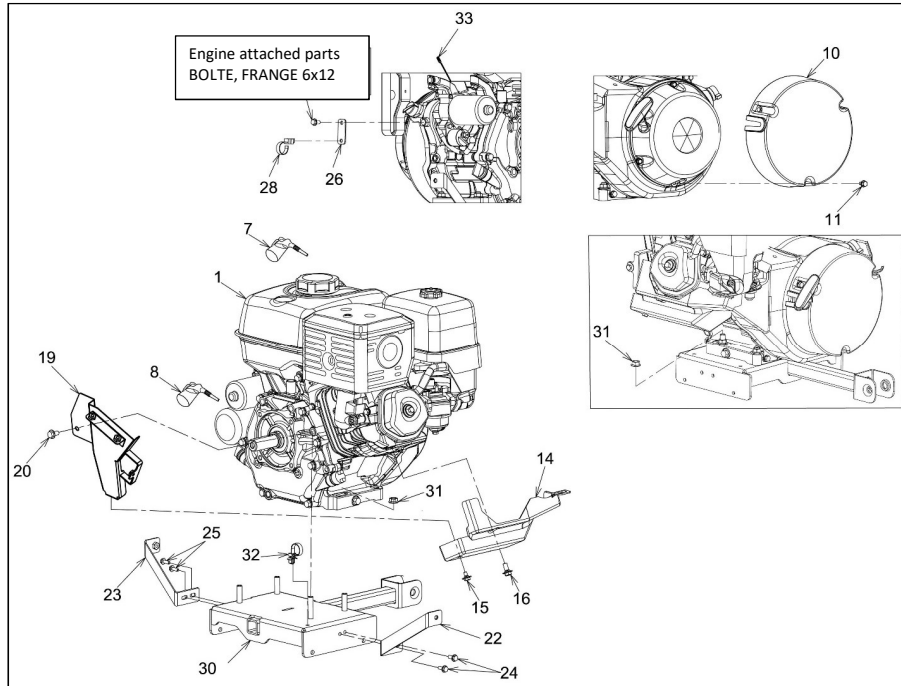


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	01002-B96-000	ENGINE, GX390T2-SWDH	1		
2	-				
3	-				
4	-				
5	-				
6	-				
7	91911-02	GASOLINE	1.6		
8	91921-05306	OIL, GASOLINE ENGINE 5W30	1.2		
9	-				
10	02901-B96-030	COVER, RECOIL	1		
11	48911-B96-000	BOLT, SPECIAL 6X9S	3		
12	-				
13	-				
14	02902-B96-000	COVER A, ENGINE	1		
15	48905-B96-000	BOLT, SPECIAL 6X9	1		
16	48912-B96-000	BOLT, SPECIAL 8X14	1		
17	08908-B96-000	COLLER, 6X1.6	1		
18	-				
19	08500-B96-050	COVER B COMP, ENGINE	1		
20	93100-0801617	BOLT, FRANGE 8X16	1		
21	-				
22	02700-B96-801	STAY L COMP, COVER	1		
23	02800-B96-803	STAY R COMP, COVER	1		
24	93100-0601617	BOLT, FRANGE 6X16	2		
25	93100-0601617	BOLT, FRANGE 6X16	2		
26	08905-B96-800	STAY, HARNESS	1		
27	-				
28	91314-11765	STRAP, CABLE 1-1765	2		
29	-				
30	03100-B96-801	BASE COMP, ENGINE	1		
31	94006-10410	NUT, FRANGE 10X1.25	5		
32	91314-119P7	STRAP, CABLE 1-19P7	2		
33	91382-0500801	CORRUGATE, 5X80	1		

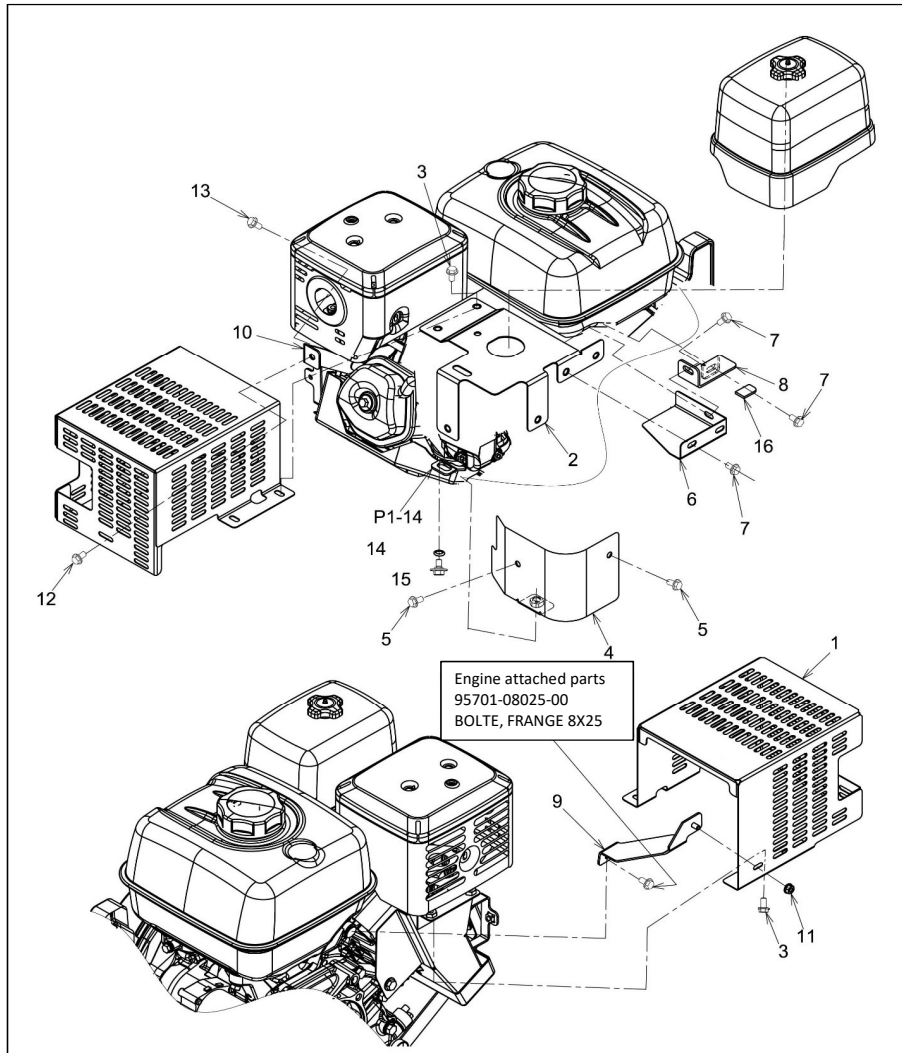


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	04100-B96-800	COVER COMP, MUFFLER	1		
2	04200-B96-800	BASE COMP, ENGINE COVER	1		
3	93100-0601217	BOLT, FRANGE 6X12	4		
4	04300-B96-800	COVER COMP, AIR	1		
5	93100-0601217	BOLT, FRANGE 6X12	2		
6	04901-B96-800	COVER, UNDER	1		
7	93100-0601217	BOLT, FRANGE 6X12	3		
8	04901-B96-800	STAY, JOINT	1		
9	04400-B96-800	STAY A COMP, MUFFLER COVER	1		
10	04500-B96-800	STAY B COMP, MUFFLER COVER	1		
11	94002-06410	NUT, FRANGE 6	1		
12	93100-0601217	BOLT, FRANGE 6X12	1		
13	91273-6012313	BOLT, SCREW 6X12	1		
14	08908-B96-000	COLLER, 6X1.6	1		
15	48905-B96-000	BOLT, SPECIAL 6X9	1		
16	89901-H09-000	RUBBER, 12X40	1		

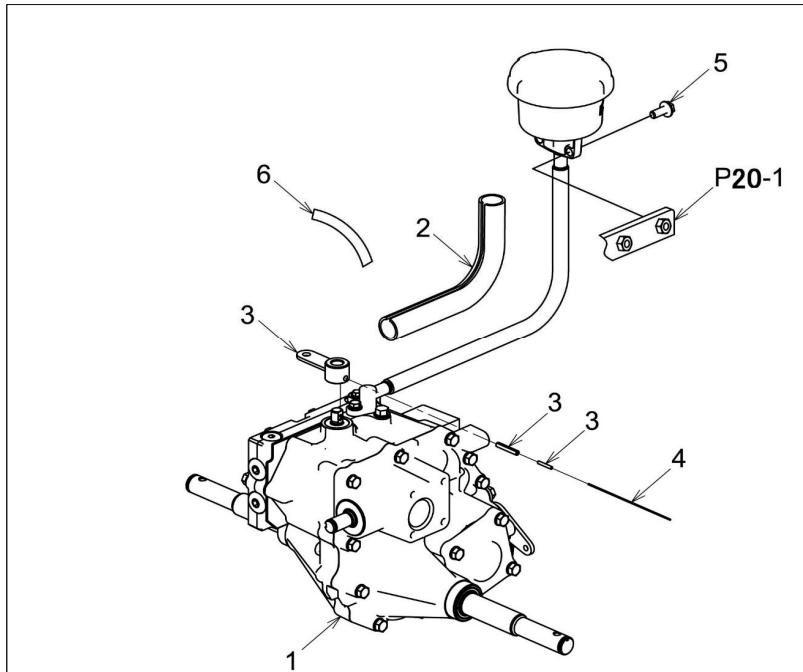 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	10001-B90-002	MISSION, SB-10SCS	1		
2	91382-2204001	CORRUGATE, 22X400	1		
3	10002-B90-000	LEVER KIT, HST	1		
4	75913-B18-000	WIRE, SPECIAL 1.2X100	1		
5	93100-0802017	BOLT, FRANGE 8X20	2		
6	91310-300	BAND, PRT3S	1		

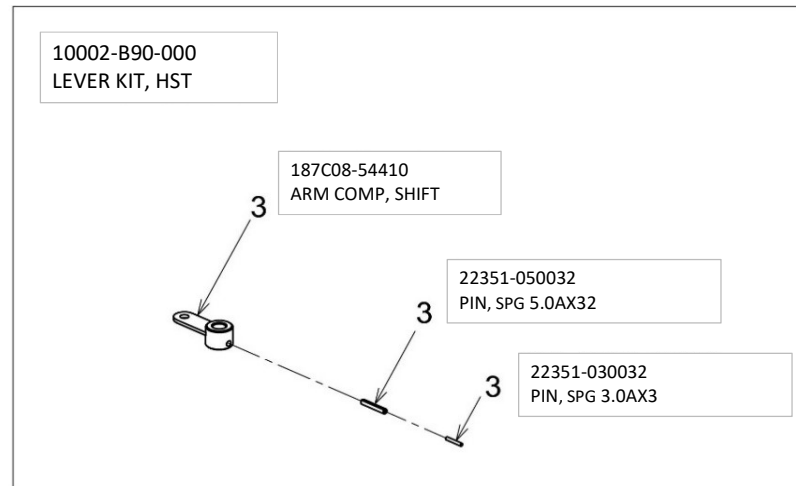 


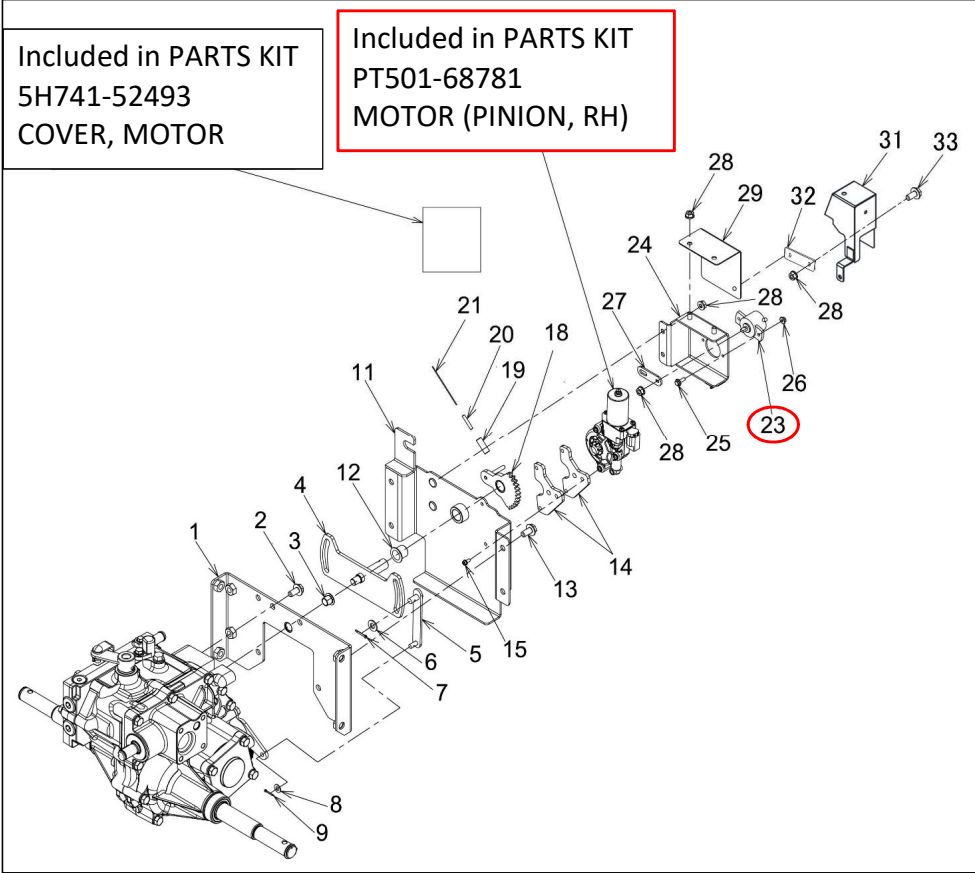 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	12100-B96-830	BASE COMP, MISSION	1		
2	93100-0801617	BOLT, FRANGE 8X16	9		
3	91644-101080	BUSH, 80F-1010	1		
4	12200-B96-700	ARM COMP, SEESAW	1		
5	12400-B96-002	ARM COMP, BRAKE	2		
6	94101-08010	WASHER, PLAIN 8	2		
7	94210-25150	PIN, SPLIT 2.5X15	2		
8	94101-06010	WASHER, PLAIN 6	2		
9	94210-20120	PIN, SPLIT 2X12	2		
11	12300-B96-830	BRACKET COMP, MOTER	1		
12	91644-151580	BUSH, 80F-1515	1		
14	33909-B96-802	SPACER B	2		
15	91274-0502011	BOLT, SPECIAL 5X20	3		
16	-				
17	-				
18	12600-B96-803	GEAR COMP	1		
19	94319-60025	PIN, SPG 6X25	1		
20	94319-35025	PIN, SPG 3.5X25	1		
21	75913-B18-000	WIRE, SPECIAL 1.2X100	1		
23	83100-B89-001	SENSOR, ANGLE PRA211	1	B	
24	12700-B96-831	BRACKET COMP, SENSOR	1		
25	83902-B89-000	BOLT, SPECIAL 4X12	2		
26	94002-04410	NUT, FRANGE 4	2		
27	89301-B96-800	STAY, SIDE CLUTCH	1		
28	94002-06410	NUT, FRANGE 6	5		
29	18901-B96-830	COVER, SIDE CLUTCH	1		
30	94002-06410	NUT, FRANGE 6	2		
31	18400-B96-800	COVER COMP, MOTOR	1		
32	18902-B96-800	STAY	1		
33	93100-0601217	BOLT, FRANGE 6X12	2		
	PT501-68781	MOTOR (PINION, RH)	1	B	

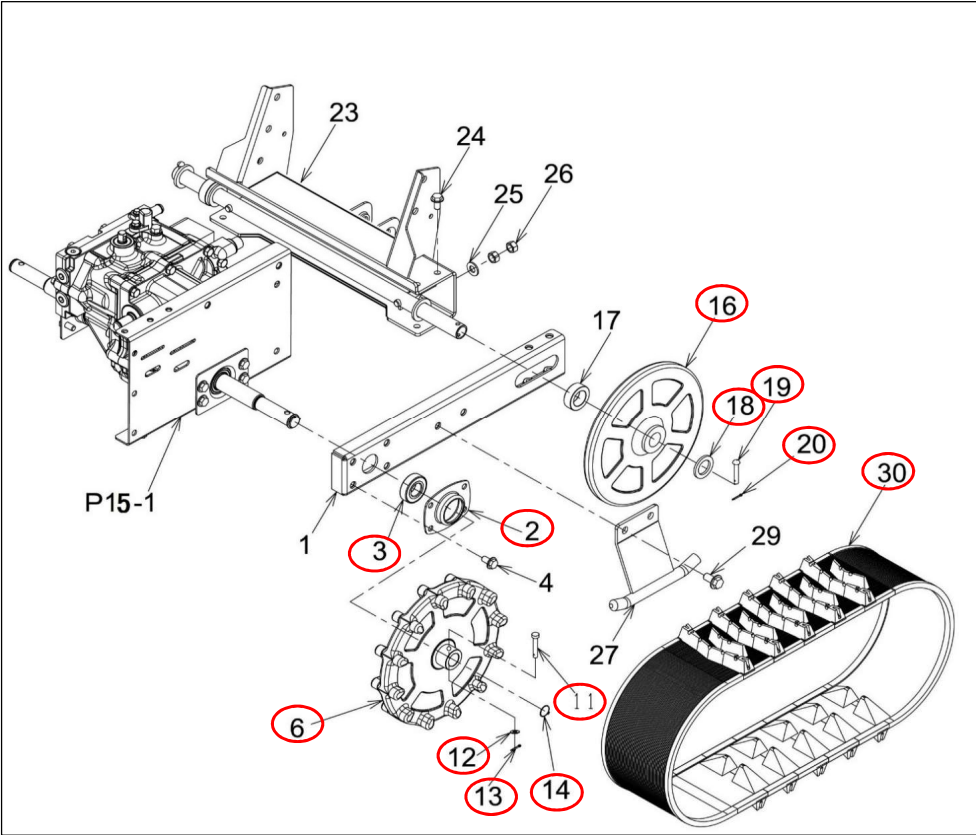 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	21100-B96-803	FRAME COMP, CRAWLER	2		
2	22902-B96-000	CASE, BEARING 6004	2	B	
3	96105-06004	BEARING, 6004UU	2	B	
4	93100-0801617	BOLT, FRANGE 8X16	8		
6	22600-B96-001	SPROCKET COMP, CRAWLER	2	C	
11	26901-B96-002	PIN, DRIVE	2	A	
12	94101-06010	WASHER, PLAIN 6	2	A	
13	94210-20120	PIN SPLIT, 2X12	2	A	
14	94510-20080	CIRCLIP, EX 20	2		
16	22901-B96-000	WHEEL, REAR	2	D	
17	22905-B96-800	COLLER, 24X13	2		
18	91251-2235321	WASHER, RD 22X35X3.2	2	B	
19	94330-0603510	PIN, 6X35	2	B	
20	94210-20120	PIN, SPLIT 2X12	2	A	
22	21400-B96-830	SHAFT COMP, REAR	1		
23	23500-B96-801	FRAME COMP, REAR	1		
24	93100-0801617	BOLT, FRANGE 8X16	8		
25	94101-10010	WASHER, PLAIN 10	2		
26	94005-10412	NUT, SPECIAL 10X1.25	4		
27	22100-B96-800	GUIDE L COMP, CRAWLER	1		
28	22200-B96-800	GUIDE R COMP, CRAWLER	1		
29	93300-1002017	BOLT, FRANGE 10X1.25X20	4		
30	L6161-26151	CRAWLER(130-59X23)	2	C	

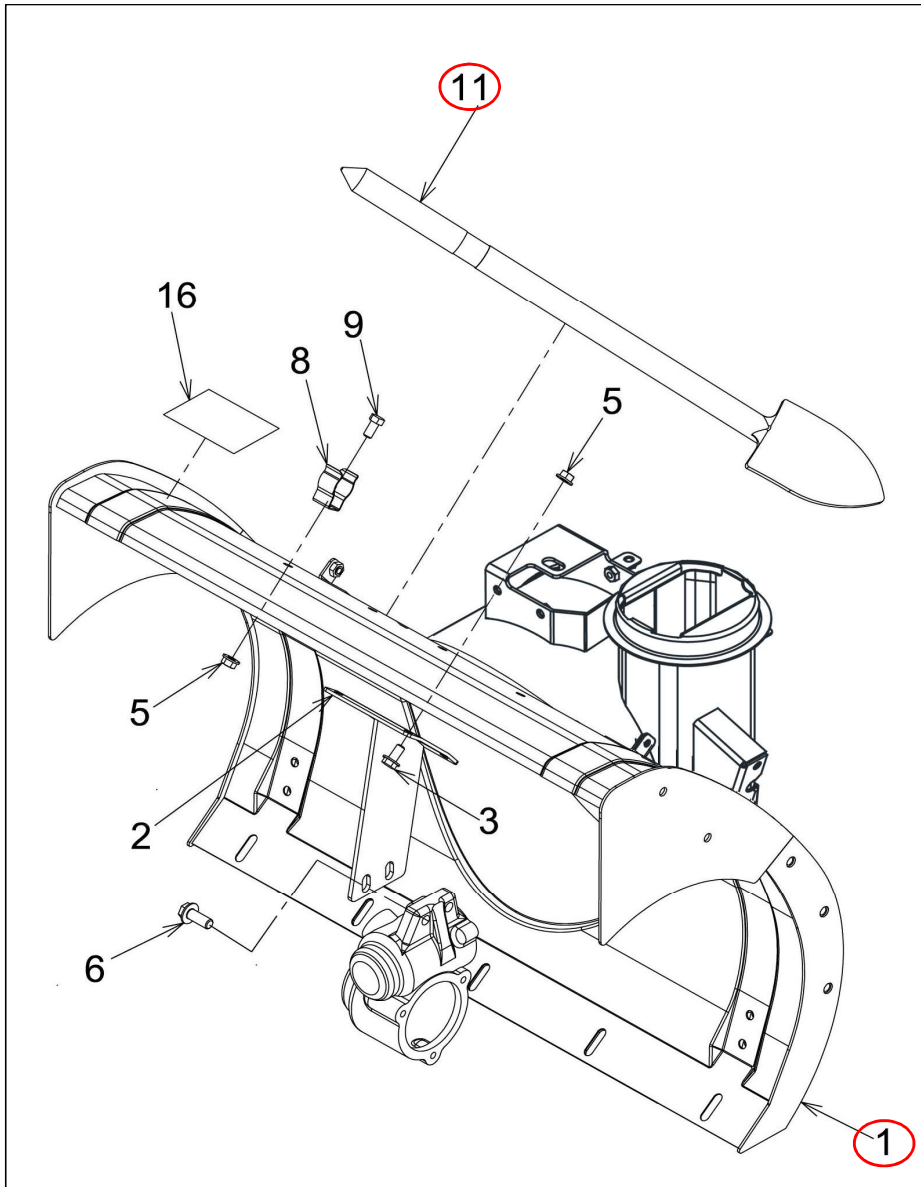 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	32100-B96-002	HOUSING COMP, AUGER	1	D	
2	31200-B96-800	SUPPORT COMP, GEAR CASE	1		
3	93100-0801617	BOLT, FRANGE 8X16	4		
5	94002-08410	NUT, FRANGE 8	6		
6	93300-1002517	BOLT, FRANGE 10X1.25X25	2		
7	-				
8	39902-A65-001	METAL, LOCK	2		
9	92200-0801617	BOLT, 8X16	2		
11	39901-B51-001	BAR, SNOW DROP	1	C	
16	1N3390-92670	LABEL DANGER, HOUSING(AUGER	1		

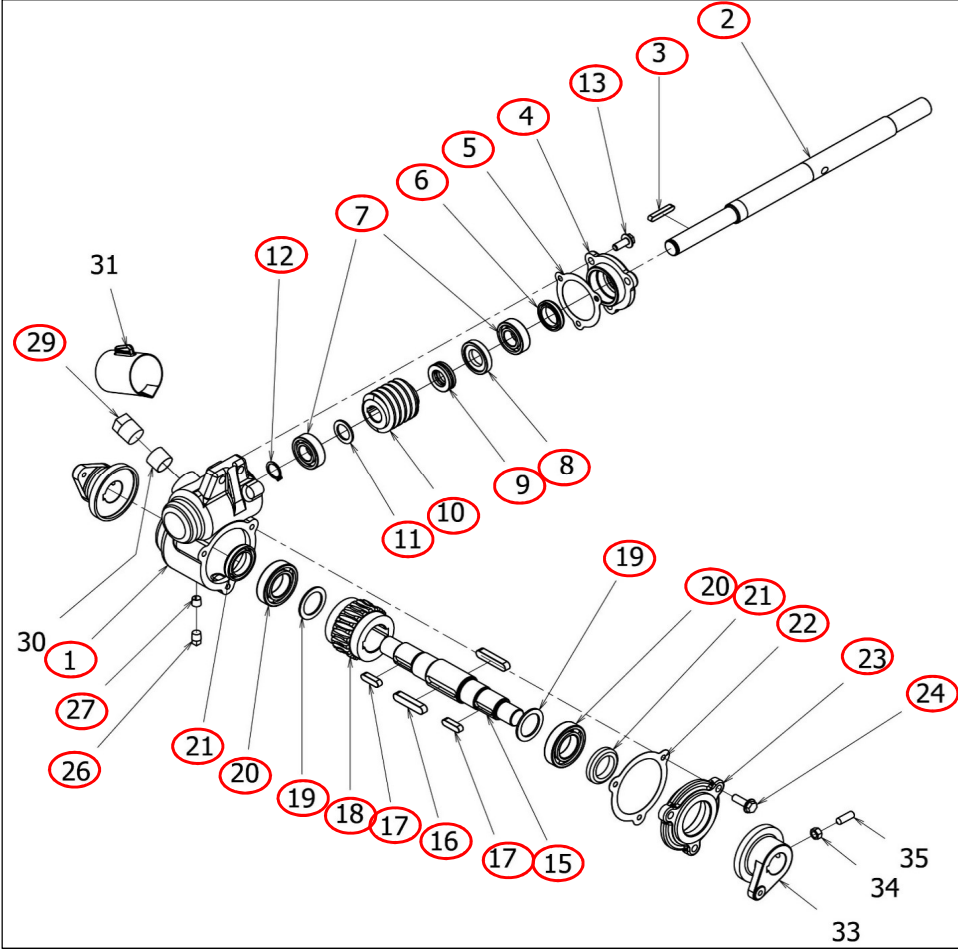 

No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	34901-B01-700	CASE, AUGER GEAR	1	C	
2	34901-B96-700	SHAFT, BLOWER	1	C	
3	97113-038241	KEY, 6X6X38RR	1	B	
4	31904-A31-701	COVER A, AUGER GEAR CASE	1	B	
5	39901-A31-002	PACKING A	1	B	
6	98251-2503807	SEAL, D25387	1	B	
7	96100-06004	BEARING, 6004	2	B	
8	32904-A31-001	COLLER, THRUST	1	B	
9	96200-051104	BEARING, 51104	1	A	
10	73251-V15-F002	GEAR, DRIVE	1	B	
11	91912-A05-001	WASHER, RD 20X30X2	1	B	
12	94510-20080	CIRCLIP, EX 20	1	B	
13	93100-0802017	BOLT, FRANGE 8X20	3	C	
15	34902-B96-000	SHAFT, AUGER	1	C	
16	97116-048241	KEY, 10X8X48R	2	B	
17	97115-028241	KEY, 8X7X28RR	2	B	
18	32902-A90-000	WORM WHEEL, M3X20	1	B	
19	91302-A31-100	WASHER, RD 30X42X2	2	B	
20	96100-06006	BEARING, 6006	2	B	
21	98251-3004508	SEAL, D30458	2	B	
22	39902-A31-002	PACKING B	1	B	
23	31905-A31-700	COVER B, AUGER GEAR CASE	1	B	
24	93100-0802517	BOLT, FRANGE 8X25	3	C	
26	91555-0141	PLUG, PT1/8	1	A	
27	91941-050	TAPE, 50	1	B	
29	91555-0641	PLUG, PT3/4	1	A	
30	91941-150	TAPE, 150	1		

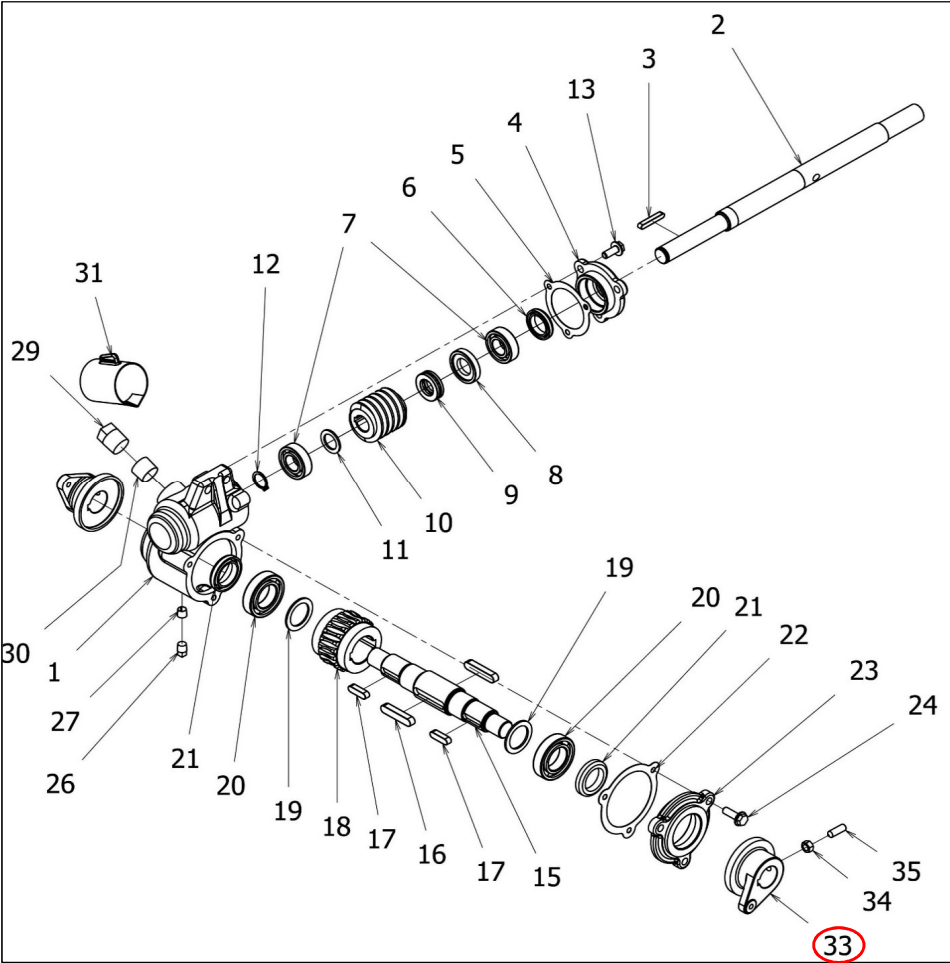 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
31	91931-090	OIL, GEAR #90	0.2		
33	35901-B96-800	FRANGE ,AUGER SHARE	2	A	
34	94003-08412	NUT, SPECIAL 8	2		
35	91221-082540	BOLT, SPECIAL 8X25	2		

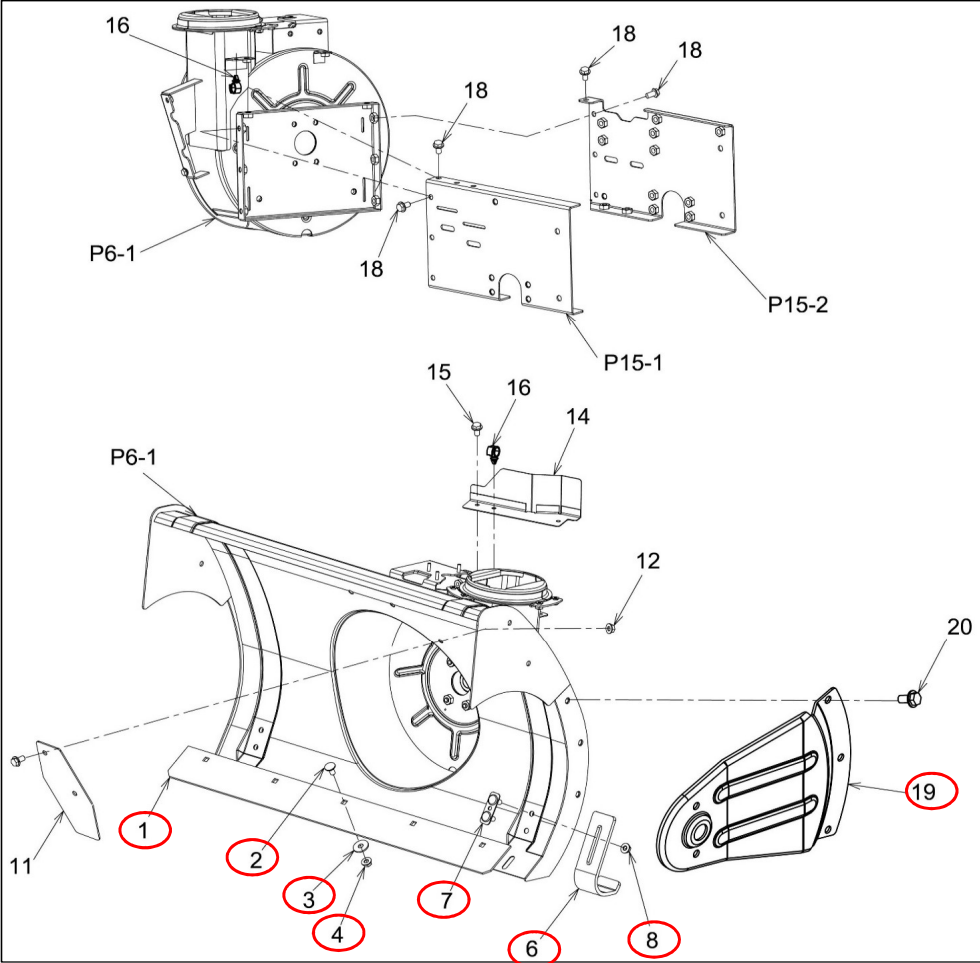 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	31903-B96-801	EDGE	1	A	
2	92600-0801614	BOLT, SPECIAL8X16	5	A	
3	94101-08015	WASHER, PLAIN 8	5	A	
4	94002-08410	NUT, FRANGE 8	5	A	
5	-				
6	31906-B96-800	SKID	2	A	
7	31300-B96-800	BOLT COMP, SLEDGE	2	A	
8	94002-08410	NUT, FRANGE 8	4	A	
9	-				
10	31909-B96-801	PLATE	1		
11	93100-0801617	BOLT, FRANGE 8X16	2		
12	94002-08410	NUT, FRANGE 8	2		
13	-				
14	65600-B96-801	COVER COMP, BELT	1		
15	93100-0601217	BOLT, FRANGE 8X12	2		
16	91315-C4397	CLIP, CABLE C-4397	2		
17	-				
18	93100-0801617	BOLT, FRANGE 8X16	8		
19	31902-B96-000	SUPPORT, AUGER SIDE	1	C	
20	93100-0801617	BOLT, FRANGE 8X16	6		

B96-700-33 BLOWER

 
10/28

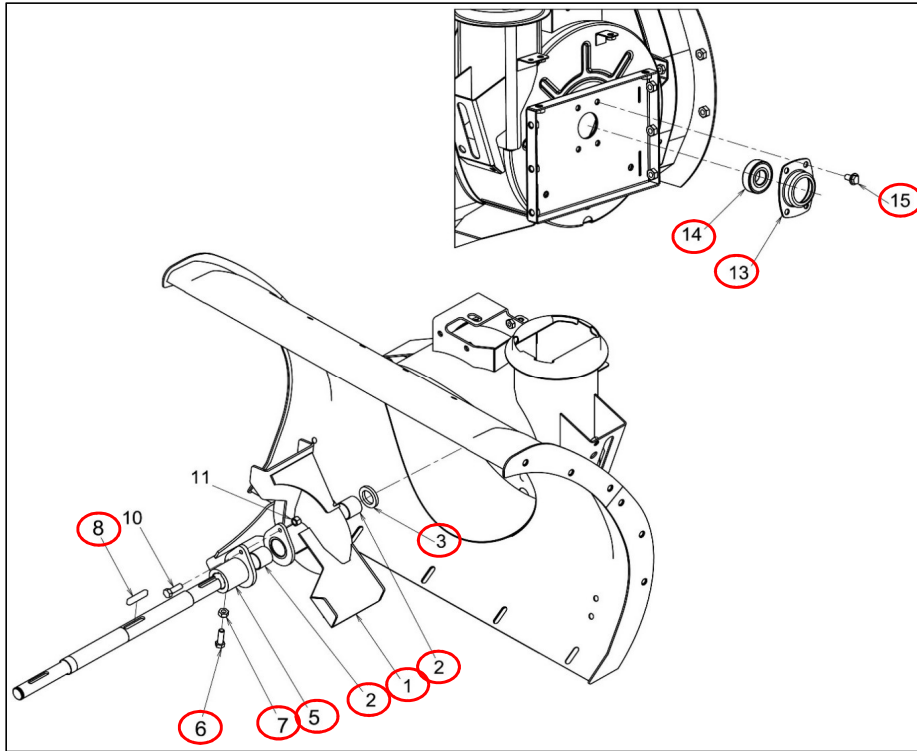


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	36100-B96-801	BLOWER COMP	1	D	
2	91646-2525R	BUSH, BM2525FS	2	C	
3	91251-2235451	WASHER, RD 22X35X4.5	1	D	
5	36300-B96-802	FRANGE COMP, BLOWER SHAER	1	C	
6	91212-0820147	BOLT, SPECIAL 8X20	1	C	
7	94003-08412	NUT, SPECIAL 8	1	C	
8	97114-040241	KEY, 7X7X40RR	1	B	
10	92200-0602517	BOLT, 6X25	1		
11	91234-064110	NUT, TOUGH LOCK 6	1		
13	25901-B01-000	CASE B, BEARING	1	B	
14	96105-06222	BEARING, 62/22UU	1	A	
15	93100-0801617	BOLT, FRANGE 8X16	4	C	

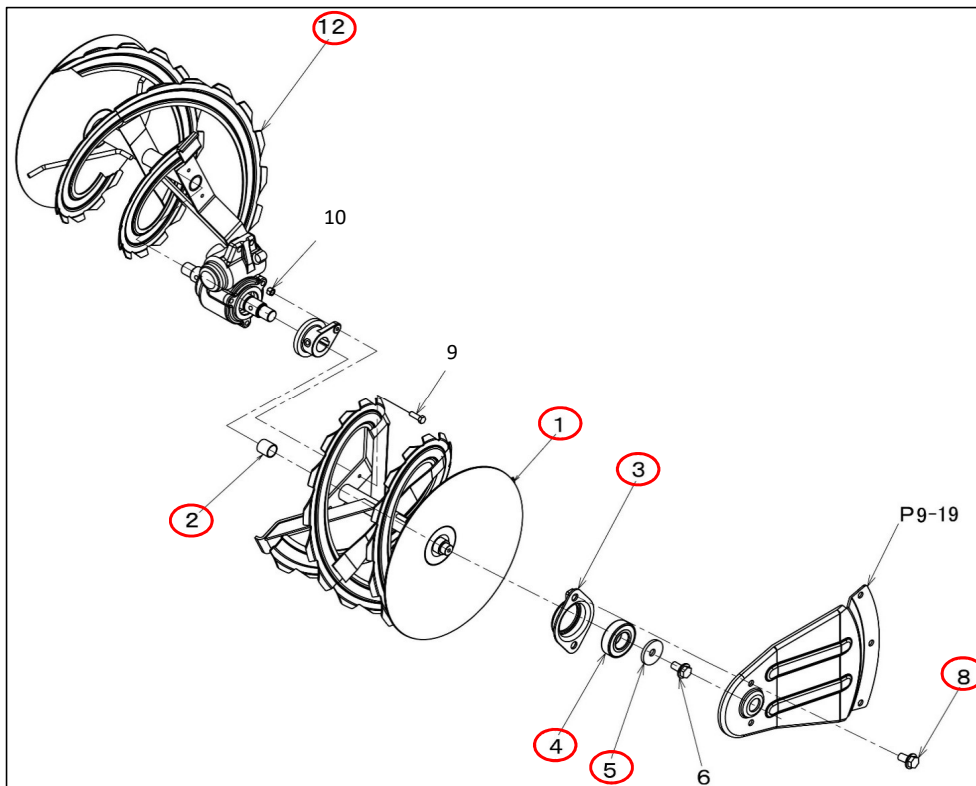 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	35300-B96-801	AUGER L COMP	1	C	
2	91646-2225R	BUSH, BM2225FS	2	C	
3	35400-B01-001	CASE A COMP, BEARING	2	B	
4	96105-06004	BEARING, 6004UU	2	B	
5	91251-0830321	WASHER, RD 8X30X3.2	2	B	
6	93100-0801617	BOLT, FRANGE 8X16	2		
7	-				
8	93100-0801617	BOLT, FRANGE 8X16	4	C	
9	92200-0602517	BOLT, 6X25	2		
10	91234-064110	NUT, TOUGH LOCK 8	2		
12	35400-B96-801	AUGER R COMP	1	C	

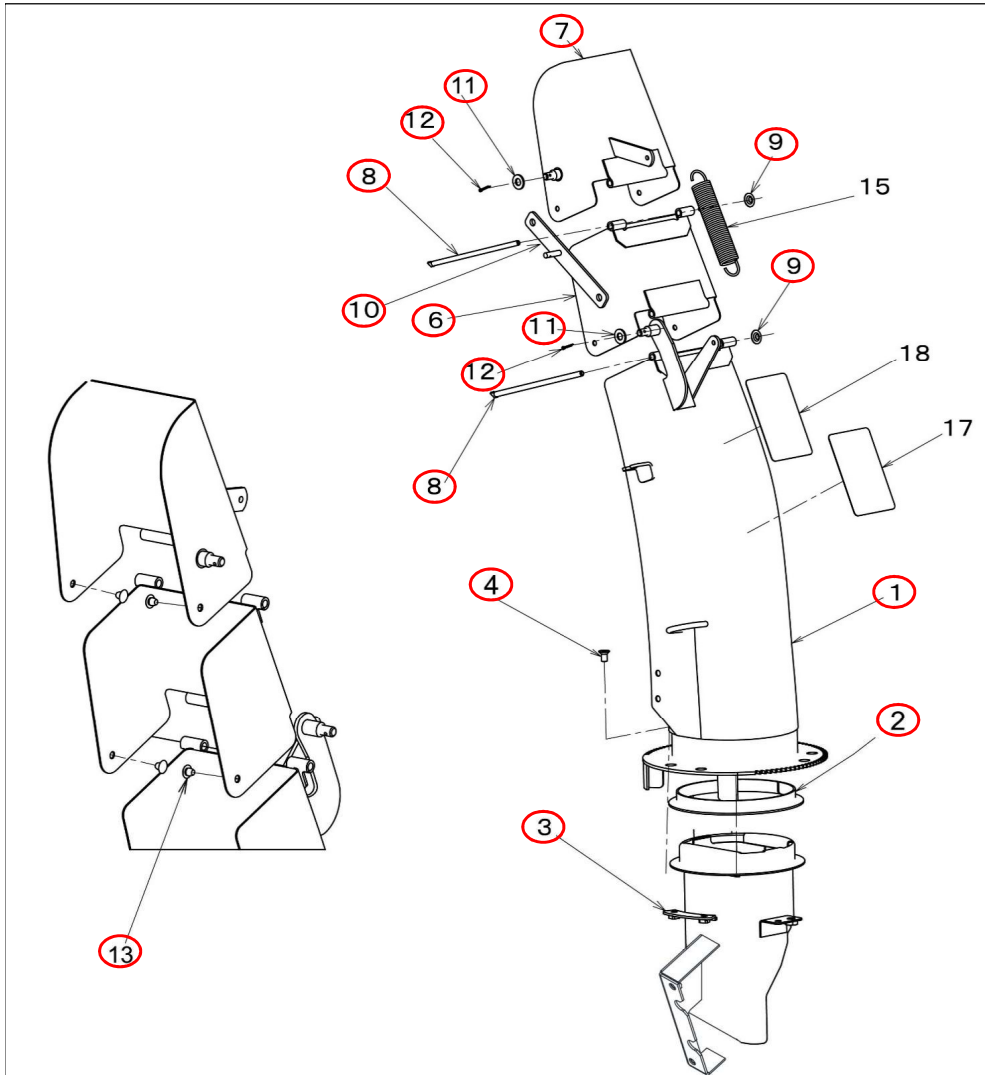 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	33100-B96-004	CHUTE COMP	1	C	
2	33903-B96-002	SHEET, CHUTE	1	B	
3	33600-B96-001	CLAMP COMP, CHUTE	3	B	
4	91217-0601274	SCREW 6X12	6	B	
5	-				
6	33200-B96-803	DEFLECTOR A COMP, CHUTE	1	C	
7	33300-B96-803	DEFLECTOR B COMP, CHUTE	1	C	
8	33906-B96-000	PIN, CHUTE	2	C	
9	91243-06000	NUT, PUSH 6	2	C	
10	37200-B96-830	LINK COMP, CHUTE	1	C	
11	94101-08010	WASHER, PLAIN 8	2	C	
12	94210-20120	PIN, SPLIT 2X12	2	A	
13	91361-0403	PLUG, HOLE 0403	4	C	
15	33904-B01-104	SPRING, COILED 19.7x127	1		
16	-				
17	1N3390-92690	LABEL DISCHARGE, WARNING	1		
18	1N3390-92680	LABEL CHUTE, WARNING	1		

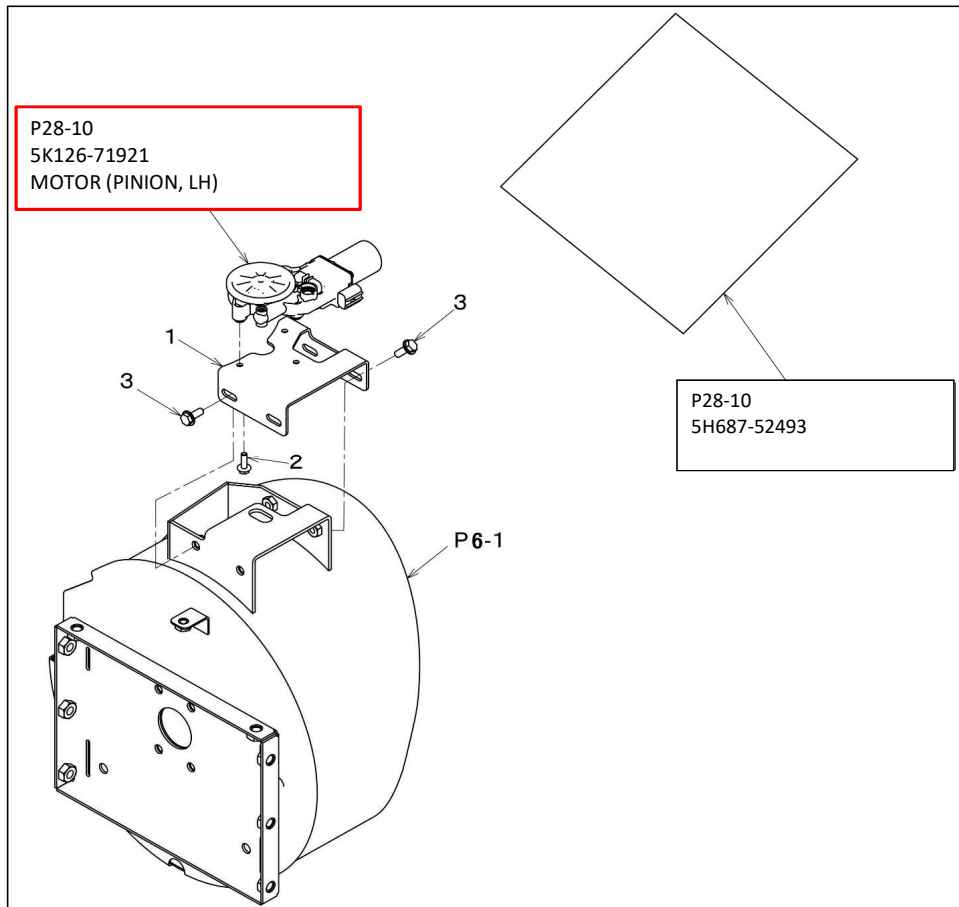 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	31901-B96-801	BRACKET COMP,MOTOR	1		
2	91274-0501612	BOLT, SPECIAL 5X16	3		
3	93100-0601617	BOLT, FRANGE 6X16	4		
4	-				
5	-				
	5K-126-71921	MOTOR (PINION, LH)	1	B	

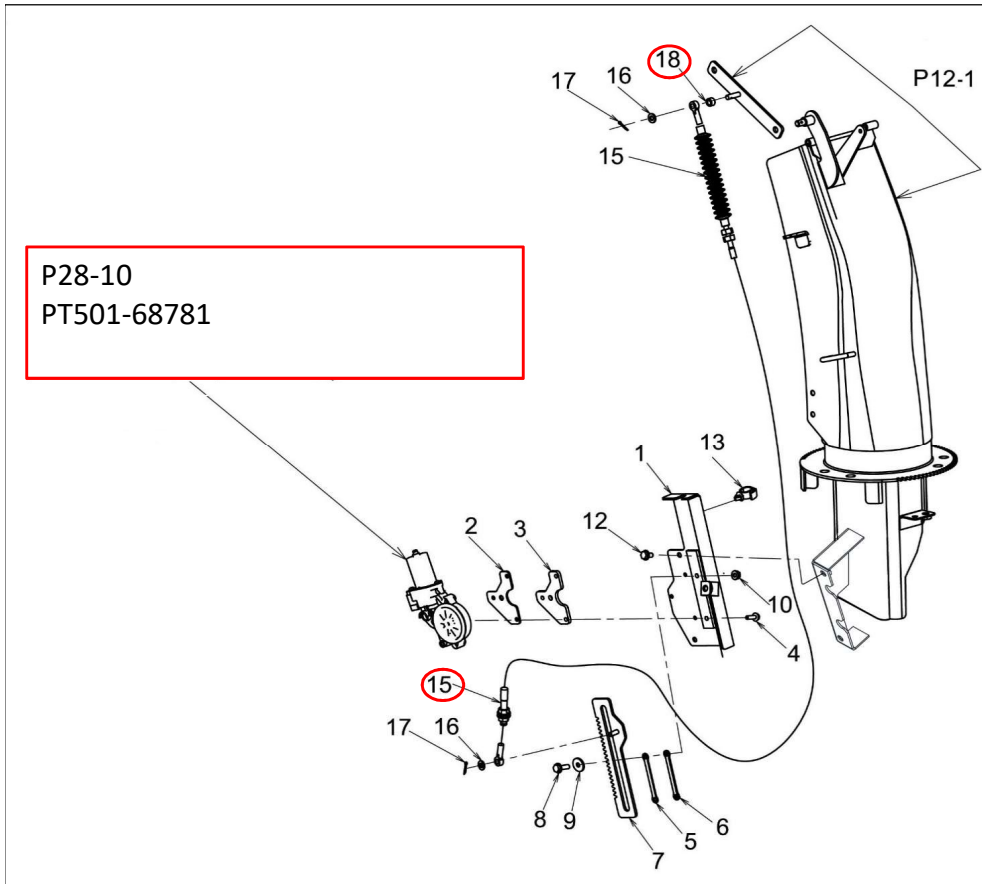 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	33400-B96-831	BLACKET A COMP, MOTOR	1		
2	33909-B96-802	SPACER B	1		
3	33908-B96-802	SPACER A	1		
4	91274-0501612	BOLT, SPECIAL 5X16	3		
5	31907-B96-801	PLATE A, STPPER	1		
6	31908-B96-801	PLATE B, STPPER	1		
7	33500-B96-830	RACK COMP, CHUTE	1		
8	93100-0602017	BOLT, FRANGE 6X20	2		
9	94101-06015	WASHER, PLAIN 6	2		
10	94002-06410	NUT, FRANGE 6	2		
11	-				
12	93100-0601617	BOLT, FRANGE 6X16	2		
13	91315-C4397	CLIP, CABLE C-4397	1		
15	77400-B96-000	WIRE, CHUTE	1	A	
16	94101-06010	WASHER PLAIN, 6	2		
17	94210-20120	PIN, SPLIT 2X12	2		
18	68903-B89-001	COLLER, 6X4.5	1	C	
	PT501-68781	MOTOR (PINION, RH)	1	B	

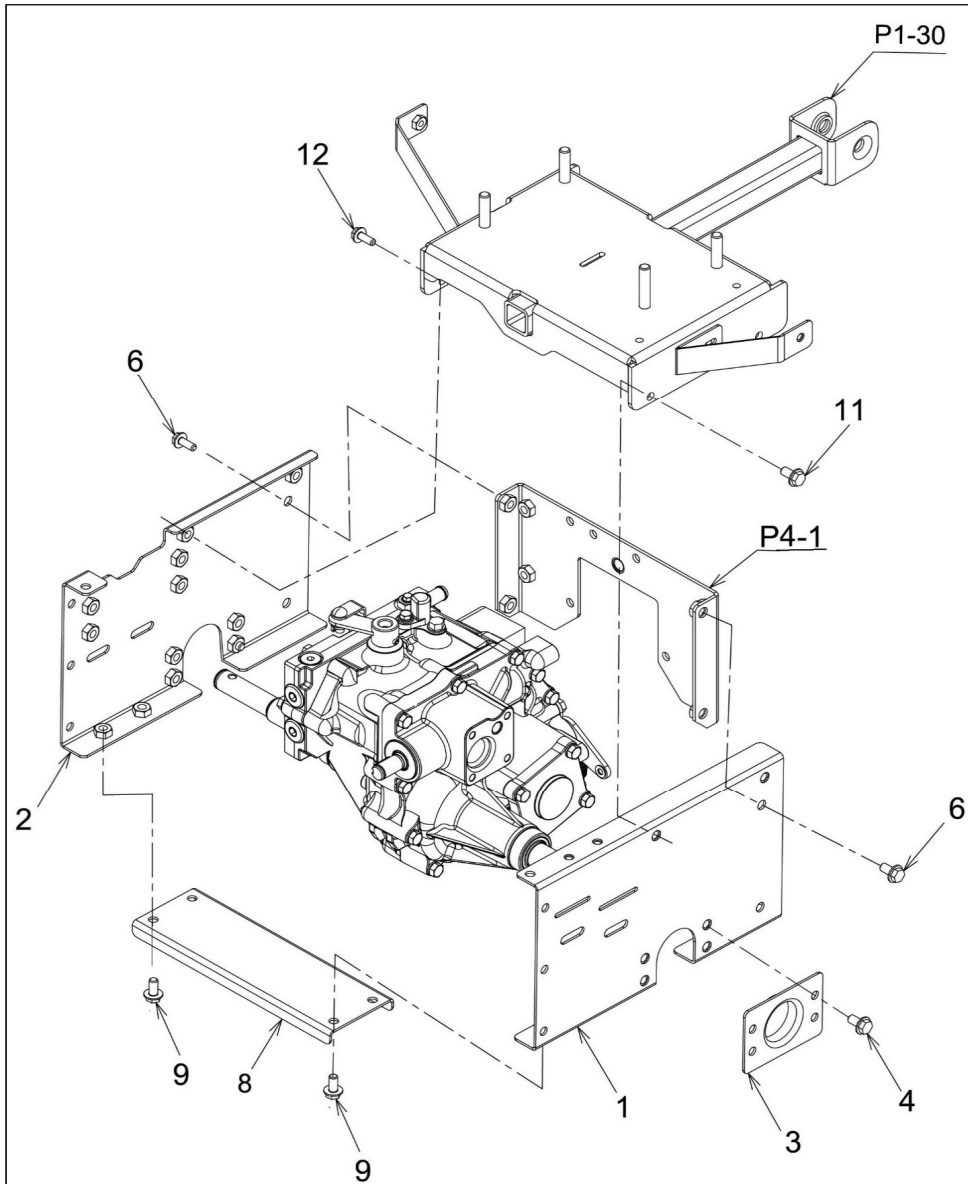 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	41100-B96-830	FRAME L COMP, MAIN	1		
2	41200-B96-830	FRAME R COMP, MAIN	1		
3	21901-B96-800	GUIDE, MISSION	2		
4	93100-0801617	BOLT, FRANGE 8X16	8		
6	93100-0801617	BOLT, FRANGE 8X16	4		
8	41901-B96-800	PLATE, UNDER	1		
9	93100-0801617	BOLT, FRANGE 8X16	4		
11	93100-0802017	BOLT, FRANGE 8X20	2		
12	93100-0802017	BOLT, FRANGE 8X20	2		

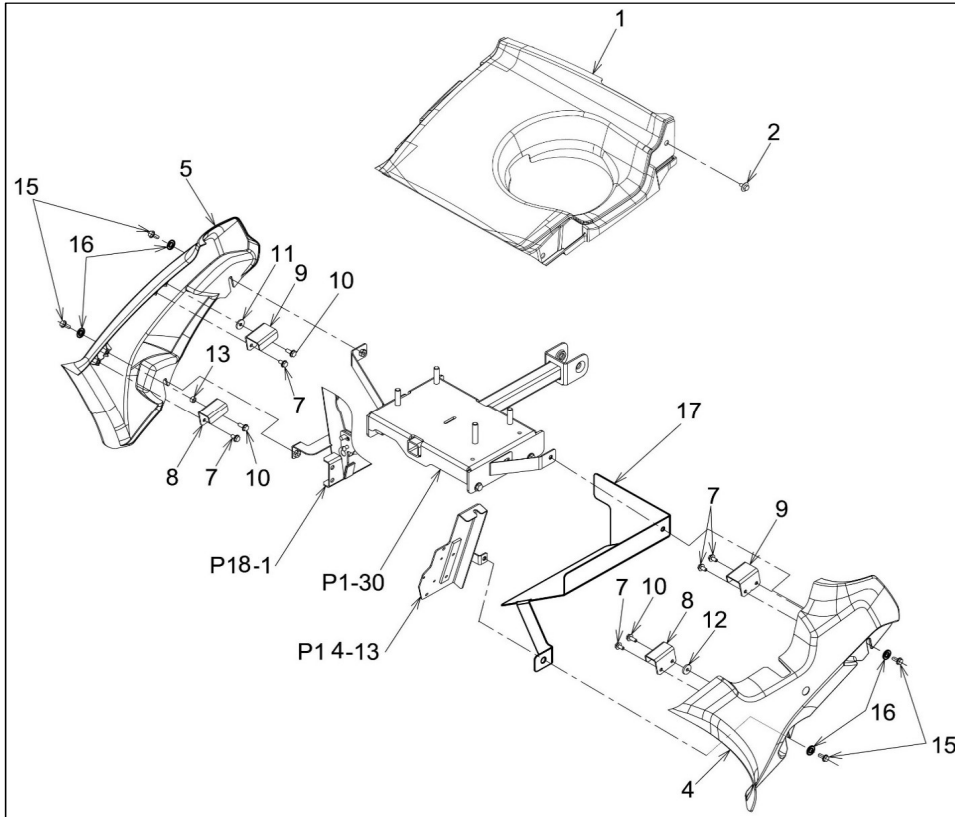 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	48903-B96-030	COVER CH, BODY	1		
2	48905-B96-000	BOLT, SPECIAL 6X9	4		
4	48500-B96-002	COVER L, BODY	1		
5	48600-B96-002	COVER R, BODY	1		
7	93100-0601217	BOLT, FRANGE 6X12	5		
8	48904-B96-801	FRONT HOOK, COVER	2		
9	48906-B96-801	REAR HOOK, COVER	2		
10	93100-0601617	BOLT, FRANGE 6X16	3		
11	91251-0620231	WASHER, RD6X20X2.3	1		
12	91251-0620321	WASHER, RD 6X20X3.2	1		
13	48909-B96-000	COLLER, 6X6	1		
14	-				
15	93100-0601617	BOLT, FRANGE 6X16	4		
16	94101-06015	WASHER, PLAIN 6	4		
17	04700-B96-800	COVER COMP, SIDE	1		

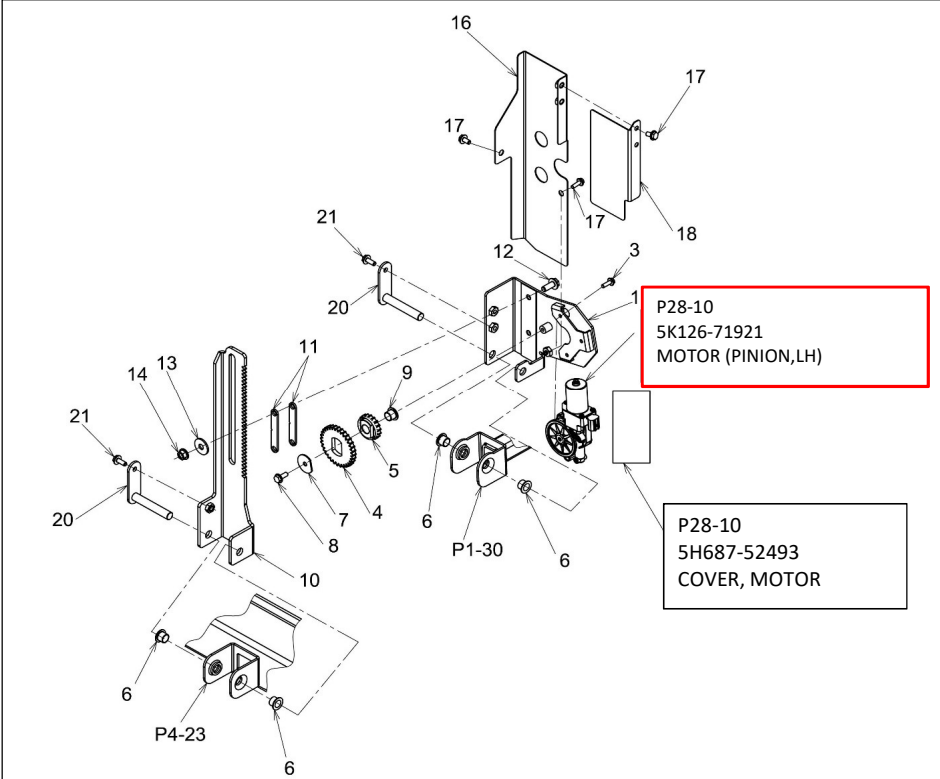 

No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	71300-B96-830	BLACKET B COMP, MOTOR	1		
3	91274-0501612	BOLT, SPECIAL 5X16	3		
4	33902-B56-002	GEAR, M2X32	1		
5	33903-B56-003	GEAR, M2X18	1		
6	91644-121080	BUSH, 80F-1210	4		
7	71903-B96-002	WASHER, SPECIAL 6.5X30	1		
8	93100-0601617	BOLT, FRANGE 6X16	1		
9	91644-121080	BUSH, 80F-1210	1		
10	71400-B96-850	RACK COMP, HEGHT	1		
11	71904-B96-830	PLATE, STOPPER	2		
12	93100-0802017	BOLT, FRANGE 8X20	2		
13	94101-08010	WASHER, PLAIN 8	2		
14	94002-08410	NUT, FRANGE 8	2		
15	91310-150	BAND, PRT1.5S	1		
16	72100-B96-850	COVER A COMP, MOTOR	1		
17	93100-0601217	BOLT, FRANGE 6X12	4		
18	72901-B96-850	COVER B COMP, MOTOR	1		
20	71500-B96-001	PIN COMP, LEVER 72	2		
21	93100-0601617	BOLT, FRANGE 6X16	2		
	5K-126-71921	MOTOR (PINION,LH)	1	B	

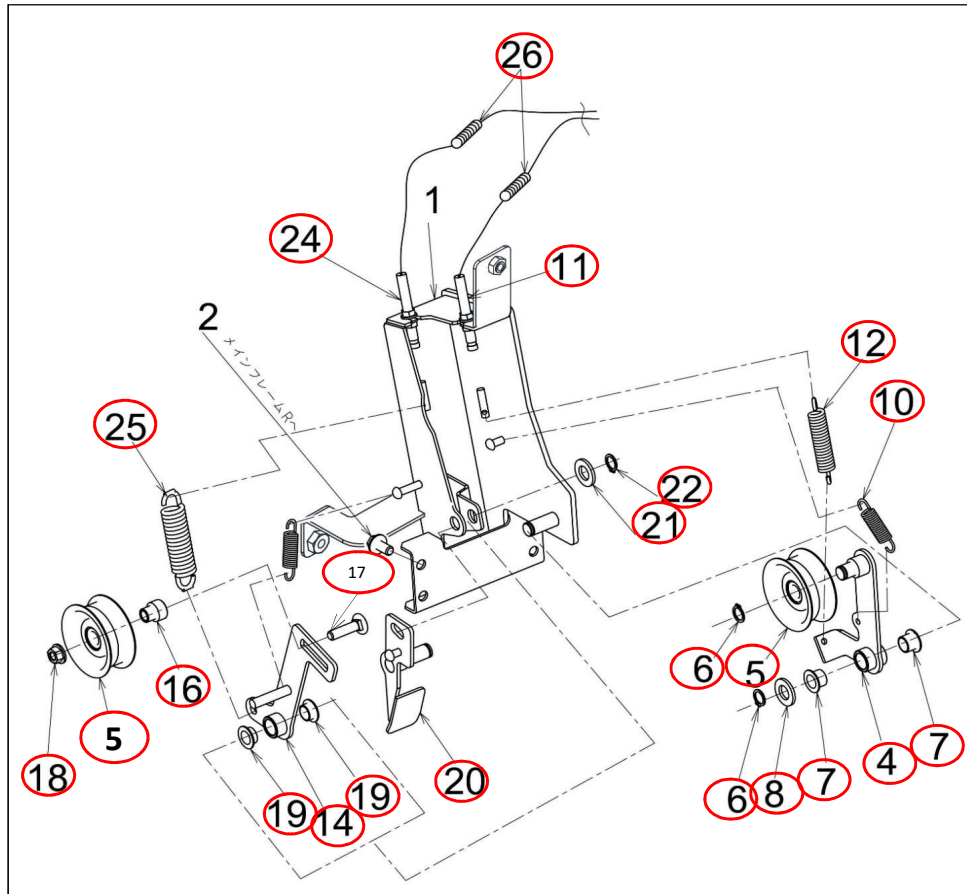 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	62300-B96-803	BRACKET COMP, ARM TENSION	1		
2	93100-0801617	BOLT, FRANGE 8X16	4		
3	-				
4	68200-B96-800	ARM, DRIVE CLUTCH	1	C	
5	91615-12552243	PULLEY ,TENSION 55TB1	2	B	
6	94510-12080	CIRCLIP, EX 12	2	B	
7	91644-121080	BUSH, 80F-1210	2	B	
8	94101-12010	WASHER, PLAIN 12	1	D	
9	-				
10	91603-B50-001	SPRING, COILED 10X50	2	C	
11	77100-B96-050	WIRE, DRIVE CLUTCH	1	A	
12	71906-B96-000	SPRING, DRIVE TENSION	1	B	
13	-				
14	68100-B96-800	ARM COMP, AUGER CLUTCH	1	C	
15	-				
16	66902-B96-001	COLLER, TENSION	1	D	
17	92600-0803014	BOLT, SPECIAL 8X30	1	D	
18	94002-08410	NUT, FRANGE 8	1	A	
19	91644-120680	BUSH, 80F-1206	2	B	
20	65700-B96-803	BLAKE COMP, BLOWER	1	C	
21	94101-12010	WASHER, PLAIN 12	1	D	
22	94510-12080	CIRCLIP, EX 12	1	B	
24	77200-B96-030	WIRE, AUGER CLUTCH	1	A	
25	71907-B96-000	SPRING, AUGER TENSION	1	B	
26	91382-0703001	CORRUGATE 7X300	2		

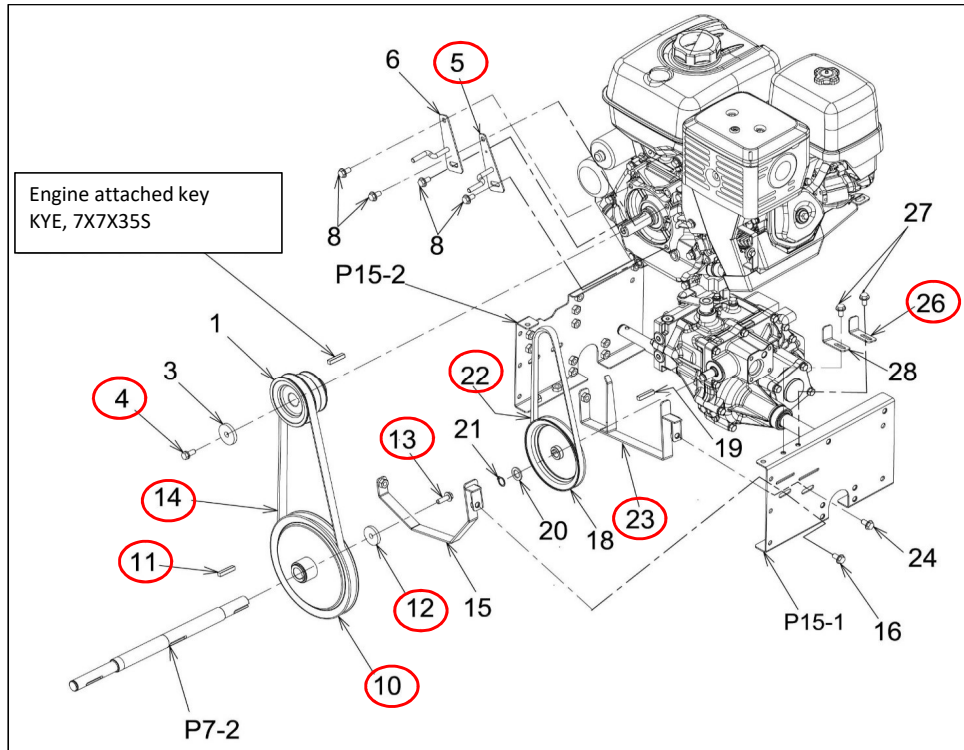 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	64902-B96-700	PULLEY, ENGINE	1		
2	-				
3	91251-0835451	WASHER, RD 8X35X4.5	1		
4	93100-0802517	BOLT, FRANGE 8X25	1		
5	63400-B96-850	STOPPER AL COMP, BELT	1	C	
6	64500-B96-801	STOPPER AR COMP, BELT	1	C	
7	-				
8	93100-0801617	BOLT, FRANGE 8X16	4		
9	-				
10	64100-B96-001	PULLEY COMP, 215.9B	1	C	
11	97114-035141	KEY, 7X7X35SR	1	C	
12	91251-0835321	WASHER, RD 8X35X3.2	1	C	
13	93100-0802517	BOLT, FRANGE 8X25	1	A	
14	63904-B96-000	W800 BELT, SB38	1	C	
15	65400-B96-830	STOPPER D COMP, BELT	1		
16	93100-0801617	BOLT, FRANGE 8X16	2		
17	-				
18	64200-B96-000	PULLEY COMP, HST	1		
19	97112-020141	KEY, 5X5X20SR	1		
20	91251-1525231	WASHER, RD 15X25X2.3	1		
21	94510-15080	CIRCLIP, EX 15	1		
22	64901-B96-000	BELT SA34, RED S II	1	A	
23	65200-B96-830	STOPPER B COMP, BELT	1	C	
24	93100-0801617	BOLT, FRANGE 8X16	2		
25	-				
26	65903-B96-802	STOPPER C, BELT	1	C	
27	93100-0601217	BOLT, FRANGE 6X12	2		
28	65904-B96-800	STOPPER E, BELT	1		

 B96-700-70 HANDLE

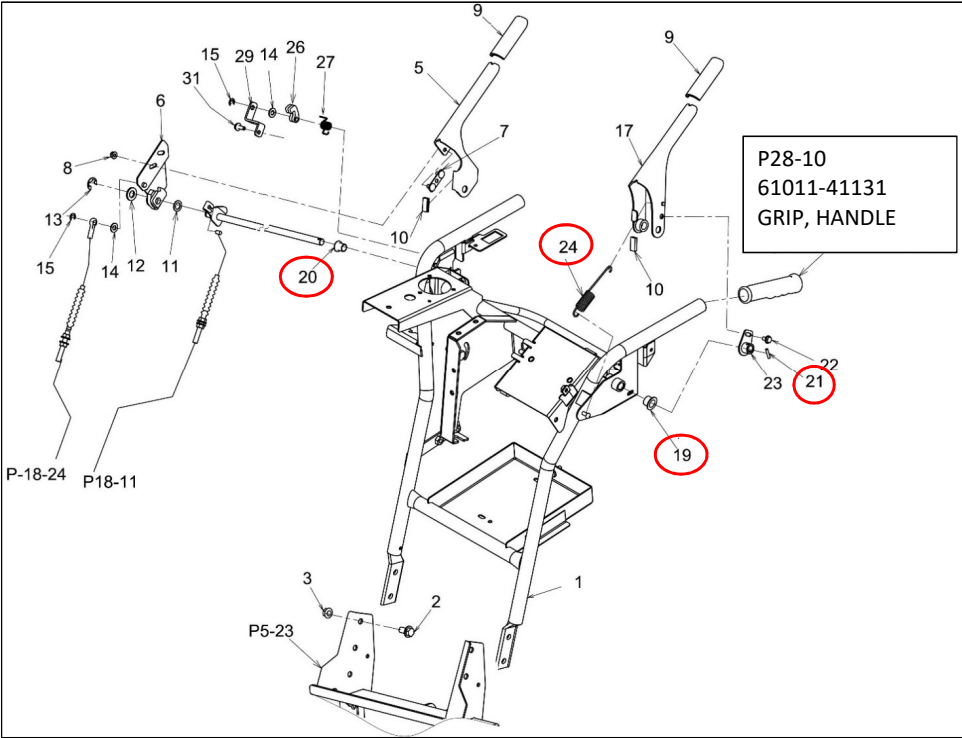


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	77700-B96-804	HANDLE COMP, W	1		
2	93300-1002017	BOLT, FRANGE 10X1.25X20	4		
3	94006-10410	NUT, FRANGE 10X1.25	4		
4	-				
5	73600-B96-801	LEVER COMP, AUGER CLUTCH	1		
6	73400-B96-832	BRACKET COMP, AUGER CLUTCH	1		
7	76500-B96-801	PLATE COMP, SET	1		
8	94002-06410	NUT, FRANGE 6	2		
9	73901-B96-001	COVER, DIPPING	1		
10	71909-B96-000	RUBBER 12X10	2		
11	73903-B96-000	SHIM 12X20X1.2	1		
12	94101-12010	WASHER, PLAIN 12	1		
13	94511-09010	E RING, 9	1		
14	94101-08010	WASHER, PLAIN 8	2		
15	94511-07010	E RING, 7	2		
16	73901-B96-001	COVER, DIPPING	1		
17	73500-B96-833	LEVER COMP, DRIVE CLUTCH	1		
18	76400-B96-805	SHAFT COMP	1		
19	91644-121080	BUSH, 80F-1210	1	B	
20	91644-121580	BUSH, 80F-1215	1	C	
21	94319-40020	PIN, SPG 4X20	1	D	
22	93100-0601217	BOLT, FRANGE 6X12	1		
23	74100-B96-831	BOSS COMP, JOINT	1		
24	71905-B96-101	SPRING, CLUTCH LEVER	1	C	
26	73800-B96-831	CAM COMP	1		
27	71901-B96-001	SPRING	1	C	
28	-				
29	78903-B96-801	STAY	1		
31	93100-0601617	BOLT, FRANGE 6X16	1		
33	-				

 B96-700-71 LEVER COMP, CHANGE

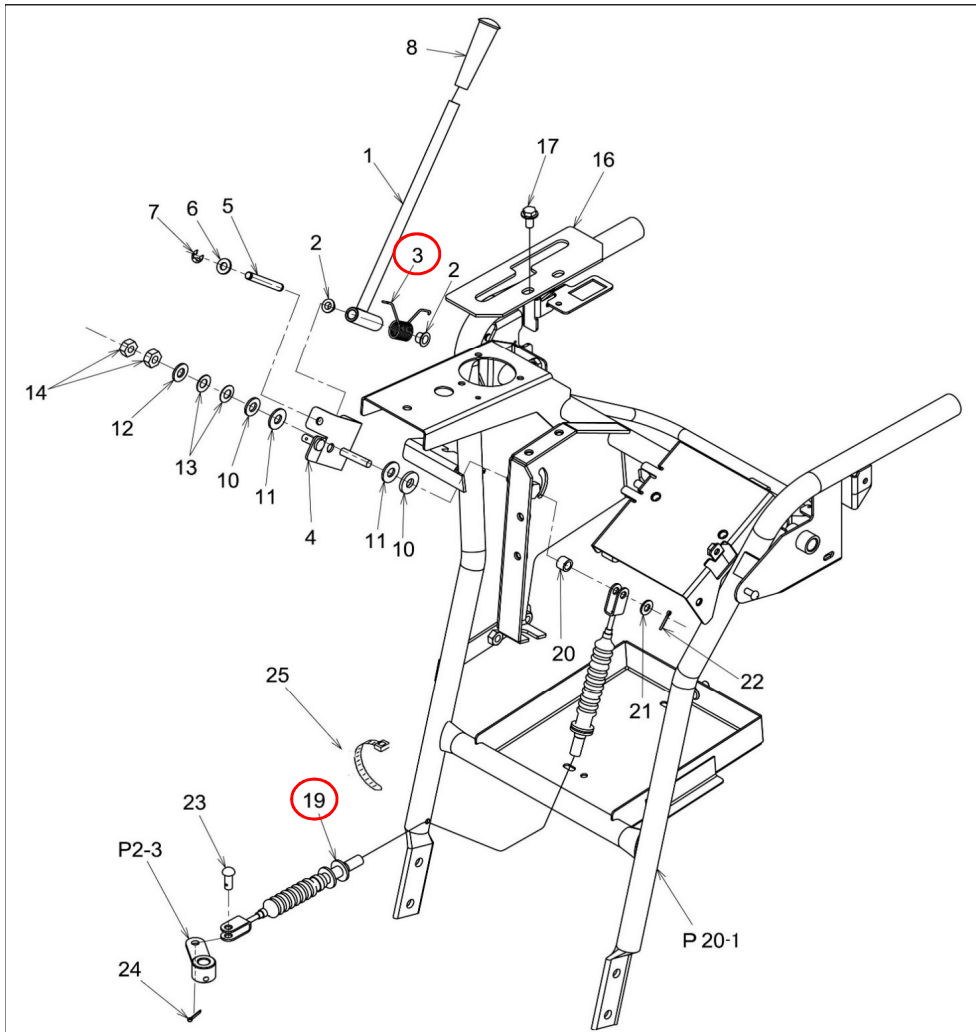


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	75200-B96-801	LEVER COMP, CHANGE	1		
2	91644-081580	BUSH, 80F-0815	2		
3	75904-B96-000	SPRING	1	C	
4	76700-B96-800	BLACKET COMP, CHANGE LEVER	1		
5	75901-B96-001	SHAFT,CHANGE LEVER	1		
6	94101-08010	WASHER, PLAIN 8	2		
7	94511-07010	E RING, 7	2		
8	91731-1208014	GRIP, LEVER OH12	1		
9	-				
10	91251-1025321	WASHER, RD 10X25X3.2	2		
11	91648-8010	WASHER, 80W-10	2		
12	94101-10010	WASHER, PLAIN 10	1		
13	91252-102	WASHER, SPRING H10	2		
14	91235-10100	NUT, HARD LOCK 10	1		
15	-				
16	75903-B96-831	PLATE, GUIDE	1		
17	93100-0601617	BOLT, FRANGE 6X16	2		
19	77300-B96-000	WIRE, CHANGE MAIN	1	A	
20	08901-G01-000	COLLER, 8X13.8X10	1		
21	94101-08010	WASHER, PLAIN 8	1		
22	94210-25150	PIN SPLIT,2.5X15	1		
23	94330-0802010	PIN, 8X20	1		
24	94210-25150	PIN, SPLIT 2.5X15	1		
25	91310-150	BAND, PRT1.5S	1		

 
B96-700-72 LEVER, SIDE CLUCH

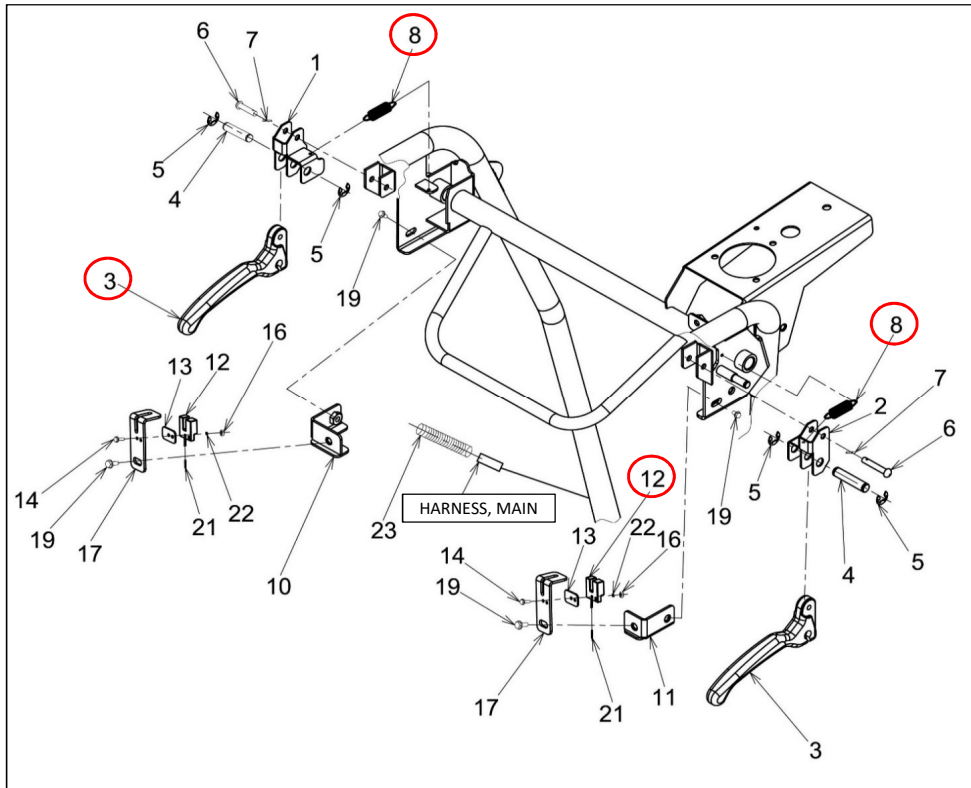


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	74600-B96-802	BLACKET L COMP, LEVER	1		
2	74700-B96-802	BLACKET R COMP, LEVER	1		
3	74904-B96-001	LEVER, GRIP	2	C	
4	74907-B96-001	SHAFT, SIDE CLUTCH	2		
5	94511-08010	E RING, 8	4		
6	94330-0603510	PIN, 6X35	2		
7	94210-20120	PIN, SPLIT 2X12	2		
8	91606-B96-000	SPRING, COILED 8.8X40	2	B	
9	-				
10	74200-B96-830	BLACKET L COMP, SWITCH	1		
11	74300-B96-830	BLACKET R COMP, SWITCH	1		
12	83300-B56-030	SWITCH, LEAD	2	A	
13	73908-B56-000	BASE, SWITCH t1.2	2		
14	93500-0301614	SCREW, 3 X 16	4		
15	-				
16	94001-03412	NUT,3	4		
17	78909-B96-800	BASE, SWITCH	2		
18	-				
19	93100-0601217	BOLT, FRANGE 6X12	4		
20	-				
21	91382-0501201	CORRUGATE 5X120	2		
22	94111-03012	WASHER, SPRING 10	4		
23	91382-0700601	CORRUGATE 7X60	1		

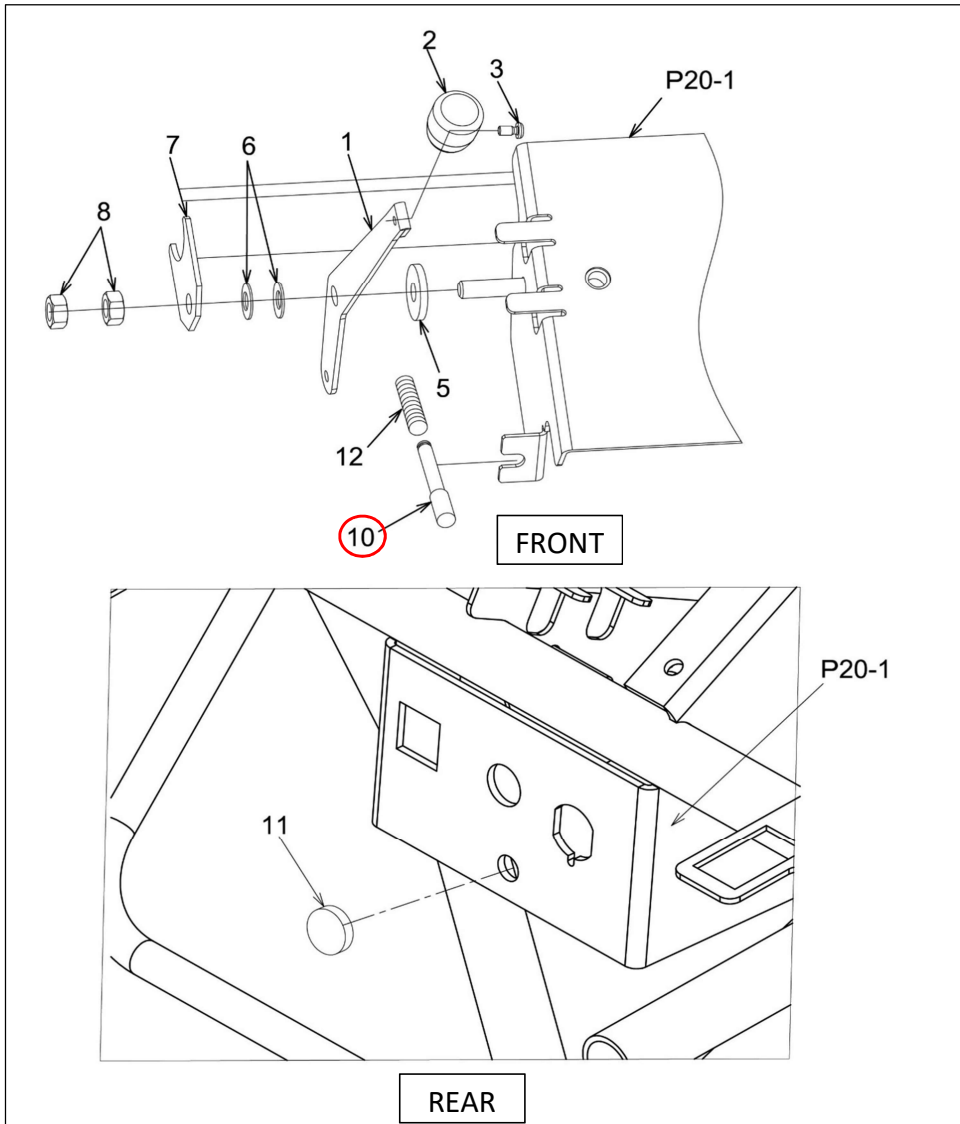 

No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	75902-B96-800	LEVER, THROTTLE	1		
2	75907-B18-000	KNOB, THROTTLE LEVER	1		
3	75908-B18-001	SCREW, SPECIAL 4X8	1		
5	91251-0825321	WASHER, RD 8X25X3.2	1		
6	91252-082	WASHER, SPRING H8	2		
7	77901-B96-801	PLATE, THRUST	1		
8	94001-08412	NUT,8	2		
10	77800-B96-000	WIRE, THROTTLE	1	A	
11	91358-4050923	BUSH, RUBBER SG-9A	1		
12	91382-0504701	CORRUGATE 5X470	1		

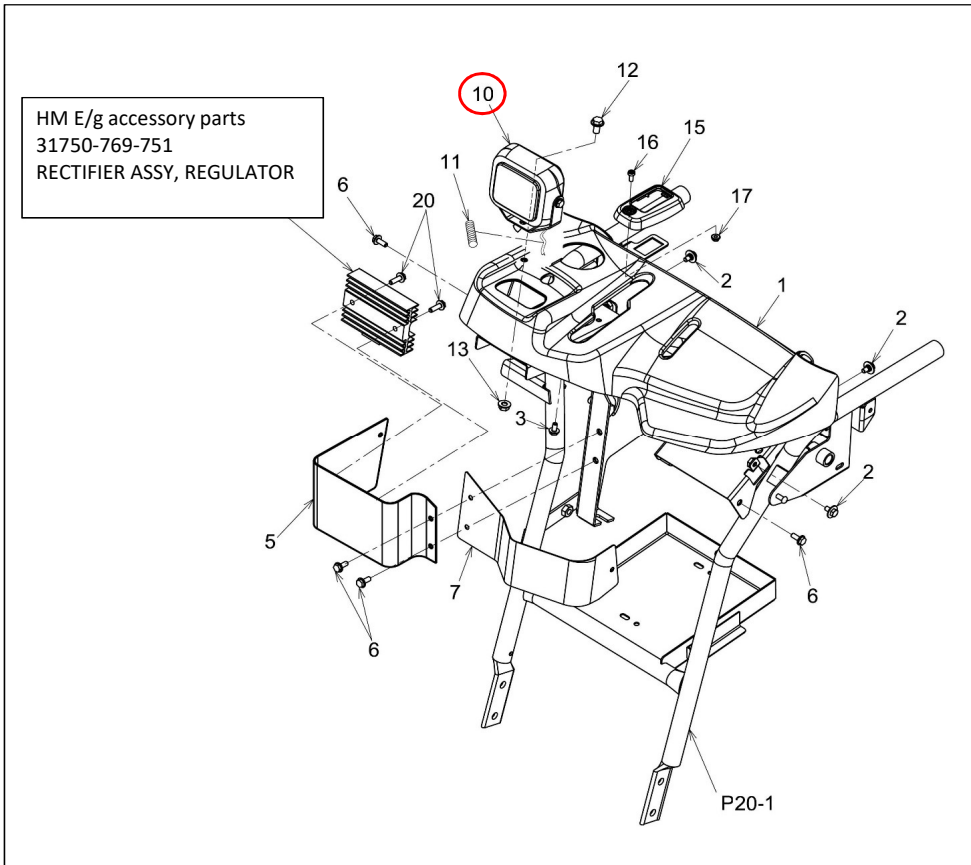 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	78800-B96-000	PANEL, CONTROL	1		
2	48905-B96-000	BOLT, SPECIAL 6X9	3		
3	93100-0501217	BOLT, FRANGE 5X12	1		
4	-				
5	78300-B96-800	COVER A COMP, FRONT	1		
6	93100-0601657	BOLT, FRANGE 6X16	4		
7	78908-B96-831	COVER B, FRONT	1		
8	-				
9	-				
10	83100-G18-000	LAMP, 18W	1	C	
11	91382-0700801	CORRUGATE 7X80	1		
12	93100-0801617	BOLT, FRANGE 8X16	1		
13	94002-08410	NUT, FRANGE 8	1		
14	-				
15	78904-B96-000	COVER, LIFTING SWITCH	1		
16	93500-0501257	SCREW 5X12	1		
17	94002-05410	NUT, FRANGE 5	1		
18	-				
20	93100-0602017	BOLT, FRANGE 6X20	2		

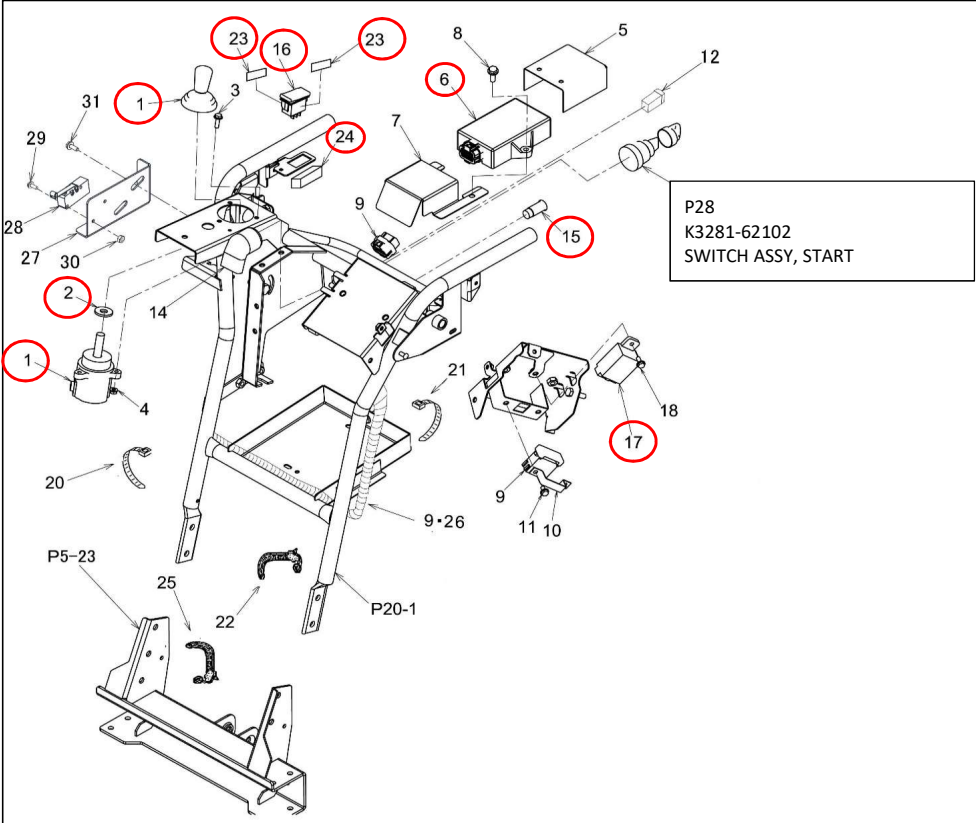 


No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	83200-B18-000	SWITCH, CONTROL	1	A	
2	83902-B18-000	WASHER, RD 11X32X4.5	1	A	
3	93100-0602017	BOLT, FRANGE 6X20	3		
4	94002-06410	NUT, FRANGE 6	3		
5	71910-B96-800	COVER B, ECU	1		
6	84500-B96-000	ECU	1	B	
7	71908-B96-830	COVER A, ECU	1		
8	93100-0802517	BOLT, FRANGE 8X25	2		
9	85200-B96-001	HARNES DX, MAIN	1		
10	82903-B50-001	BLACKET, FUSE	1		
11	93100-0601217	BOLT, FRANGE 6X12	4		
12	83100-B96-000	SWITCH, WATERPROOF LIGHT	1		
13	88901-B82-000	COVER, KEY	1		
14	88902-B81-030	COVER, KEY SWITCH	1		
15	89100-A62-000	LAMP UNIT, PILOT	1	C	
16	83200-B96-000	SWITCH, LOCKER	1	A	
17	84200-B88-000	RELAY, CHUTE	1	C	
18	93100-0601617	BOLT, FRANGE 6X16	1		
20	91310-150	BAND, PRT1.5S	7		
21	91310-300	BAND, PRT3S	9		
22	91314-119P7	STRAP, CABLE 1-19P7	2		
23	83901-B96-000	WATERPROOF TAPE	2	A	
24	83902-B96-000	CAP, SWITCH	1	C	
25	91314-119P7	STRAP, CABLE 1-19P7	1		
26	85901-B96-000	TAPE, TR-50NHB2m	1		
27	77903-B96-800	BRACKET, SENSOR	1		
28	83100-B10-000	SWITCH, CHUTE	1		
29	83901-B10-000	BOLT, SPECIAL M3X20	2		
30	94001-03412	NUT, 3	2		
31	93100-0601217	NUT, FRANGE 6	2		

 
B96-700-81 BATTERY

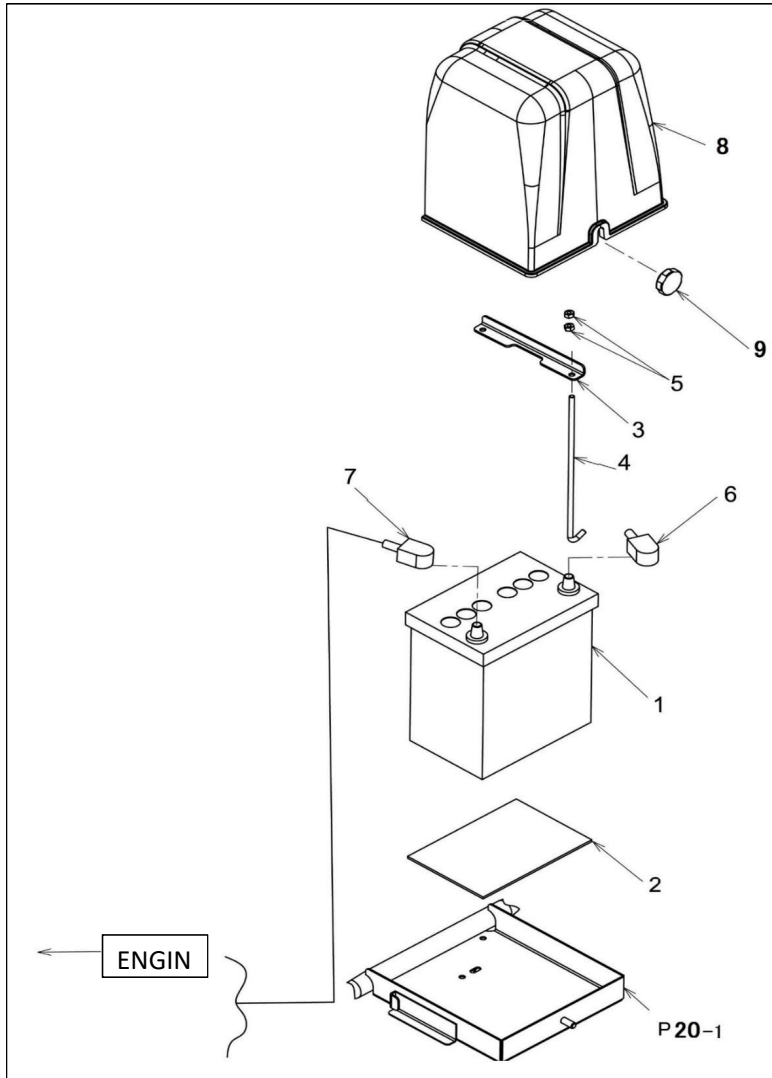

No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	91890-040B19L	BATTERY 40B19L	1		
2	89902-M56-001	RUBBER, ANTIVIBRATION	1		
3	86901-B96-800	CLAMP, BATTERY	1		
4	86902-B96-000	BOLT, BATTERY	2		
5	94001-06412	NUT, 6	4		
6	87100-B96-031	CORD (+), BATTERY 1300	1		
7	87200-B96-030	CORD (-), BATTERY 900	1		
8	88906-B96-031	COVER, BATTERY	1		
9	91242-0821	NUT, KNOB 8	1		

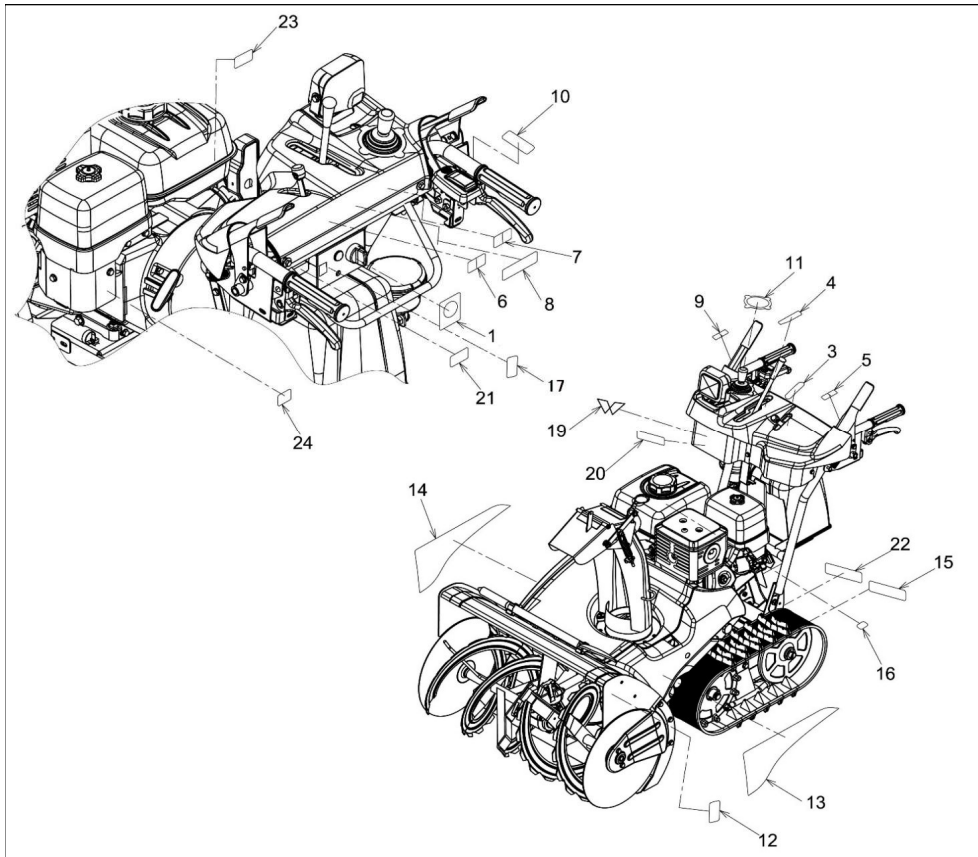 

No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	79931-B96-000	MARK, ENGUNE SWITCH	1		
2	-				
3	79903-B96-001	MARK, THROTTLE	1		
4	79904-B96-002	MARK, CHANGE	1		
5	79933-B96-000	MARK, DRIVE	1		
6	79934-B96-000	MARK L, SIDE CLUTCH	1		
7	79935-B96-000	MARK R, SIDE CLUTCH	1		
8	79943-B96-000	LABEL, WARNING	1		
9	79936-B96-000	MARK, AUGER CLUTCH	1		
10	79937-B96-000	MARK, AUGER HEIGHT	1		
11	79910-B96-003	MARK, CHUTE	1		
12	79941-B96-000	LABEL, BELT COVER CAUTION	2		
13	79922-B96-001	MARK L, SXC1280	1		
14	79923-B96-001	MARK R, SXC1280	1		
15	79944-B96-000	MARK, CE	1		
16	79928-B56-000	LABEL, MUFLER CAUTION	1		
17	79943-B96-000	MARK, BACKLIFT	1		
18	-				
19	79912-B97-000	MARK, WADO	1		
20	79904-B89-000	LABEL, WADO 78	1		
21	79938-B96-000	MARK, FUSE	1		
22	91906-001	NAMEPLATE	1		
23	79940-B96-001	MARK, NOISE	1		
24	79942-B96-000	LABEL, CHOKE	1		

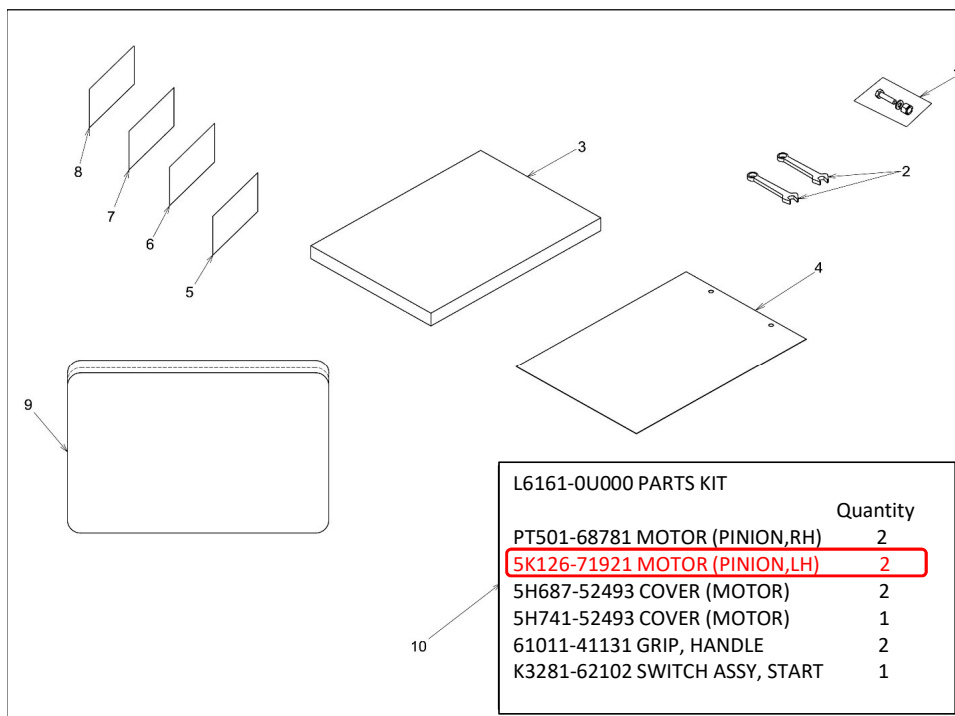 

No	Parts number	Parts name	Quantity	Recommend spare parts	Remarks
1	90001-B96-003	BOLT ASSY, SHEAR 6X25	1	A	
2	91905-B56-000	WRENCH 10, COMBINATION	2		
3	91906-B96-000	OWNERS MANUAL	1		
4	91903-001	未翻訳	1		
5	91811-105	FUSE 5A, BLADE	1		
6	91811-110	FUSE 10A, BLADE	1		
7	91811-125	FUSE 25A, BLADE	1		
8	91811-130	FUSE 30A, BLADE	1		
9	90002-B96-000	CASE, TOOL	1		
10	L6161-0U000	PARTS KIT	1	B	