



GIRO 700C


A

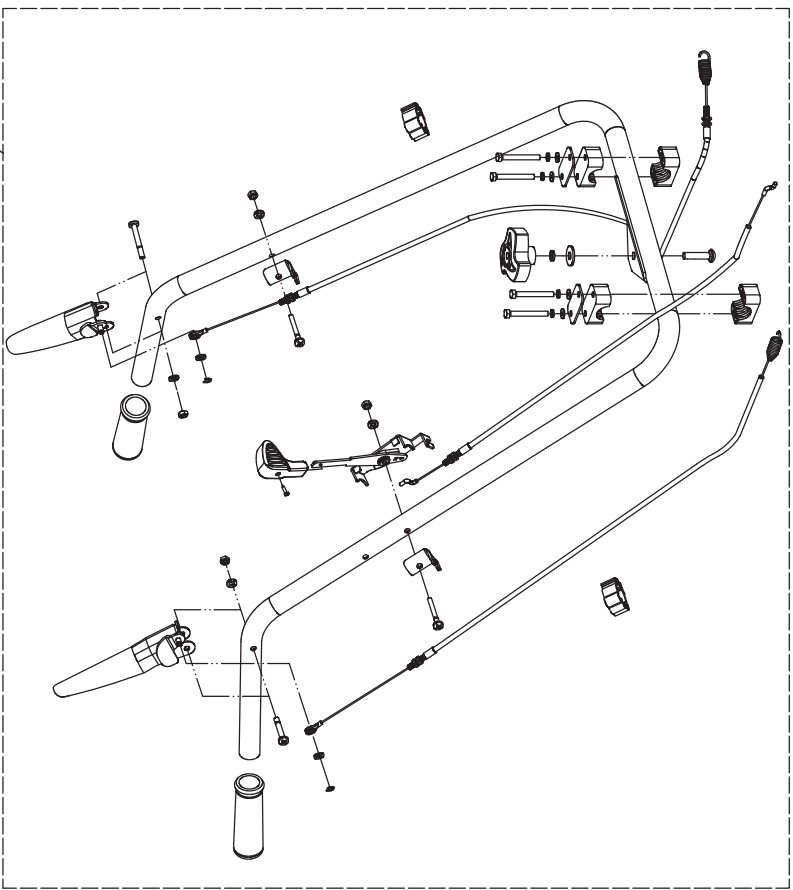


B

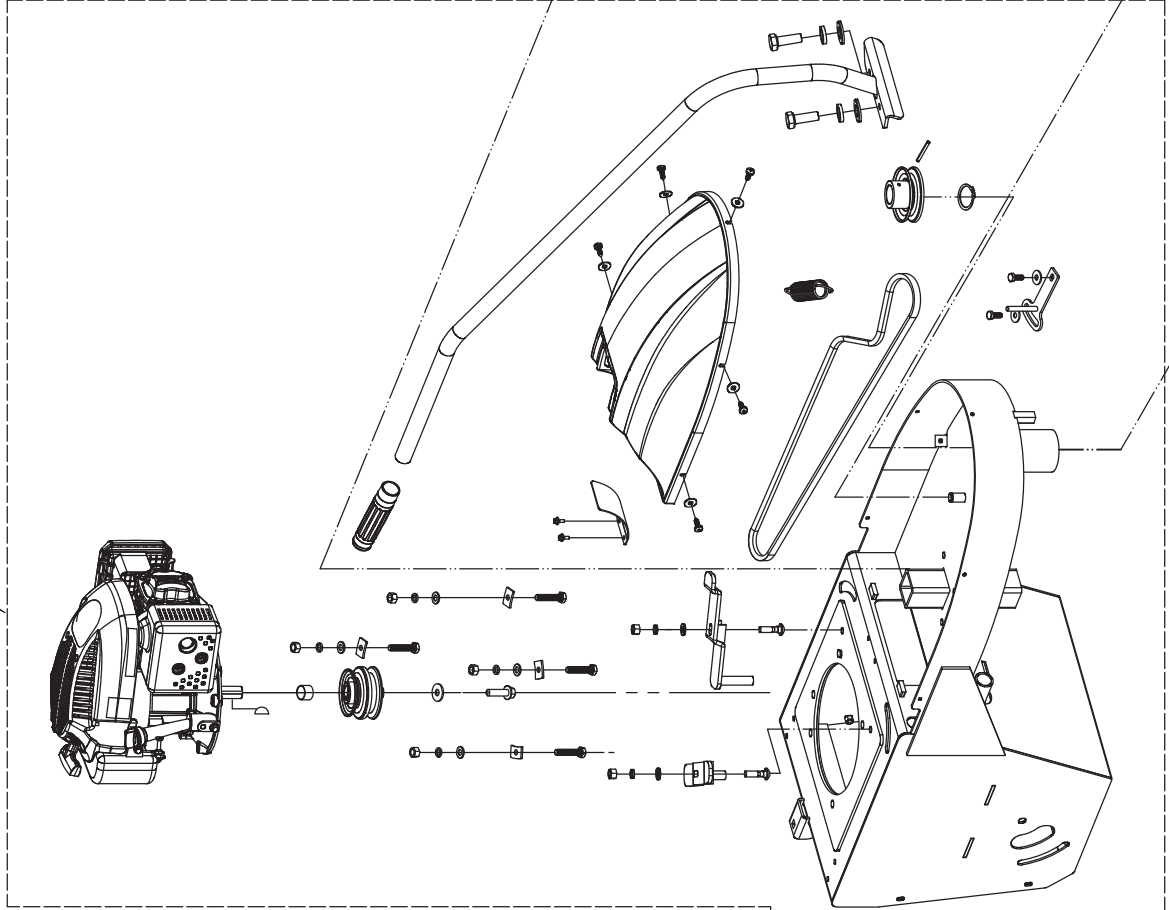


C

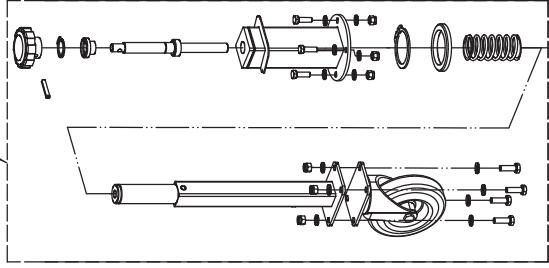


D

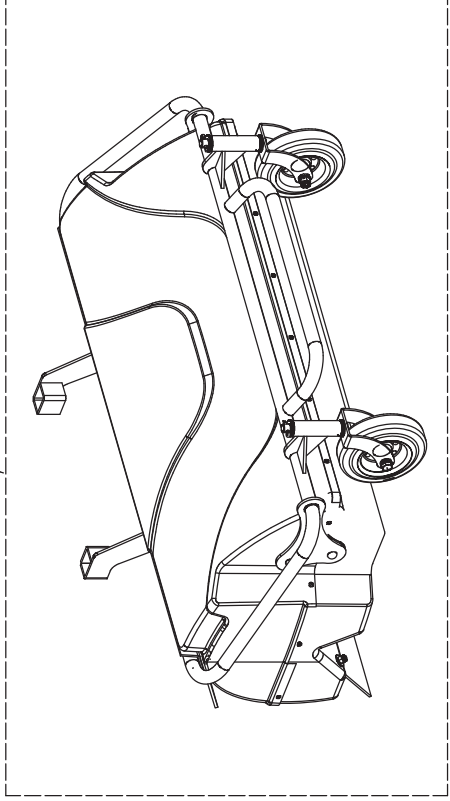


E

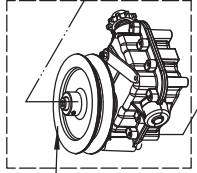

F

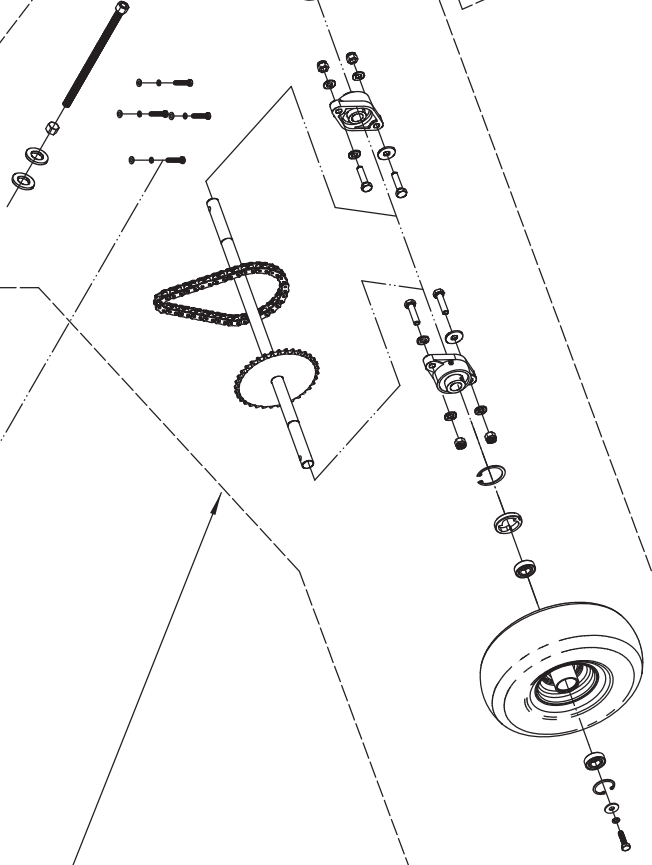


I

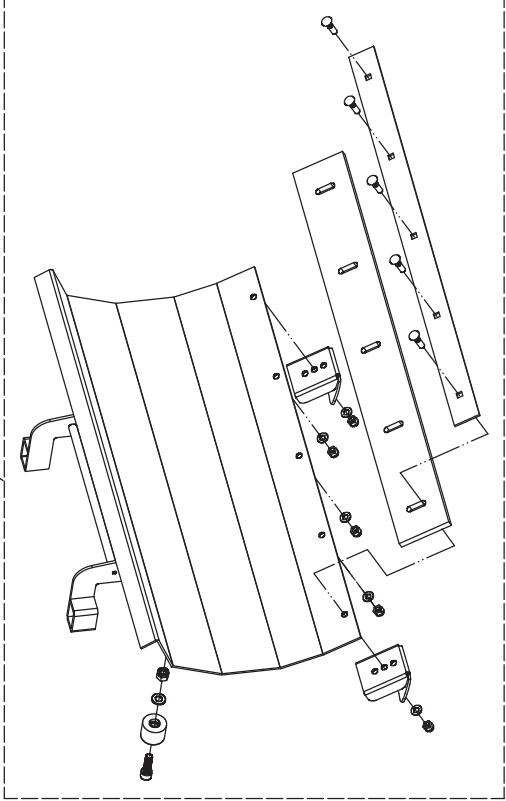


H

G

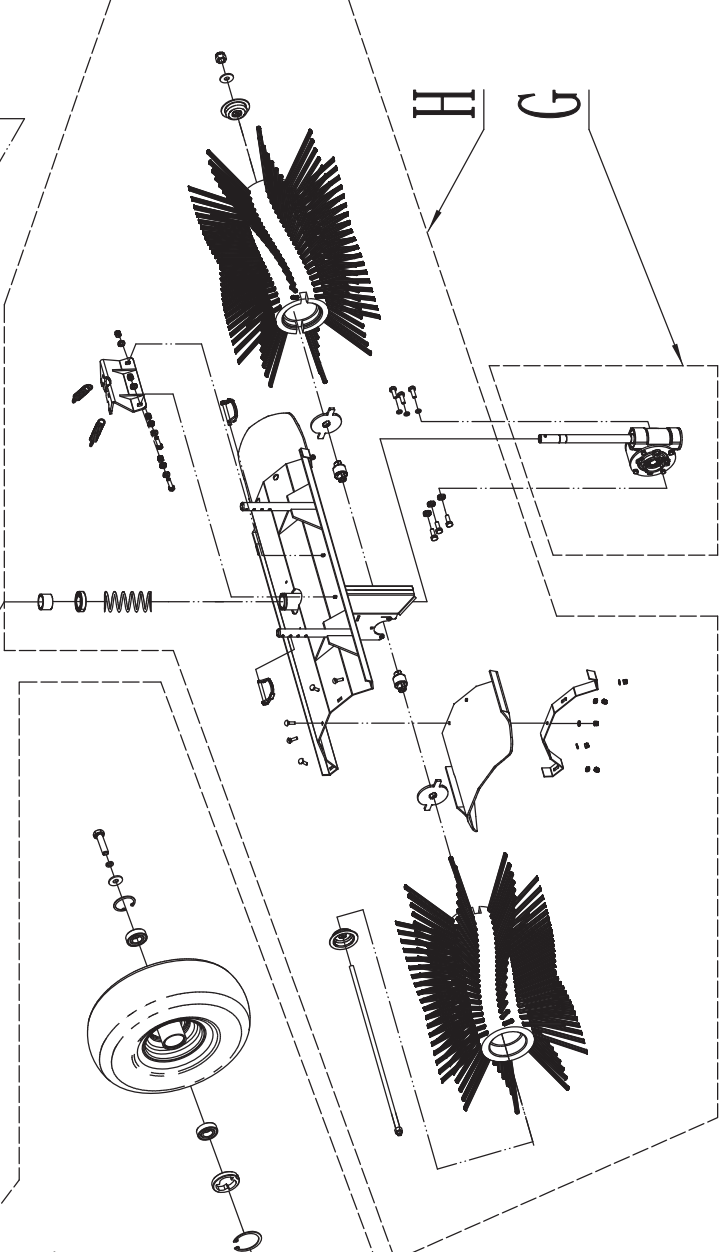

J

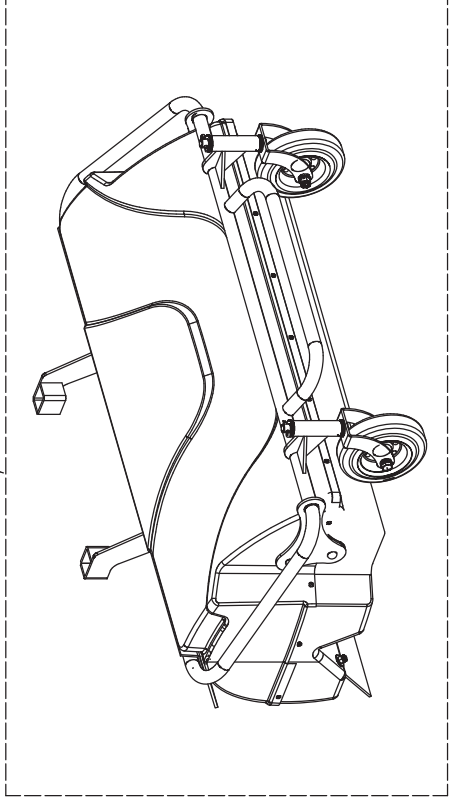

GIRO Spare parts list

subassembly code	Name_English	parts list
1	handle	handle
2	deck	deck
3	regulator	regulator
4	tensional pulley	tensional pulley
5	gear box	gear box
6	rear axle	rear axle
7	reducer	reducer
8	brush	brush
9	dozer	dozer
10	collector	collector
2018	Sweeper	

1	handle Spare parts list		
Order	Part number	Name_English	Quantity
1	45A0323010	sheath	2
2	SW801603/22	right grip	1
3	SW801601/22	handle	1
4	0202006000	lock nut	4
5	0104006050	screw	1
6	1301005000	check ring	2
7	SW801602/22	left grip	1
8	0104006040	screw	2
9	0104006035	screw	1
10	SW8029	clutch cable	1
11	SW8028	tensional cable	1
12	0101006050	bolt	4
13	SW100A00000002/22	plate	2
14	SW100A000000003	bracket	4
15	0107008030	square neck bolt	1
16	0106003013	screw	1
17	5380510010	knob	1
18	5360509010	throttle bracket	1
19	48R0404020/02	clutch cable bracket	2
20	SW8027	throttle cable	1
21	WTY0001	cable clip	1
22	AVS010000000	knob	1
23	0301006000	spacer	6
24	0401008000	spring washer	1
25	0301008000	spacer	1

2	Deck Spare parts list		
Order	Part number	Name_English	Quantity
1		engine	1
2	SW801604	handle sheath	1
3	SW8026/22	steering rod	1
4	0201008000	nut	6
5	5310401010	key	1
6	SW8042/02	spacer	1
7	0401008000	spring washer	9
8	0301008000	spacer	9
9	SW8014B/02	pulley	1
10	5310406010/04	spring washer	1
11	5310415020	central bolt	1
12	5310112010/02	spacer	4
13	0101008045	bolt	4
14	0102008016	bolt	1
15	5360122010	rubber ring	1
16	SW800210/21	cover	1
17	0102006016	hex flange bolt	4
18	SW8030/22	stopper	2
19	4510513010/02	bolt	2
20	SW8002/21	bracket	1
21	4SC4100010/02		
22	0302008000	big washer	2
23	0101008020	bolt	2
24	1001040000	check ring	1
25	0701005035	spring pin	1
26	SW8013/02	pulley	1
27	4LXA1410	belt	1
28	SW8023	spring	1
29	0106005016	screw	5
30	0302005000	big washer	5
31	SW8034	front cover	1
32	SW800217		
33	0102006014	bolt	2

3 Regulator Spare parts list			
Order	Part number	Name_English	Quantity
1	0701006032	pin	1
2	SW8052	knob	1
3	1001016000	check ring	1
4	SW8011	nylon bush	1
5	SW8010/02	rod weldment	1
6	SW8006/22	tube	1
7	0101008020	bolt	8
8	0301008000	spring	12
9	0202008000	lock nut	8
10	1001030000	check ring	1
11	SW8039/02	big spacer	1
12	SW8024	spring	1
13	SW7007/22	shaft	1
14	SW800704	wheel	1

4	Tensional Pulley Spare parts list		
Order	Part number	Name_English	Quantity
1	1001012000	check ring	1
2	0301012000	spacer	1
3	SW8005E05	nylon bush	1
4	SW8005D00	pulley weldment	1
5	0101006020	bolt	1
6	0401006000	spring washer	1
7	0302006000	big washer	1
8	0901030000	check ring	1
9	6200/2RZ	bearing	1
10	SW8012/02	pulley	1
11	0101008020	bolt	1
12	0401008000	spring washer	1
13	0302008000	big washer	1
14	0901035000	check ring	1
15	6202/2RZ	bearing	1
16	SW8005D02/02	pulley	1
17	SW8005E00/02	tensional arm	1

5	Gear Box Spare parts list		
Order	Part number	Name_English	Quantity
	SW8002A00	gear box	1
1	HQ10118010	pin	2
2	SW8002A08/04	shaft	1
3	HQ10111010	bearing	1
4	HQ10110010	oil seal ring	2
5	HQ10116010	bearing	2
6	HQ10121010/02	spacer	1
7	HQ10120010	spacer	1
8	HQ10115010	spacer	4
9	HQ10116010	bearing	2
10	SW8002A02	worm wheel	1
11	SW8002A03	taper bush	2
12	SW8002A04/02	pulley	1
13	0701005032	spring pin	1
14	HQ10109010	spring	1
15	0202005000	lock nut	1
16	0302005000	big washer	1
17	SW8002A07/02	arm	1
18	SW8002A06	upper case	1
19	1501603007	oil seal ring	1
20	6003/2RZ	bearing	2
21	SW8002A01/04	worm	1
22	HQ10107010	o ring	1
23	SW8002A05	bottom case	1
24	0101005018A	lock screw	9
25	HQ10113011	cam	1
26	HQ10112011	cam	1
27	HQ10106010/04	shaft	1
28	HQ10111020	bearing	1
29	0702004018	pin	1
30	SW8002A09/02	sprocket wheel	1
31	SW8002A10	check ring	1

6	Rear Axle Spare parts list		
Order	Part number	Name_English	Quantity
1	0101008030	bolt	2
2	0401008000	spring washer	2
3	0302008000	big washer	2
4	6204/2RZ	bearing	4
5	SW8008LZ	wheel	2
6	SW800401/00	clutch bush	2
7	1001020000	check ring for shaft	2
8	0202010000	lock nut	4
9	0301010000	spacer	6
10	UELFLU204	bearing	2
11	0302010000	big washer	2
12	0101010040	bolt	4
13	0701006029	pin	2
14	SW8015/22	rear axis assembly	1
15	08A0123	chain	1
16	0101006030	bolt	4
17	0401006000	spring washer	4
18	0301006000	spacer	4
19	0201012000	nut	1
20	SW8031/02	bolt	1
21	SWV13/565	belt	1
22	0301012000	spacer	2

7 Reducer spare parts list			
Order	Part number	Name_English	Quantity
	SW7003A00	reducer	1
1	1502004210	oil seal ring	1
2	0901042000	check ring	2
3	6004	bearing	2
4	SW7003A01	worm	1
5	SW8003A07	case	1
6	0103006012	bolt	8
7	0103006020	bolt	3
8	0401006000	spring washer	8
9	SW8003A06	cover	2
10	1503004007	oil seal ring	2
11	6006	bearing	2
12	SW8003A02	worm wheel	1
13	1001020000	check ring for shaft	1
14	SW8003A04	cover	1
15	7004C/AC	bearing	1

8	Brush spare parts list		
Order	Part number	Name_English	Quantity
1	SW700305/02	rod	1
2	SW100A06000001/22	disc	2
3	SW7001A00	brush	2
4	SW800301/02	adapter	2
5	SW800304/02	bush	2
6	0107006020	bolt	10
7	SW800303	rubber	2
8	SW800306/22	plate	2
9	0301006000	spacer	10
10	0201006000	lock nut	10
11	SW800307/02	spacer	1
12	61804/2Z	bearing	1
13	SW8020	spring	1
14	2601006045	lock pin	2
15	SW7003B00/21	bracket weldment	1
16	0101006016	bolt	6
17	0401006000	washer	6
18	0101008035	bolt	2
19	0301008000	spacer	6
20	0202008000	lock nut	4
21	SW8022	spring	2
22	SW8025/22	plate	1
23	0301010000	spacer	1
24	0202010000	lock nut	1

9		Dozer Spare parts list	
Order	Part number	Name_English	Quantity
		blade assembly	1
1	0103010035	bolt	1
2	8SH0108010	rubber block	1
3	0301010000	spacer	1
4	0202010000	lock nut	2
5	SW7004A00/22	blade	1
6	0202008000	lock nut	5
7	0301008000	spacer	5
8	SW800402/02	guide	2
9	SW700404	rubber plate	1
10	SW700403/22	plate	1
11	0107008030	square neck bolt	5

10	Collector Spare parts list		
Order	Part number	Name_English	Quantity
	JHXS80	collector assembly	1
1	SW800520	rubber	1
2	0107006020	bolt	12
3	0302006000	big washer	15
4	0202006000	nut	20
5	0301006000	spacer	9
6	0101006016	bolt	4
7	SW800522/22		2
8	SW800521	rubber	1
9	SW8005AA00	collection box	1
10	SW700500/22	collector weldment	1
11	5320333010	spring	2
12	0301012000	spacer	6
13	48R0113010	bush	4
14	SW8005B00/22	bracket	2
15	0202008000	nut	2
16	0301008000	spacer	4
17	0101008065	bolt	2
18	SW8005B03/02	bush	4
19	SW800705	wheel	2