

# PARTS LIST

## PS15 STANDARD

### CONTENTS


1. MAIN BODY.....	1 ~ 2
2. CHEMICAL TANK.....	3 ~ 4
3. PUMP.....	5 ~ 6
4. ENGINE.....	7 ~ 10
5. CARBURETOR, FUEL TANK.....	11 ~ 12
6. ACCESSORIES.....	13 ~ 14

2017.03.




P/N 524453

# 1. PS15 STANDARD MAIN BODY

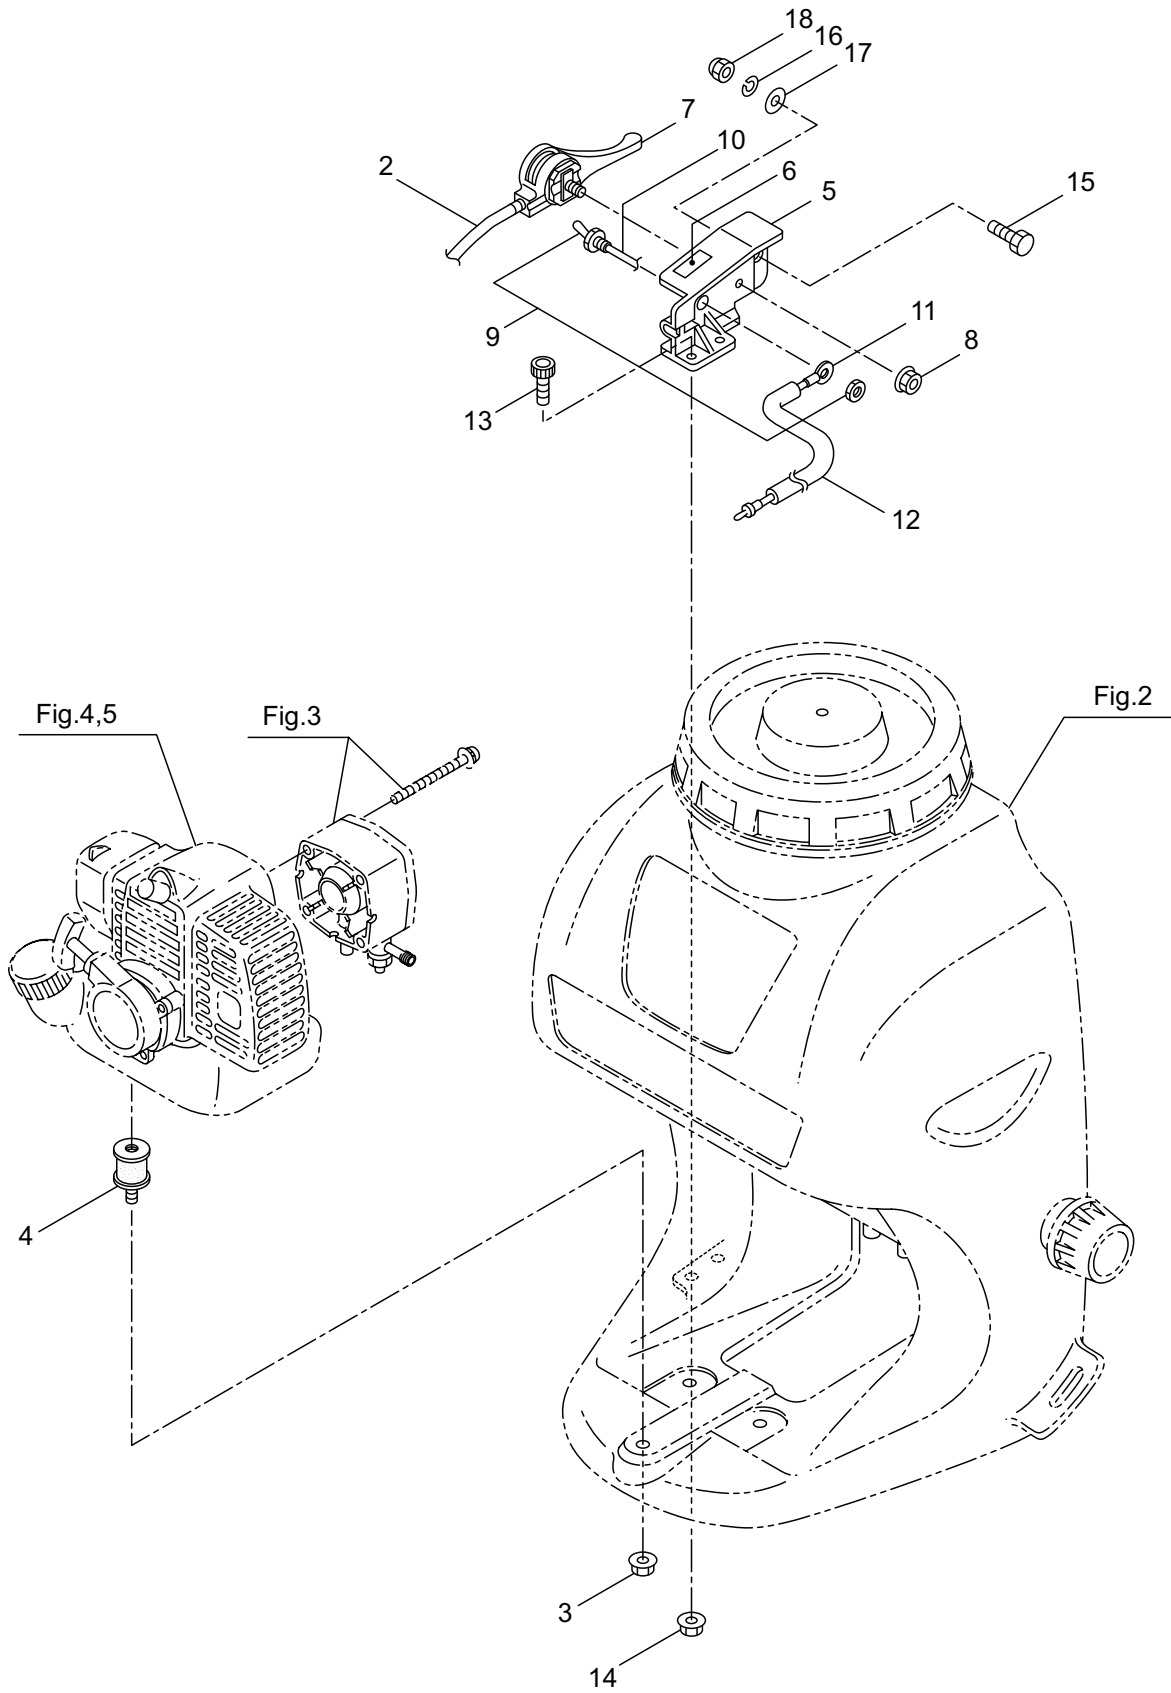


Ref. No.	Parts No.	Parts Name	Q'ty	Remarks
1-1	355010	PS15 STANDARD	1	
1-2	282365	Throttle Cable	1	
1-3	127228	Nut	3	M6
1-4	127183	Buffer	3	
1-5	123050	Stay	1	
1-6	123051	Label	1	OFF-ON
1-7	115148	Throttle Lever	1	
1-8	127226	Nut	1	M5
1-9	122987	Toggle Switch	1	
1-10	123048	Switch Cord	1	AV0.5x320L
1-11	123049	Earth Cord	1	AV0.5x320L M10
1-12	114901	Vinyl Hose	1	8x9x220
1-13	183421	Cap Screw	2	M5x16
1-14	127226	Nut	2	M5
1-15	127220	Bolt	1	M6x12
1-16	126568	Spring Washer	1	M6
1-17	126572	Washer	1	M6
1-18	089750	Nut	1	M6

## 2. PS15 STANDARD CHEMICAL TANK

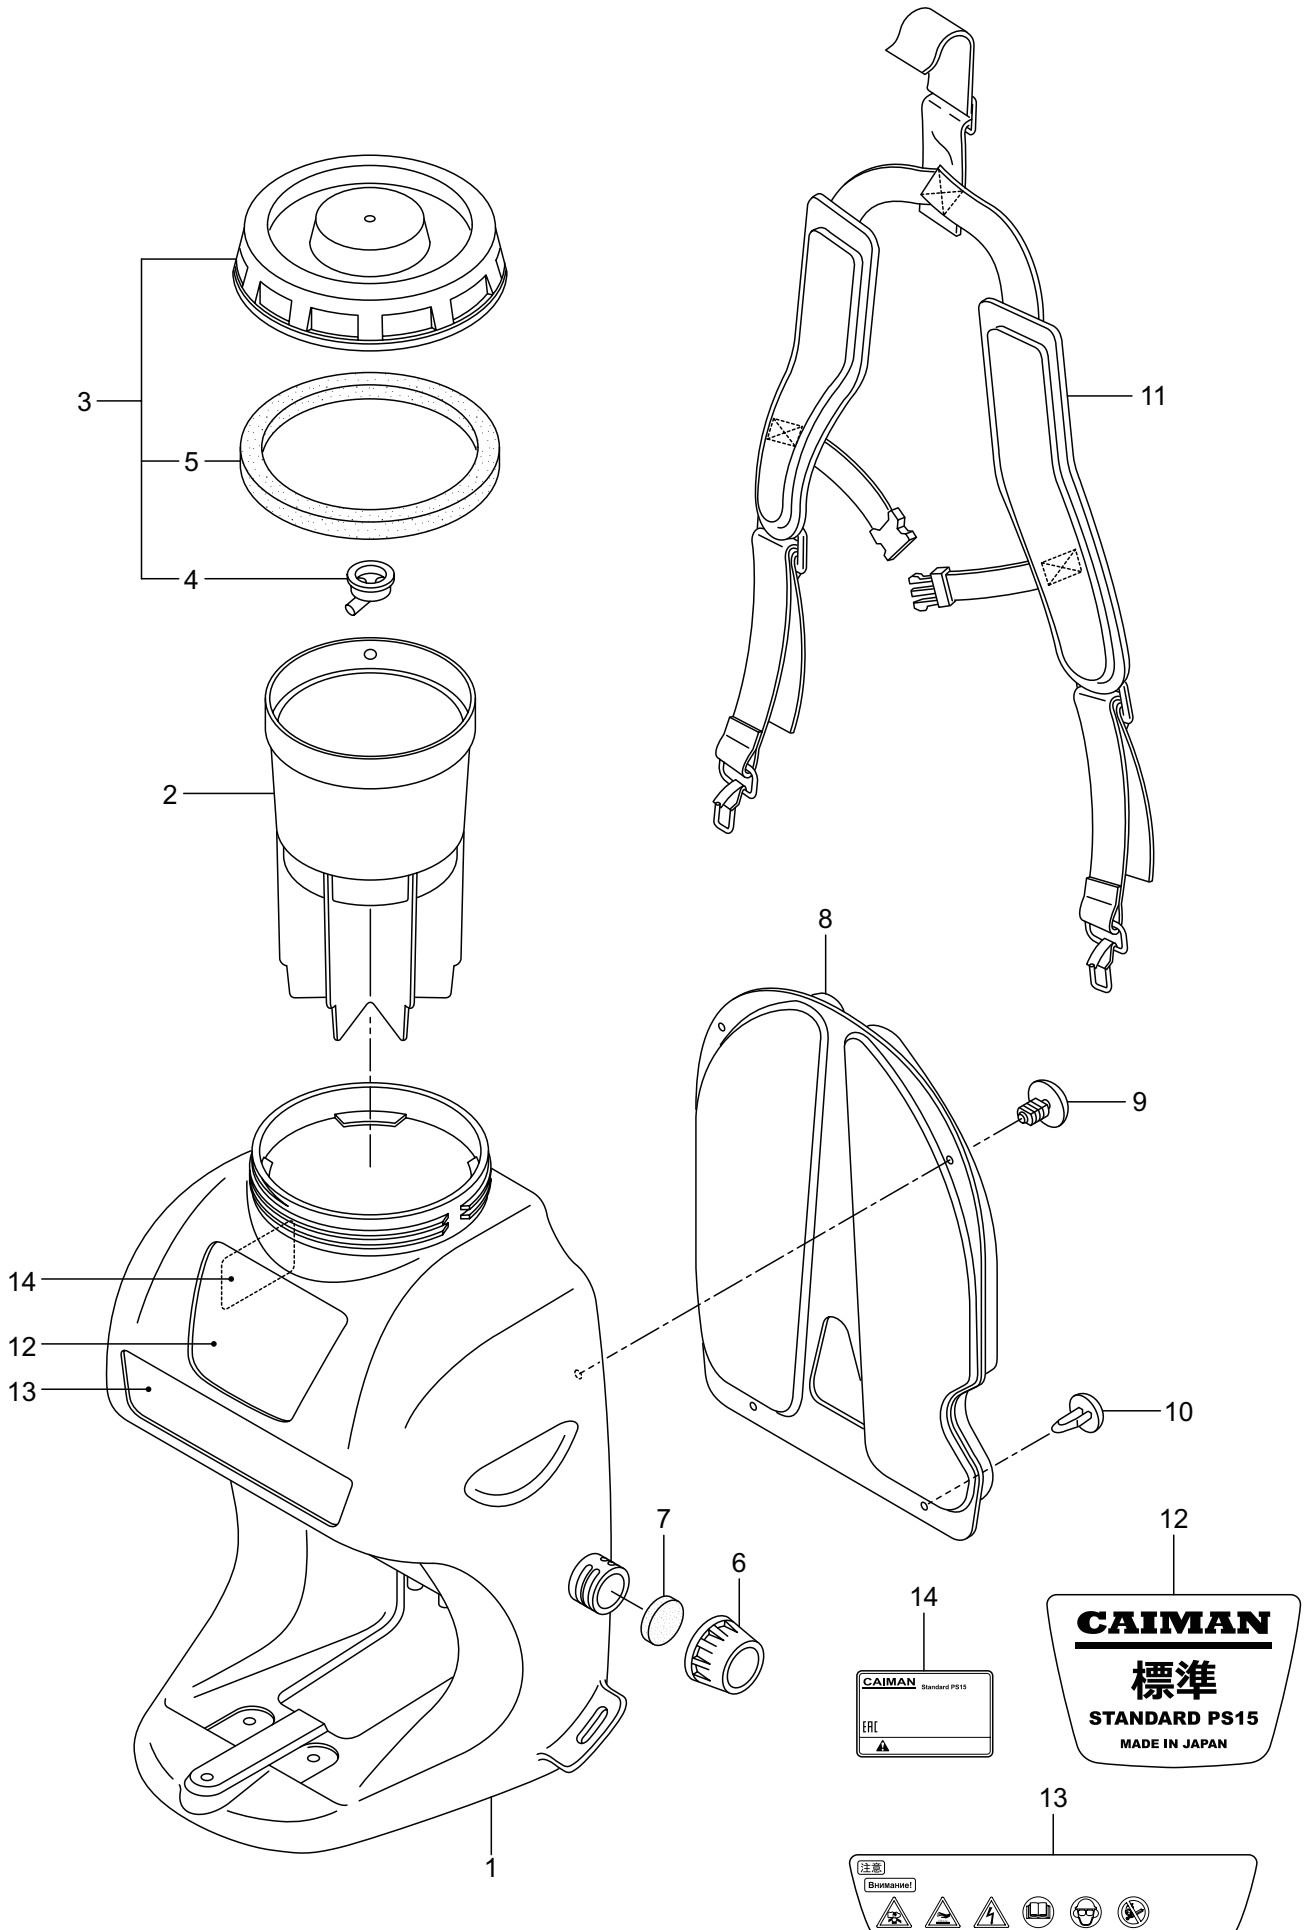


Ref. No.	Parts No.	Parts Name	Q'ty	Remarks
2-1	127189	Chemical Tank	1	
2-2	125061	Strainer	1	
2-3	131591	Cap, Chemical Tank	1	Incl.4,5
2-4	022363	Inner Cap	1	
2-5	022362	Packing	1	150x170xt10
2-6	124250	Cap	1	
2-7	029299	Packing	1	36xt3.0
2-8	129525	Cushion Pad	1	
2-9	125068	Fastener	2	
2-10	100749	Fastener	2	#7
2-11	131026	Knapsack Band	1	
2-12	134444	Label	1	PS15STANDARD(CAIMAN)
2-13	134445	Label	1	PL Label(PS15STANDARD)
2-14	134446	Label	1	EACPS15STANDARD

### 3. PS15 STANDARD PUMP

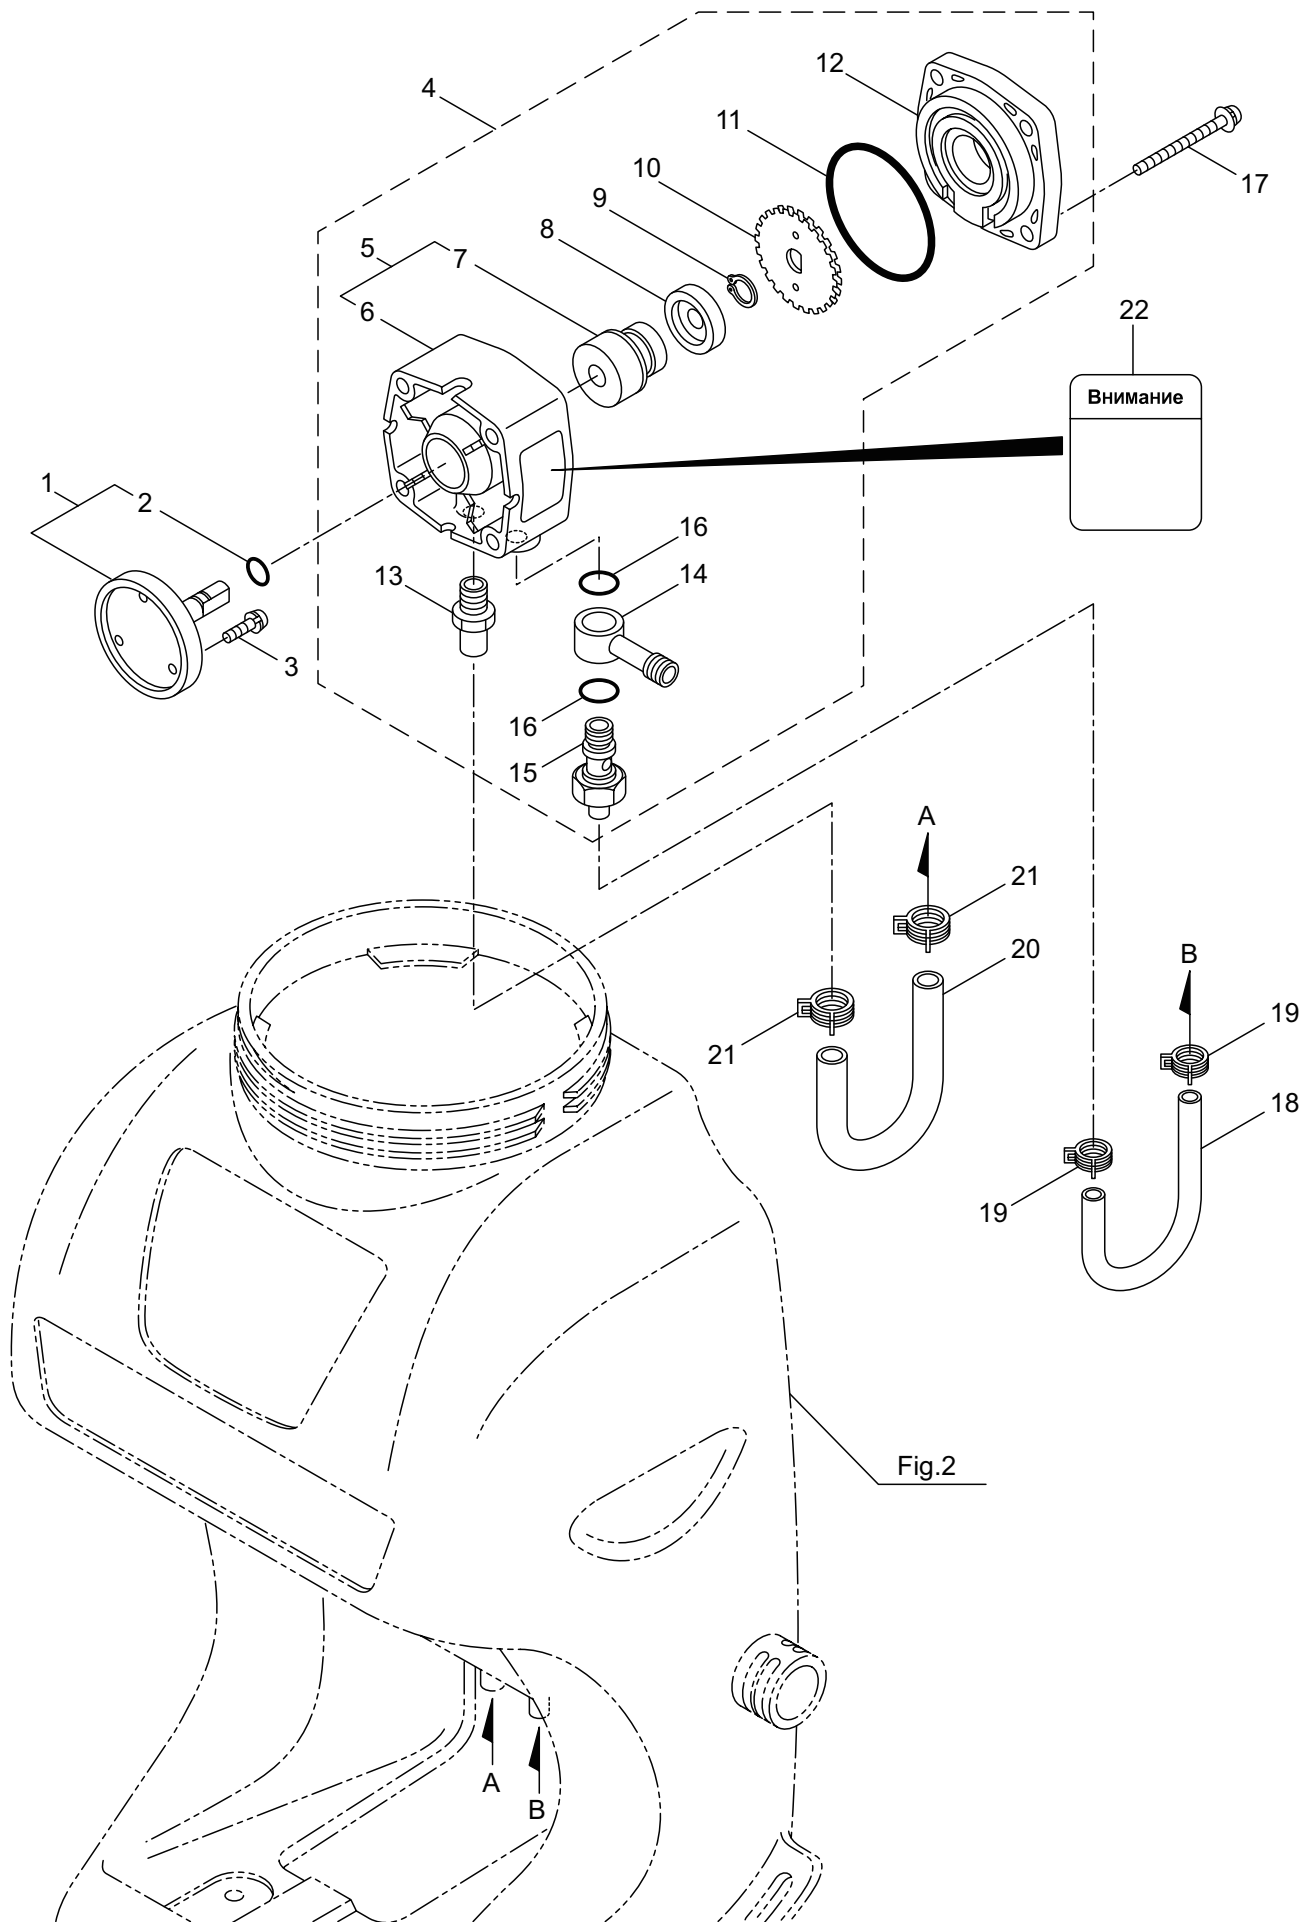

Ref. No.	Parts No.	Parts Name	Q'ty	Remarks
3-1	122916	Shaft Ass'y	1	Incl.2
3-2	026531	O-Ring	1	S8
3-3	092004	Screw	3	M6x12SW
3-4	127184	Pump Ass'y	1	Incl.5-16
3-5	127185	Casing Ass'y	1	Incl.6,7
3-6	127186	Casing	1	
3-7	107422	Mechanical Seal	1	
3-8	106432	Holder	1	
3-9	056441	C-Sharped Snap Ring	1	#10
3-10	106433	Impeller	1	50xt3x10
3-11	014029	O-Ring	1	S63
3-12	106434	Casing Cover	1	
3-13	125049	Nipple	1	
3-14	125050	Hose Coupling	1	
3-15	127187	Joint Bolt	1	G1/4
3-16	049106	O-Ring	2	S15
3-17	125230	Screw	4	M5x60(SM)
3-18	127191	Vinyl Hose	1	7x11x165L
3-19	127241	Hose Band	2	
3-20	127192	Vinyl Hose	1	10x15x165L
3-21	103033	Hose Band	2	
3-22	134580	Label	1	


# 4. PS15 STANDARD ENGINE

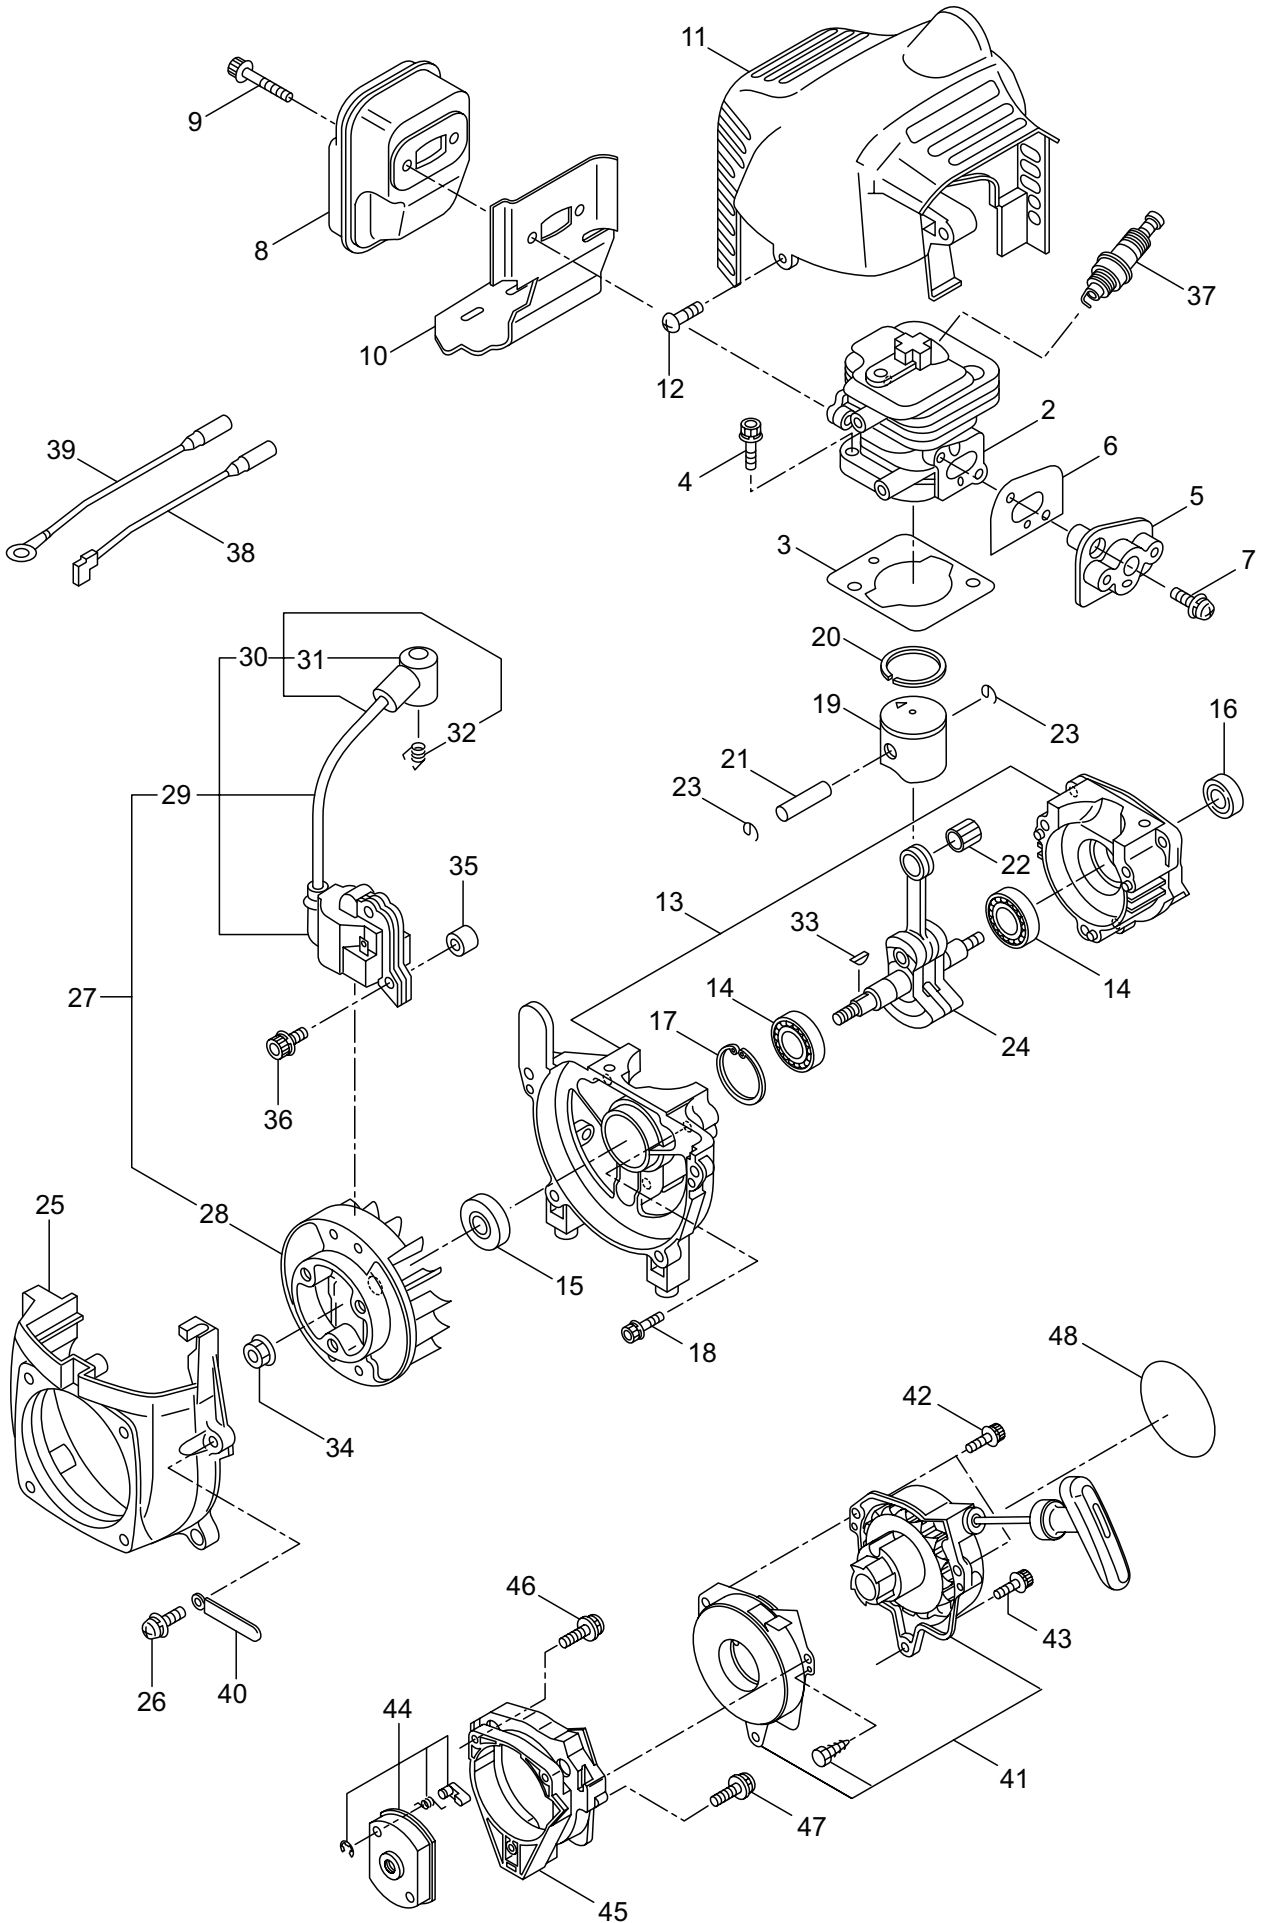




Ref. No.	Parts No.	Parts Name	Q'ty	Remarks
4-1	875094	Engine	1	EE230P/08
4-2	266249	Cylinder	1	New gasket required
4-3	283420	Gasket	1	
4-4	267290	Cap Screw	2	M5x20WSW
4-5	263772	Insulator	1	New gasket required
4-6	267049	Gasket	1	
4-7	269826	Screw	2	M5x25WSW
4-8	281524	Muffler	1	
4-9	266264	Cap Screw	2	M5x50
4-10	280409	Gasket	1	
4-11	284575	Top Cover	1	
4-12	280144	Screw	1	M4x16
4-13	273674	Crankcase	1	
4-14	280488	Bearing	2	6001 C3
4-15	261492	Oil Seal	1	
4-16	261386	Oil Seal	1	
4-17	055185	Snap Ring	1	#28
4-18	261612	Cap Screw	3	M5x30
4-19	281298	Piston	1	
4-20	263789	Piston Ring	1	
4-21	261036	Piston Pin	1	5.7x8x23.5L
4-22	288520	Bearing, Needle	1	
4-23	261576	Clip, Piston Pin	2	
4-24	267193	Crankshaft/Conn.Rod Ass'y	1	
4-25	283386	Fan Cover	1	
4-26	269831	Screw	4	M5x20WSW
4-27	283686	Magneto Ass'y	1	Incl.28-32
4-28	269324	Rotor/Fan	1	
4-29	280470	Ignition Coil Ass'y	1	Incl.30-32
4-30	280868	Spark Plug Wire Ass'y	1	Incl.31,32
4-31	280870	Plug Boot	1	
4-32	280871	Connector	1	
4-33	261076	Woodruff Key	1	3x10
4-34	261417	Nut, Rotor	1	M8
4-35	280381	Spacer	2	
4-36	261256	Cap Screw	2	M4x25
4-37	264652	Spark Plug	1	CJ8Y
4-38	267492	Wire, Lead	1	
4-39	282880	Wire, Lead	1	
4-40	264588	Clamp	1	
4-41	282697	Rewind Starter Ass'y	1	
4-42	281211	Screw	2	M4x20WSW
4-43	282096	Screw	1	M4x16
4-44	269764	Starter Pawl Ass'y	1	
4-45	282707	Adapter Ass'y	1	

# 4. PS15 STANDARD ENGINE

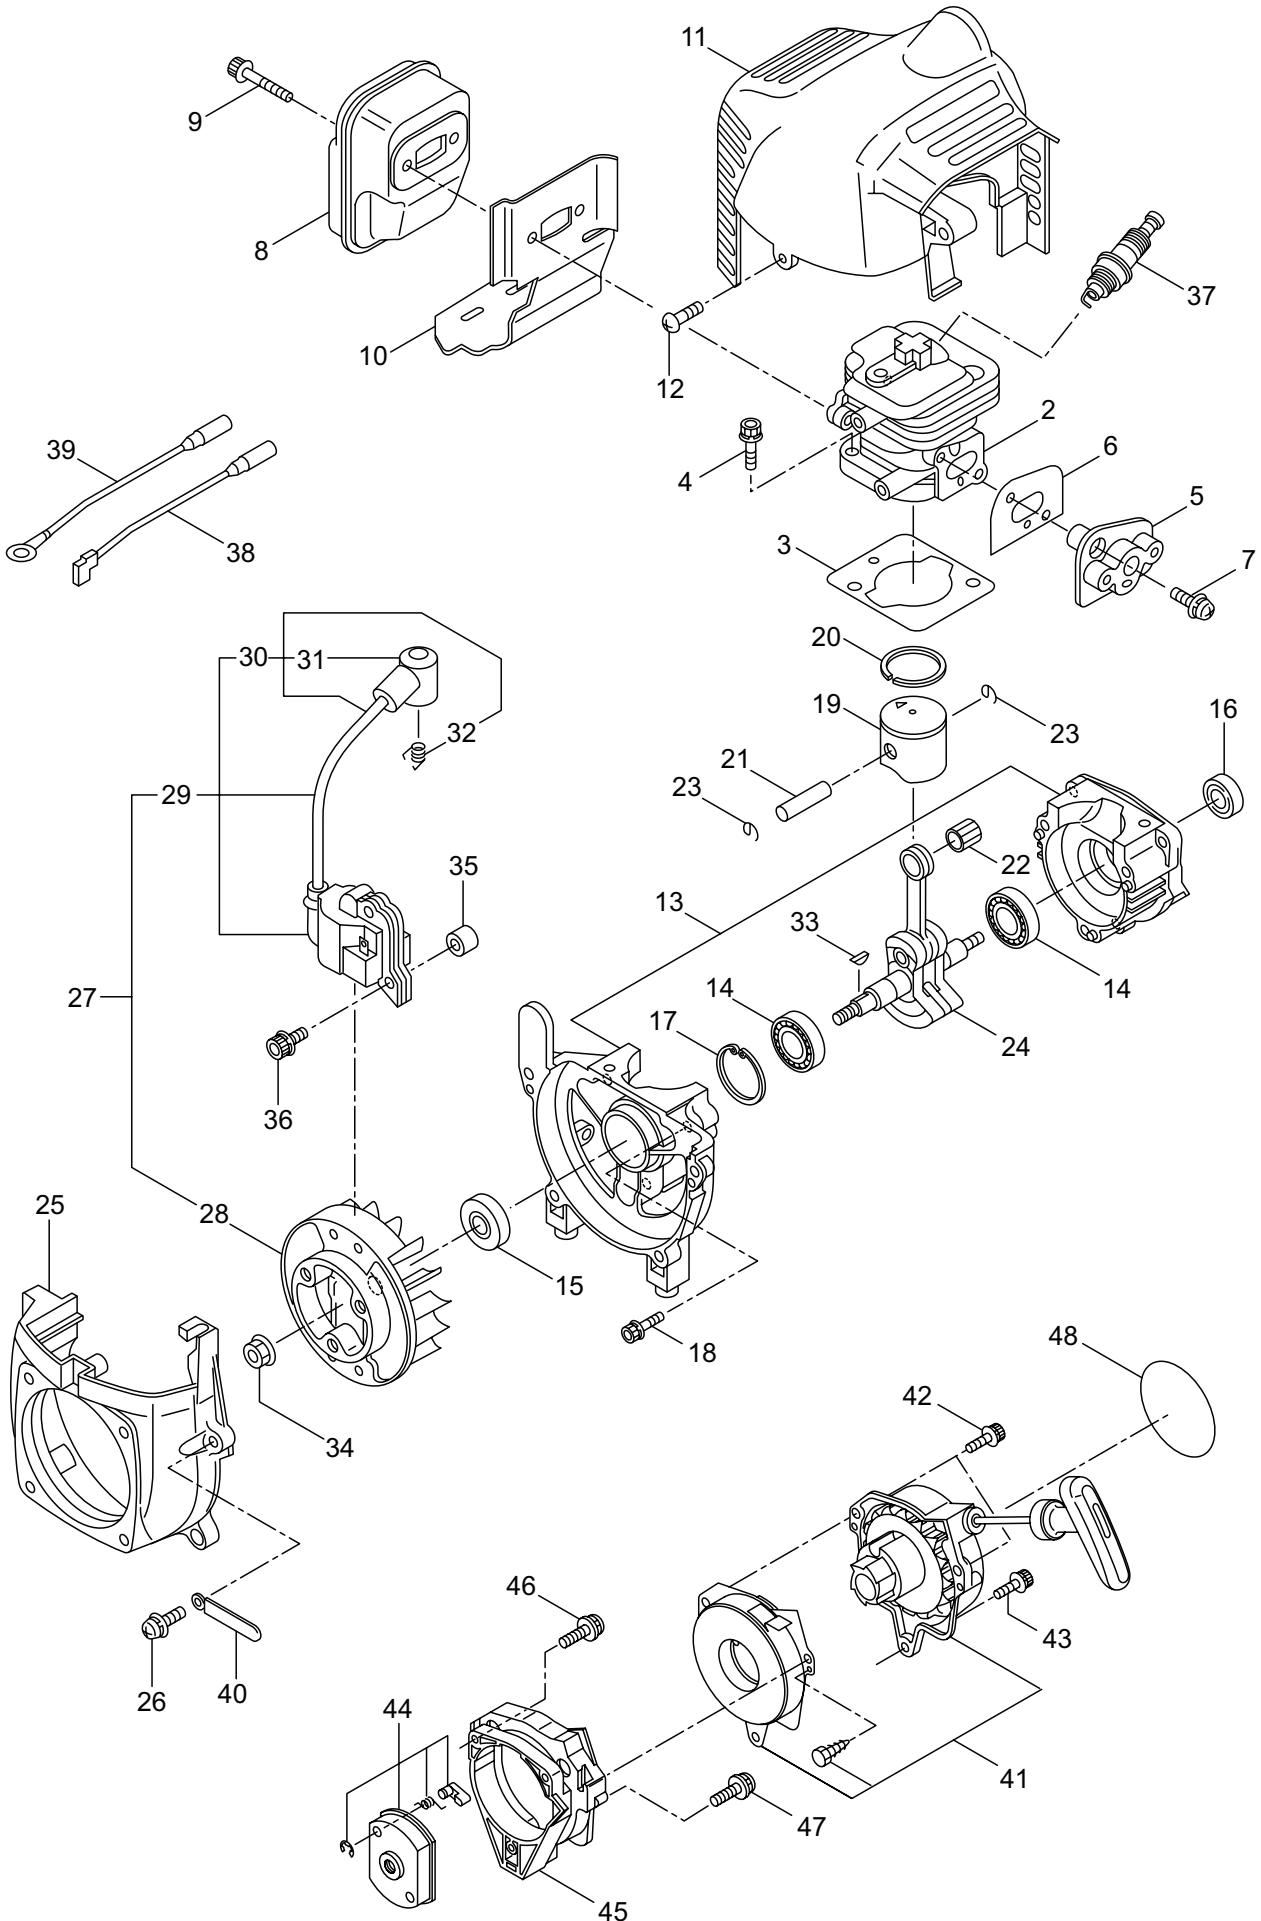



Ref. No.	Parts No.	Parts Name	Q'ty	Remarks
4-46	280489	Screw	2	M4x20WSW
4-47	269833	Screw	1	M4x16WSW
4-48	134441	Label	1	

# 5. PS15 STANDARD CARBURETOR, FUEL TANK

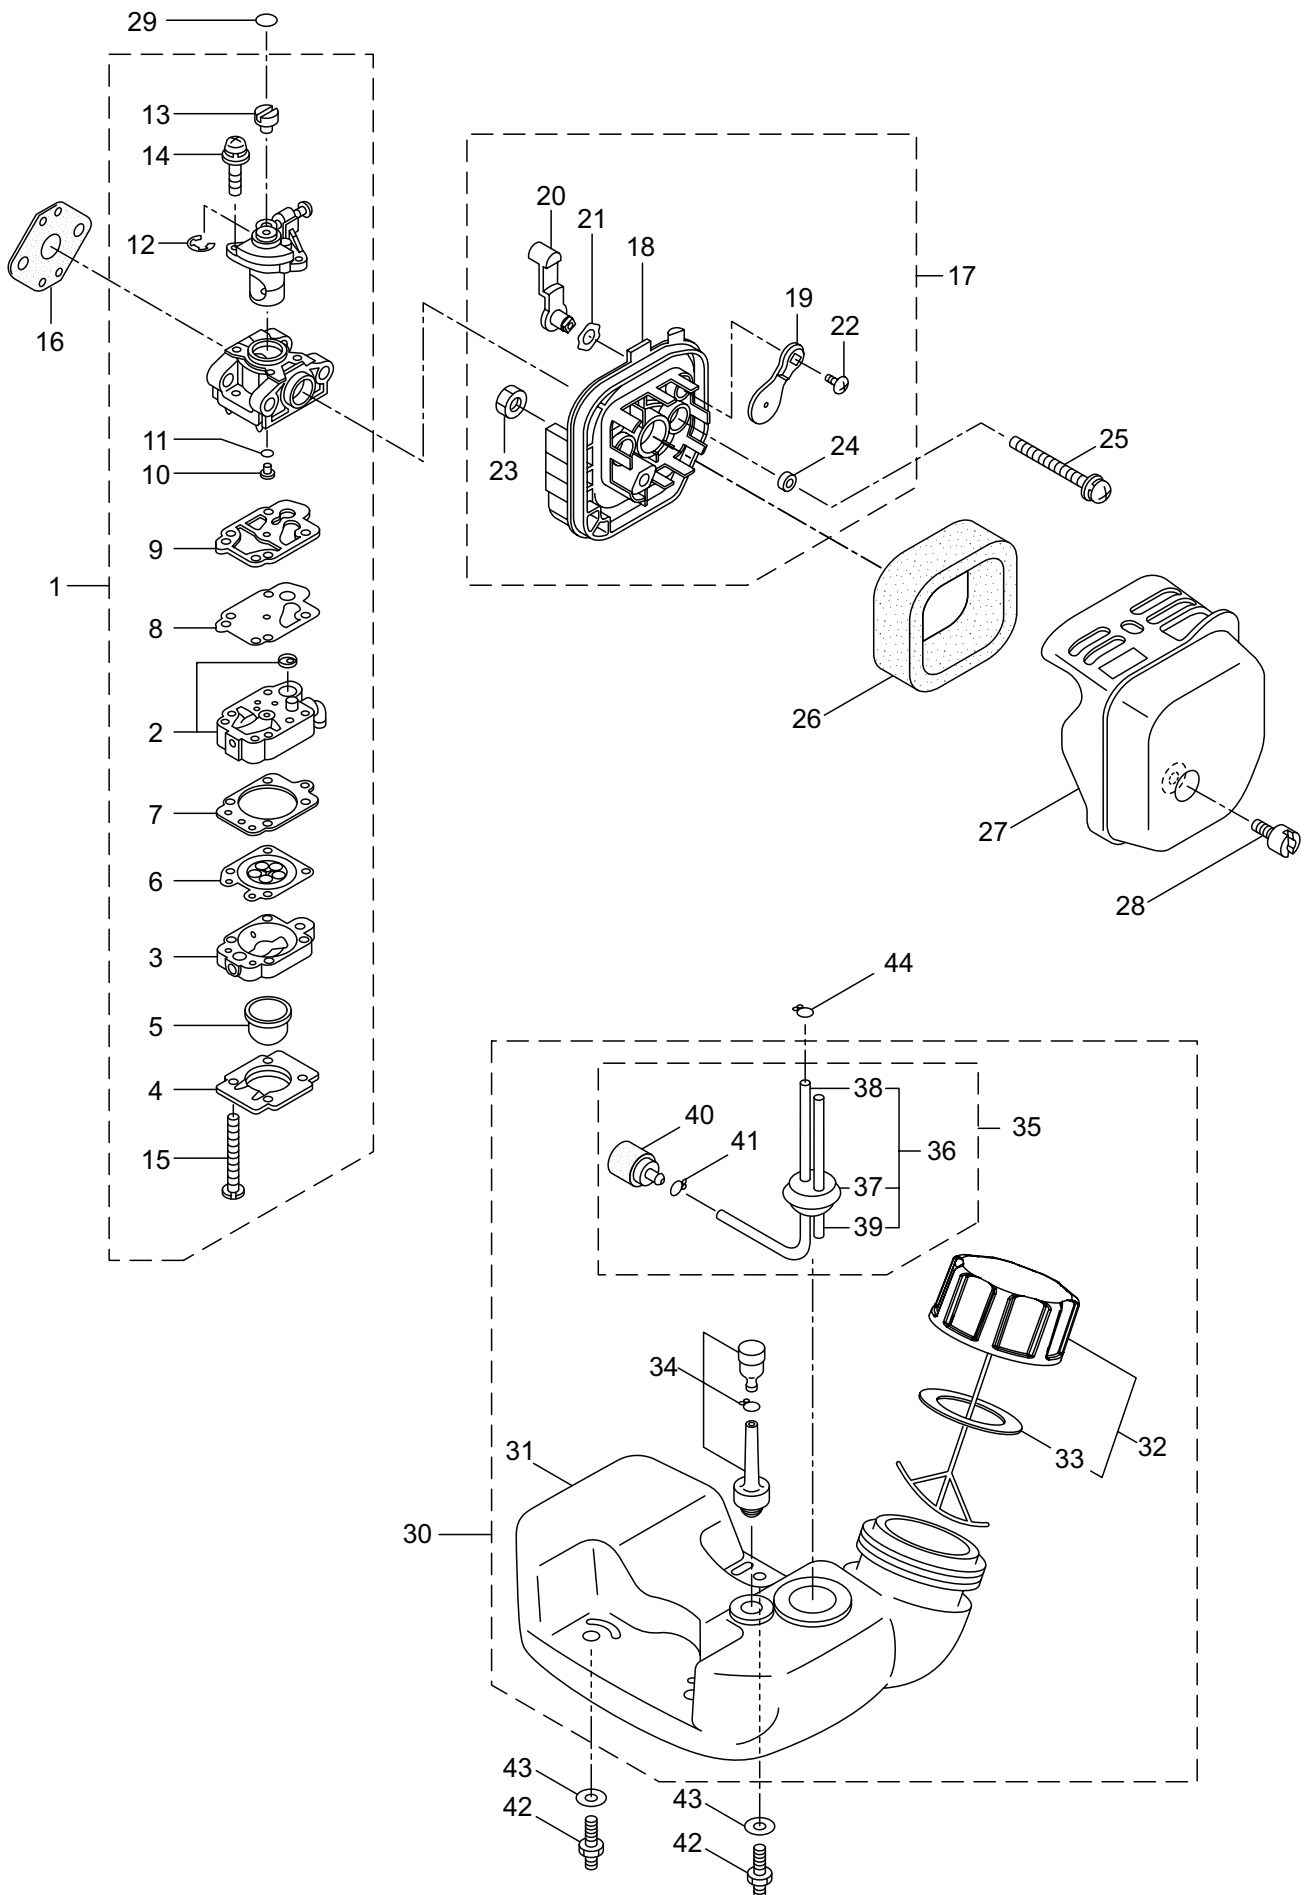

Ref. No.	Parts No.	Parts Name	Q'ty	Remarks
5-1	280101	Carburetor Ass'y	1	Incl.2-15
5-2	263739	Pump Body	1	
5-3	262991	Purge Body	1	
5-4	262992	Cover Plate	1	
5-5	261874	Primer Bulb	1	
5-6	283905	Diaphragm, Meterring	1	
5-7	262993	Gasket	1	
5-8	262994	Diaphragm, Fuel Pump	1	
5-9	282576	Gasket	1	
5-10	267358	Main Jet	1	
5-11	261871	O-Ring	1	
5-12	261876	E-Ring	1	
5-13	261658	Swivel	1	
5-14	264682	Screw	2	
5-15	262996	Screw	4	
5-16	261864	Gasket	1	
5-17	284823	Case Ass'y	1	Incl.18-24
5-18	269050	Case Body	1	
5-19	284802	Valve	1	
5-20	284803	Lever	1	
5-21	284816	Washer	1	6.4x11x0.15
5-22	269032	Screw	1	M3.5x8
5-23	126993	Nut	1	M5x0.8
5-24	269051	Sleeve	2	5.5x7.1x3
5-25	281777	Screw	2	M5x55WSW
5-26	269030	Element	1	
5-27	269027	Cleaner Cover	1	
5-28	269031	Screw	1	M5x12
5-29	280020	Swivel Ring	1	
5-30	283687	Fuel Tank Ass'y	1	Incl.31-41
5-31	282401	Fuel Tank	1	
5-32	275306	Fuel Tank Cap Ass'y	1	Incl.33
5-33	274875	Gasket	1	
5-34	261696	Breather Ass'y	1	
5-35	283299	Fuel Pipe Pick-up Ass'y	1	Incl.36-41
5-36	283300	Fuel Pipe Ass'y	1	Incl.37-39
5-37	261115	Grommet	1	
5-38	261690	Fuel Pipe	1	160L
5-39	283301	Return Pipe	1	135L
5-40	264653	Filter Ass'y	1	
5-41	261117	Clip	1	
5-42	283443	Screw	3	M5
5-43	283688	Washer	3	5.5x12x1.6
5-44	261117	Clip	1	

## 6. PS15 STANDARD ACCESSORIES

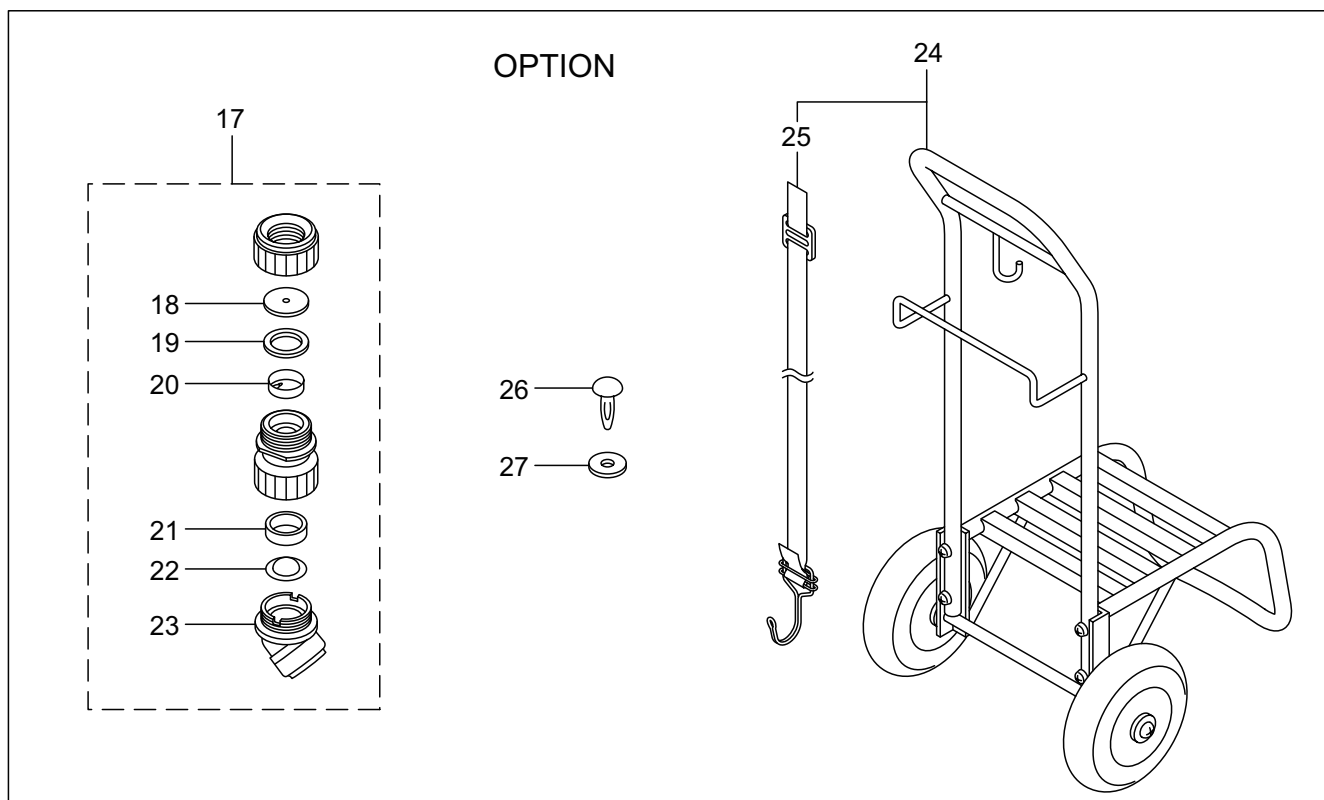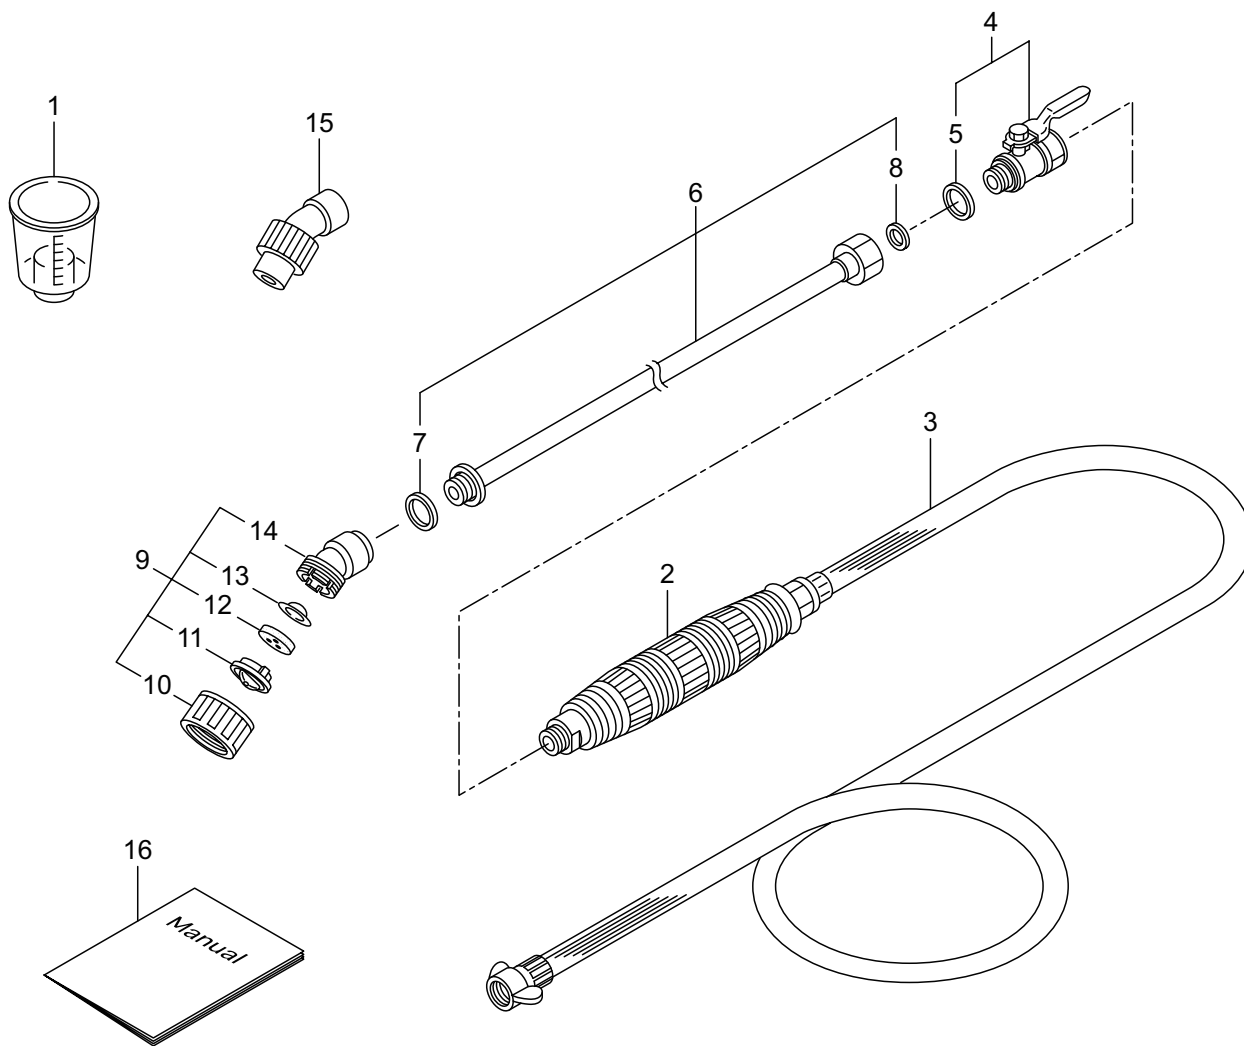

Ref. No.	Parts No.	Parts Name	Q'ty	Remarks
6-1	127197	Measure Cup	1	
6-2	129900	Grip Ass'y	1	
6-3	117234	Hose Ass'y	1	7.5x1300L
6-4	179946	Ball Cock Ass'y	1	Incl.5
6-5	181828	Packing	1	10x16x2
6-6	130713	Nozzle Pipe Ass'y	1	Incl.7,8
6-7	112850	Packing	1	11.5x15.5xt1.5
6-8	112851	Packing	1	7x11xt1.5
6-9	112866	Wide Nozzle Ass'y	1	Incl.10-14
6-10	112843	Cap	1	
6-11	112867	Nozzle Plate	1	
6-12	112846	Packing	1	
6-13	112845	Strainer	1	
6-14	112868	Body	1	
6-15	127273	Nozzle Ass'y	1	
6-16	134448	Instruction Manual	1	
		OPTION		
6-17	401764	ECO-Shower Nozzle Ass'y	1	Incl.18-23
6-18	404996	Orifice	1	
6-19	994431	Packing	1	
6-20	141663	Core	1	
6-21	996076	Packing	1	
6-22	624233	Strainer	1	
6-23	625313	Elbow	1	
6-24	127134	Cart Ass'y	1	Incl.25
6-25	127137	Band	1	
6-26	131310	Clip	2	
6-27	106352	Packing	2	5.5x16x1.5t