


GXV390T1(DN5)


E-11 RECOIL STARTER

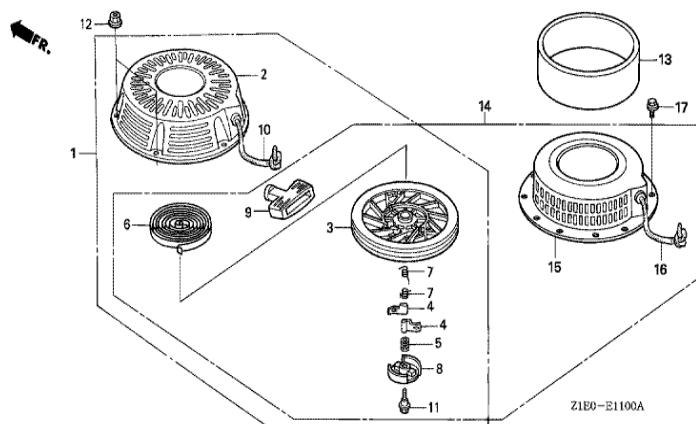

Ссылка	Номер запасной части	Описание	GXV390T1	Серийные номера
001	28400-ZE3-W02ZP	STARTER ASSY., RECOIL *R280*	1	
002	28410-ZE3-W01ZP	CASE COMP., RECOIL STARTER *R280 *	1	
003	28421-ZE3-W01	PULLEY, RECOIL STARTER	1	
004	28422-ZE2-W01	RATCHET, STARTER	2	
005	28441-ZE2-W01	SPRING, FRICTION	1	
006	28442-ZE2-W01	SPRING, STARTER RETURN	1	
007	28443-ZE2-W01	SPRING, RATCHET	2	
008	28444-ZE2-W01	RETAINER, SPRING	1	
009	28461-ZE2-W03	GRIP, STARTER	1	
010	28462-ZE3-W01	ROPE, RECOIL STARTER	1	
011	90004-ZE2-W01	SCREW, CENTER	1	
012	94050-06000	NUT, FLANGE, 6MM	4	

GXV390T1(DN5)

E-12 FAN COVER (1)

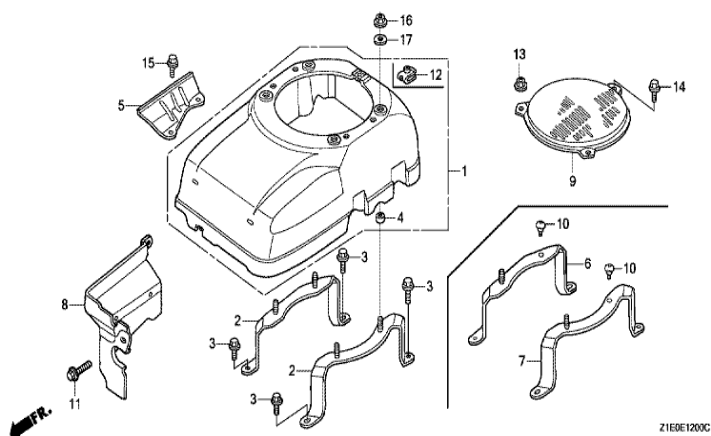


Z1E0E1200C

<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
001	19610-ZF5-V21ZC	COVER COMP., FAN *R280 *	1	
002	19617-ZF5-V01	BRACKET, FAN COVER	2	2000001
003	90029-888-000	BOLT, FLANGE, 6X16 (CT200)	4	
004	91501-ZF5-V00	COLLAR, FAN COVER	4	
005	19612-ZF5-010	PLATE, SIDE	1	
015	95701-0802008	BOLT, FLANGE, 8X20	2	

GXV390T1(DN5)

E-14 CARBURETOR (1)

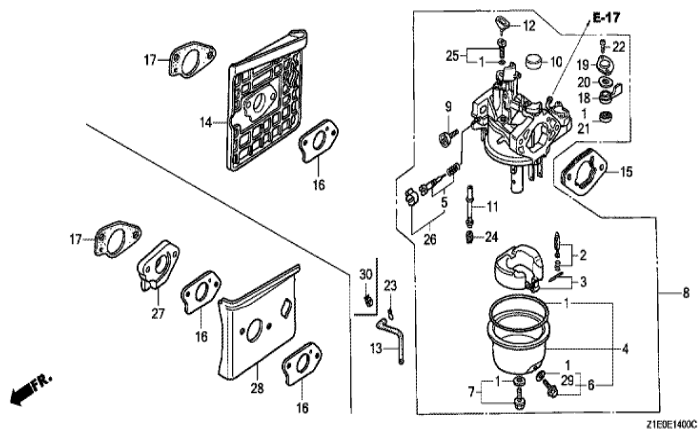


Z1E8E1400C

Ссылка	Номер запасной части	Описание	GXV390T1	Серийные номера
001	16010-ZE2-015	GASKET SET	1	
002	16011-ZA0-931	VALVE SET, FLOAT	1	
003	16013-Z1C-003	FLOAT SET	1	
004	16015-ZE8-005	CHAMBER SET, FLOAT	1	
006	16024-ZE1-811	SCREW SET, DRAIN	1	
007	16028-ZE0-005	SCREW SET	1	
008	16100-Z1E-WA1	CARBURETOR ASSY. (BE81R A)	1	2000650
009	16124-ZE0-005	SCREW, THROTTLE STOP	1	
010	16148-141-881	CAP, CHOKE DUST	1	
011	16166-Z5V-WA1	NOZZLE, MAIN	1	BE81R A
012	16172-ZE3-W10	COLLAR, SETTING	1	
013	16199-ZE8-000	TUBE, AIR VENT (75MM)	1	
014	16211-Z5V-900	INSULATOR, CARBURETOR	1	2000222

<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
015	16220-ZA0-702	SPACER COMP, CARBURETOR	1	
016	16221-Z8T-000	PACKING, CARBURETOR	1	2000222
017	16223-ZE9-800	PACKING, INSULATOR	1	
018	16953-ZE1-712	LEVER, COCK	1	
019	16954-ZE1-812	PLATE, LEVER SETTING	1	
020	16956-ZE1-811	SPRING, COCK LEVER	1	
021	16957-ZE1-812	PACKING, FUEL COCK	1	
022	93500-030061H	SCREW, PAN, 3X6	2	
023	95002-02080	CLIP, TUBE (B8)	1	
024	99101-ZH80950	JET, MAIN, #95	(1)	BE81R A
024	99101-ZH80980	JET, MAIN, #98	(1)	BE81R A
024	99101-ZH81000	JET, MAIN, #100	1	BE81R A
025	99204-ZE00450	JET SET, PILOT, #45	1	BE81R A
026	16016-Z5V-WA1	SCREW SET	1	BE81R A
029	16141-Z0S-003	WASHER, PLAIN (6.2X10.7 DRAIN)	2	

GXV390T1(DN5)

E-15 AIR CLEANER (1)

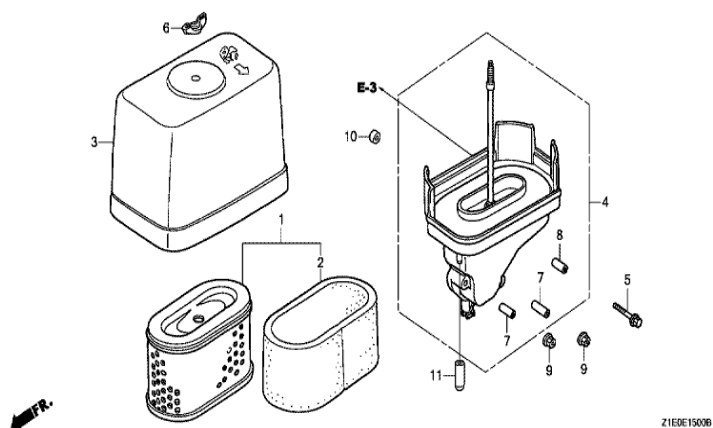


Z1E0E1500B

<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
001	17210-Z1E-801	ELEMENT COMP, AIR CLEANER	1	
003	17231-ZF5-V00	COVER, AIR CLEANER	1	
004	17410-Z1E-802	ELBOW COMP, AIR CLEANER	1	
005	90014-ZE6-000	BOLT, FLANGE, 6X35 (CT200)	1	
006	90325-044-000	NUT, TOOL BOX SETTING	1	
007	91502-ZF5-V00	COLLAR, AIR CLEANER	2	
008	91503-ZF5-V00	COLLAR, AIR CLEANER	1	
009	94050-06000	NUT, FLANGE, 6MM	2	

GXV390T1(DN5)

E-16 MUFFLER

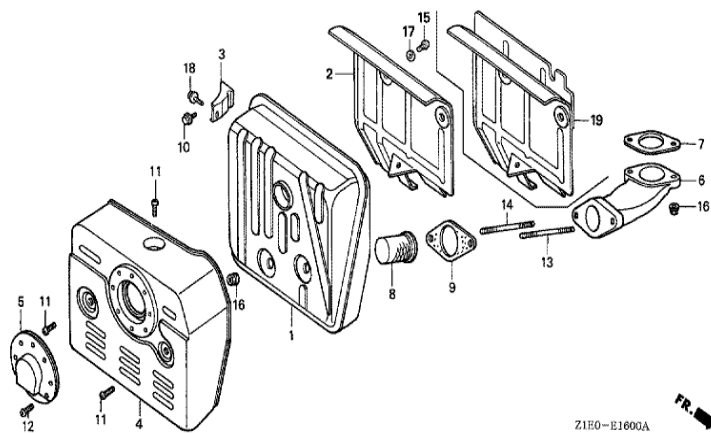

Z1E0-E1600A




<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
001	18310-Z1E-010	MUFFLER COMP.	1	
002	18316-ZF5-V01	SEPARATOR, MUFFLER	1	2000001
003	18318-ZE8-000	STAY COMP., MUFFLER	1	
004	18321-ZF5-010	PROTECTOR, MUFFLER	1	
006	18331-ZF5-000	PIPE, EX.	1	
007	18333-Z1C-801	GASKET, EX. PIPE	1	
009	18382-Z1F-801	GASKET, EX. PIPE	1	
010	90031-883-000	BOLT, FLANGE, 8X16	1	
011	90050-ZE1-000	SCREW, TAPPING, 5X8	3	
013	92900-080601B	BOLT, STUD, 8X60	1	
014	92900-080701B	BOLT, STUD, 8X70	1	
015	93500-060060A	SCREW, PAN, 6X6	3	
016	94050-08000	NUT, FLANGE, 8MM	4	

<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
017	94101-06000	WASHER, PLAIN, 6MM	3	
018	95701-0801400	BOLT, FLANGE, 8X14	1	

GXV390T1(DN5)

E-17 FUEL TANK

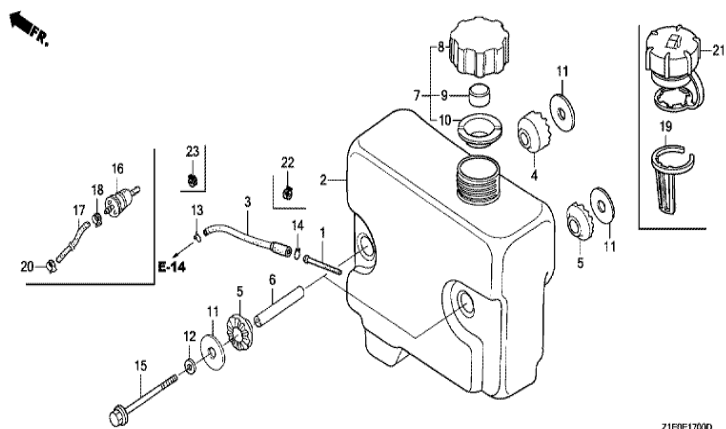

Z1E0E17000


<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
001	16952-ZE6-000	STRAINER, FUEL	1	
002	17510-ZE9-000	TANK, FUEL	1	
003	17512-ZE9-000	TUBE, FUEL	1	
004	17516-ZE8-000	RUBBER B, TANK MOUNTING	1	
005	17516-896-700	RUBBER B, TANK MOUNTING	3	
006	17518-ZE8-000	COLLAR, TANK SETTING	2	
007	17620-ZE7-000	CAP ASSY., FUEL TANK	1	
008	17621-ZE6-000	BODY, FUEL CAP	1	
009	17622-888-010	SPONGE, FUEL CAP BREATHER	1	
010	17624-ZE7-000	PACKING, FUEL CAP	1	
011	90455-896-700	WASHER, TANK MOUNTING	4	
012	90471-SB0-000	WASHER, PLAIN, 8MM	2	
013	95002-02080	CLIP, TUBE (B8)	1	



<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
014	95002-70000	CLIP, TUBE (C11)	1	
015	95701-0809500	BOLT, FLANGE, 8X95	2	

GXV390T1(DN5)


E-19 FLYWHEEL

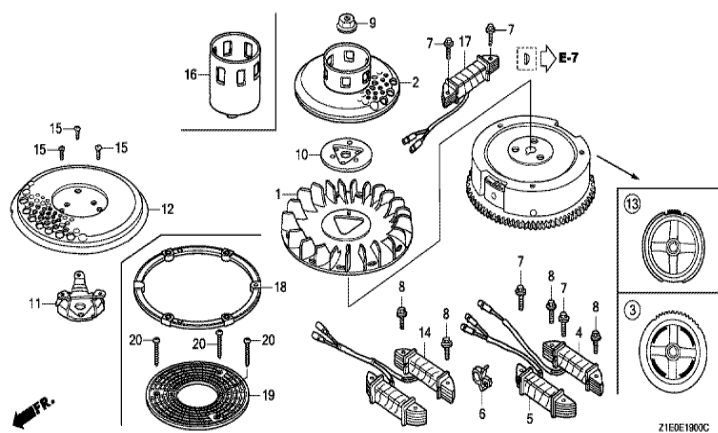

Ссылка	Номер запасной части	Описание	GXV390T1	Серийные номера
001	19511-ZE9-020	FAN, COOLING	1	2000001
009	90201-ZE3-790	NUT, SPECIAL, 16MM	1	
009	90201-ZE3-V00	NUT, SPECIAL, 16MM	1	1052037
013	31100-ZE9-020	FLYWHEEL COMP.	1	
016	28451-ZE3-W01	PULLEY, STARTER	1	2000222
018	28405-Z5V-900ZA	SPACER, RECOIL STARTER MOUNTING *	1	2000222
019	28452-Z5V-900	GRID, SCREEN	1	2000222
020	93913-24780	SCREW, TAPPING, 4X30 (PO)	3	2000222

GXV390T1(DN5)

E-2 CYLINDER HEAD

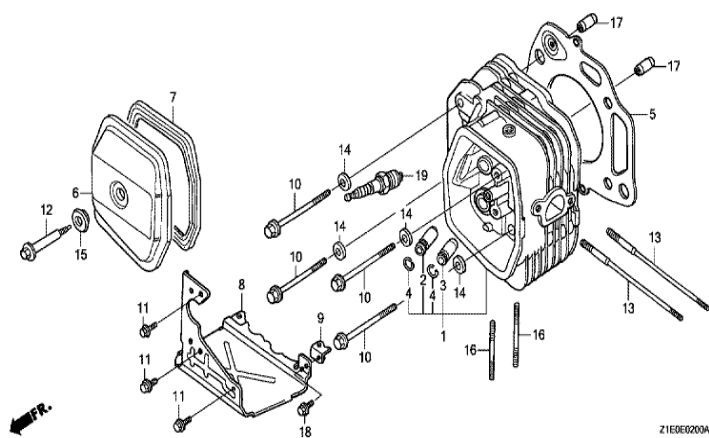


Z1E0E0200A

<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
001	12200-Z1E-405	HEAD COMP., CYLINDER	1	
002	12204-ZE2-306	GUIDE, IN. VALVE (O.S.)	1	
003	12205-ZE2-305	GUIDE, EX. VALVE (O.S.)	1	
004	12216-ZE2-300	CLIP, VALVE GUIDE	2	
005	12251-ZF5-H03	GASKET, CYLINDER HEAD	1	
006	12310-ZE8-000	COVER, HEAD	1	
007	12391-ZE8-000	PACKING, HEAD COVER	1	
008	18345-ZF5-030	COVER, UNDER	1	2000001
009	18347-ZE8-000	STAY COMP., UNDER COVER	1	
010	90003-Z1E-000	BOLT, FLANGE, 10X85	4	
011	90013-883-000	BOLT, FLANGE, 6X12 (CT200)	2	2000222
012	90014-ZE8-000	BOLT, HEAD COVER	1	
013	90042-ZE8-000	BOLT, STUD, 8X131.5	2	

<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
014	90401-437-000	WASHER, PLAIN, 10MM	4	
015	90441-ZE2-010	WASHER COMP, HEAD COVER	1	
016	92900-080320B	BOLT, STUD, 8X32	2	
017	94301-12200	DOWEL PIN, 12X20	2	
018	95701-0601200	BOLT, FLANGE, 6X12	1	
019	98079-55876	PLUG, SPARK (BPR5ES) (NGK)	1	

GXV390T1(DN5)

E-20 IGNITION COIL

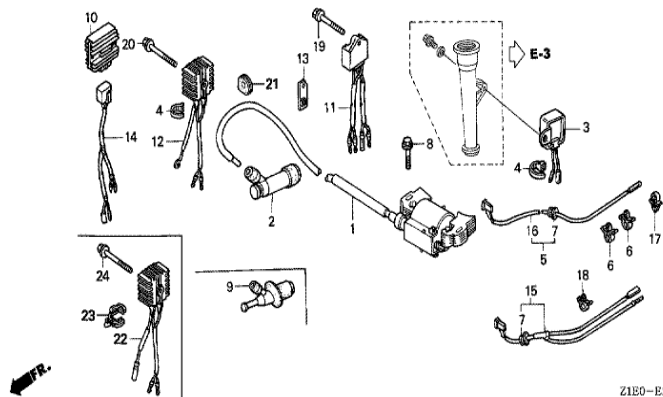


Z1E0-E2000B

<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
001	30500-Z1E-023	COIL ASSY., IGNITION	1	
001	30500-Z1E-801	COIL ASSY., IGNITION	1	1048184
002	30700-ZF5-013	CAP ASSY., NOISE SUPPRESSOR	1	
005	36101-ZE8-000	CORD, STOP SWITCH	1	
006	46391-VM0-003	CLIP, BRAKE PIPE (A)	2	
007	80101-166-000	GROMMET, WIRE CORD	1	
008	90015-883-000	BOLT, FLANGE, 6X28 (CT200)	2	

GXV390T1(DN5)

E-22 CONTROL (1)

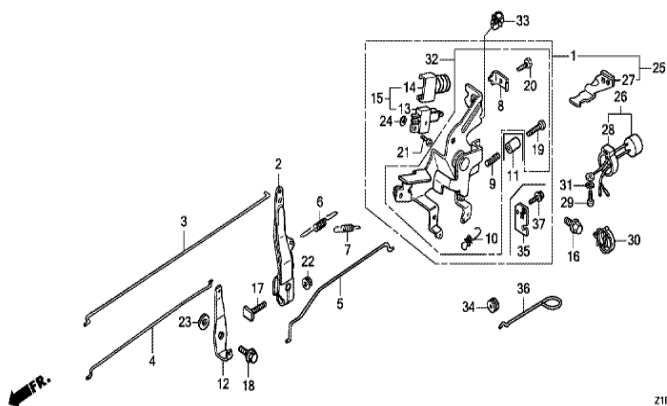


Z1E0E2200D

<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
001	16500-ZF5-821	CONTROL ASSY.	1	
002	16551-ZF5-000	ARM, GOVERNOR	1	
003	16555-ZE9-000	ROD, GOVERNOR	1	
004	16556-ZE9-000	ROD, CHOKE	1	
005	16557-ZE8-810	ROD, JOINT	1	
006	16561-ZF5-000	SPRING, GOVERNOR	1	
007	16563-ZE8-000	SPRING, GOVERNOR PRIMARY	1	
007	16563-ZE8-010	SPRING, GOVERNOR PRIMARY	1	
008	16576-891-000	HOLDER, CABLE	1	
009	16584-883-300	SPRING, CONTROL ADJUSTING	1	
010	16592-732-700	SPRING, CABLE RETURN	1	
011	16599-ZG1-M10	COLLAR, STOPPER	1	
012	16619-ZF5-000	LEVER, CHOKE JOINT	1	

<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
013	35330-ZG1-751	SWITCH ASSY., ENGINE	1	
014	35336-750-003	COVER, SWITCH	1	
015	36100-ZE8-003	SWITCH ASSY., ENGINE STOP	1	
016	90013-883-000	BOLT, FLANGE, 6X12 (CT200)	1	
017	90015-Z5T-000	BOLT, GOVERNOR ARM	1	1021948
018	90015-ZE8-000	BOLT, FLANGE, 6MM	1	
019	90016-ZF5-W40	SCREW, RECESSED, 5X20	1	
020	92301-050141A	BOLT, RECESSED, 5X14	1	
021	93500-040140A	SCREW, PAN, 4X14	1	
022	94050-06000	NUT, FLANGE, 6MM	1	
023	94101-06800	WASHER, PLAIN, 6MM	1	
024	94111-04000	WASHER, SPRING, 4MM	1	

GXV390T1(DN5)

E-28 LABEL/TOOL

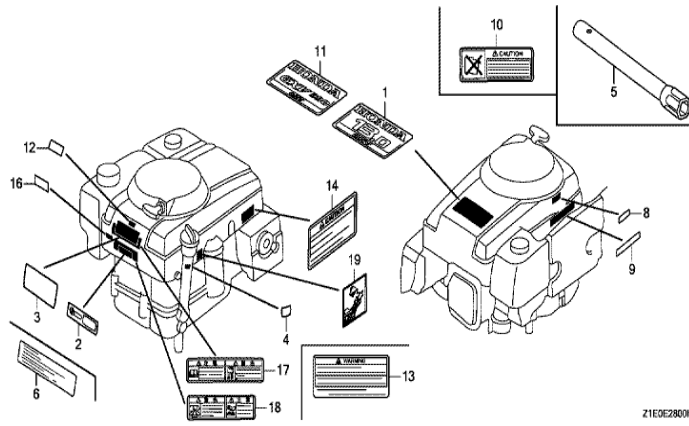


Z1E0E2800H

Ссылка	Номер запасной части	Описание	GXV390T1	Серийные номера
003	87519-Z4H-000	MARK, OPERATOR CAUTION (PICTOGRAPH)	1	
004	87601-Z1F-830	MARK, TYPE (DN5)	1	
011	87101-ZF5-V02	EMBLEM, TOP COVER (GXV390)	1	
016	87114-ZH7-000	LABEL, WARNING (NOT CERTIFIED FOR SALE)	1	1065634 2000649



GXV390T1(DN5)

E-3 CYLINDER BARREL/OIL PAN

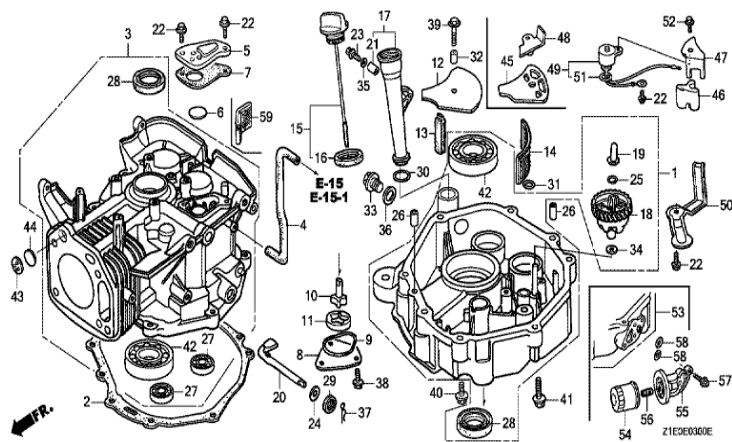


<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
001	11300-Z1E-407	PAN ASSY., OIL	1	
002	11381-ZE9-801	PACKING, OIL PAN	1	
003	12000-Z1E-415	BARREL ASSY., CYLINDER	1	2000001
004	12315-ZF5-000	TUBE, BREATHER	1	
005	12370-ZF5-000	CAP, BREATHER CHAMBER	1	
006	12372-ZE2-300	VALVE, BREATHER	1	
007	12373-ZE8-000	PACKING, BREATHER CAP	1	
008	15130-ZE8-000	COVER, OIL PUMP	1	
009	15131-ZE9-003	O-RING, PUMP COVER	1	
010	15330-ZE8-000	ROTOR COMP., INNER	1	
011	15332-891-003	ROTOR, OIL PUMP OUTER	1	
012	15334-ZE8-010	PLATE, OIL FILTER	1	
013	15335-ZE9-000	RUBBER, OIL RETURN	1	

<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
014	15421-ZE9-003	SCREEN, OIL FILTER	1	
015	15600-Z5N-800	CAP ASSY., OIL FILLER	1	
016	15625-ZE8-000	PACKING, OIL FILLER CAP	1	
017	15630-Z5N-800	EXTENSION COMP., OIL FILLER	1	
018	16510-ZE3-000	GOVERNOR ASSY.	1	
019	16531-Z0A-000	SLIDER, GOVERNOR	1	
020	16541-ZE8-010	SHAFT, GOVERNOR ARM	1	
021	17240-ZE6-000	COLLAR, EXTENSION	1	
022	90013-883-000	BOLT, FLANGE, 6X12 (CT200)	2	
023	90014-ZE6-000	BOLT, FLANGE, 6X35 (CT200)	1	
024	90406-VM6-000	WASHER, THRUST, 8.1MM	1	
025	90602-ZE1-000	CLIP, GOVERNOR HOLDER	1	
026	90701-HC4-000	DOWEL PIN, 8X12	2	
027	91001-ZF5-003	BEARING, RADIAL BALL, 6202	2	
028	91201-Z1C-003	OIL SEAL, 35X52X8 (NOK)	2	
029	91203-952-771	OIL SEAL, 8X14X5	1	
030	91301-ZE9-003	O-RING, 22.1X2.2	1	
031	91302-ZE9-003	O-RING, 11.8X2.4	1	
032	91501-ZF5-000	COLLAR, OIL FILTER SETTING	1	
033	92800-20000	BOLT, DRAIN PLUG, 20MM	1	
034	94101-06800	WASHER, PLAIN, 6MM	1	
035	94103-06700	WASHER, PLAIN, 6MM	1	
036	94109-20000	WASHER, DRAIN PLUG, 20MM	1	
037	94251-10000	PIN, LOCK, 10MM	1	
038	95701-0601200	BOLT, FLANGE, 6X12	3	
039	95701-0602500	BOLT, FLANGE, 6X25	1	
040	95701-0804008	BOLT, FLANGE, 8X40	6	
041	95701-0806008	BOLT, FLANGE, 8X60	1	
042	96100-6207300	BEARING, RADIAL BALL, 6207	2	
059	15427-Z5V-900	MESH, BREATHER	1	2000222

GXV390T1(DN5)

E-40-1 OTHER PARTS

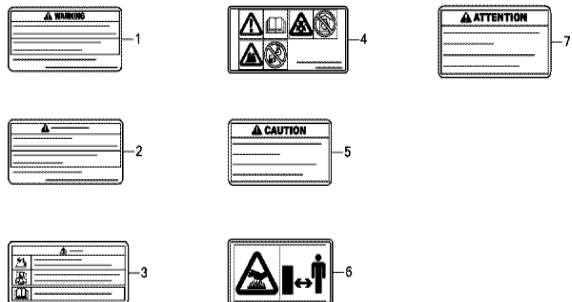


Z1E0E4001

<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
002	87516-Z4H-801	MARK, OPERATOR CAUTION (FRENCH) (MADE IN	1	2000652
003	87516-Z0S-810	MARK, OPERATOR CAUTION	1	2000651

GXV390T1(DN5)

E-7 CRANKSHAFT

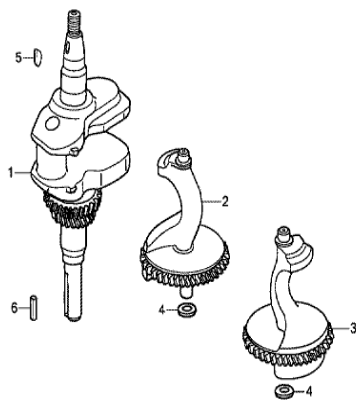


Z1E6E0700A

<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
001	13310-ZF5-040	CRANKSHAFT COMP.	1	
002	13351-ZF5-030	WEIGHT A, BALANCER	1	
003	13356-ZF5-040	WEIGHT B, BALANCER	1	
004	90417-HA0-000	WASHER, THRUST, 15MM	2	
005	90741-ZE2-000	KEY, SPECIAL WOODRUFF, 25X18	1	

GXV390T1(DN5)

E-8 PISTON/CONNECTING ROD

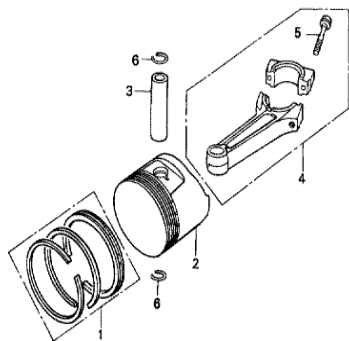


Z1E0-E0800

Ссылка	Номер запасной части	Описание	GXV390T1	Серийные номера
001	13010-Z7E-931	RING SET, PISTON (STD.) (TPR)	1	2000650
001	13011-Z7E-931	RING SET, PISTON (0.25) (TPR)	(1)	2000650
001	13012-Z7E-931	RING SET, PISTON (0.50) (TPR)	(1)	2000650
001	13013-Z7E-931	RING SET, PISTON (0.75) (TPR)	(1)	2000650
002	13101-Z5T-010	PISTON (STD.)	1	2000001
002	13102-Z5T-010	PISTON (0.25)	(1)	2000001
002	13103-Z5T-010	PISTON (0.50)	(1)	2000001
002	13104-Z5T-010	PISTON (0.75)	(1)	2000001
003	13111-ZF6-000	PIN, PISTON	1	
004	13200-Z1E-000	ROD ASSY., CONNECTING (STD.)	1	
004	13200-Z1E-305	ROD ASSY., CONNECTING (0.25 UNDER SIZE)	(1)	
005	90001-ZE8-000	BOLT, CONNECTING ROD	2	
006	90601-ZE3-000	CLIP, PISTON PIN, 20MM	2	

GXV390T1(DN5)

E-9 CAMSHAFT

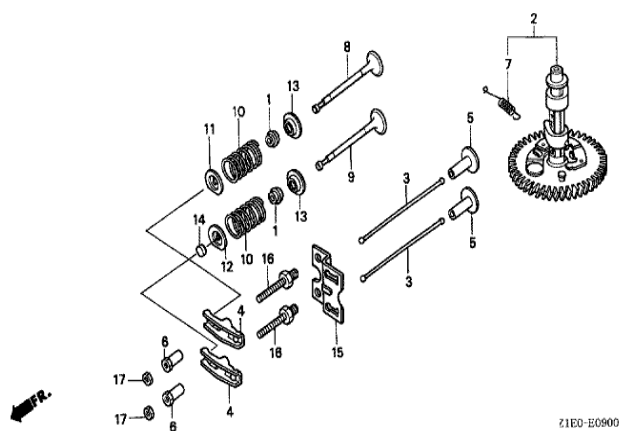

Z1E0-E0900

<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
001	12209-ZE8-003	SEAL, VALVE STEM	2	
002	14100-ZF5-020	CAMSHAFT ASSY.	1	
003	14410-Z1C-000	ROD, PUSH	2	
004	14431-ZE2-010	ARM, VALVE ROCKER	2	
005	14441-ZE2-000	LIFTER, VALVE	2	
006	14451-Z4M-000	PIVOT, ROCKER ARM	2	1039825
007	14568-ZE1-000	SPRING, WEIGHT RETURN	1	
008	14711-ZE3-000	VALVE, IN.	1	
009	14721-ZE3-000	VALVE, EX.	1	
010	14751-Z1C-000	SPRING, VALVE	2	
011	14771-Z8S-000	RETAINER, IN. VALVE SPRING	1	1016073
012	14773-Z8S-000	RETAINER, EX. VALVE SPRING	1	1016073
013	14775-ZE2-010	SEAT, VALVE SPRING	2	

<u>Ссылка</u>	<u>Номер запасной части</u>	<u>Описание</u>	<u>GXV390T1</u>	<u>Серийные номера</u>
014	14781-ZE2-000	ROTATOR, VALVE	1	
015	14791-ZE9-010	GUIDE, PUSH ROD	1	
016	90012-ZE0-010	BOLT, PIVOT, 8MM	2	
017	90206-ZE1-000	NUT, PIVOT ADJUSTING	2	